


KV-A2123E/A2523E/A2923E

RM-816

SERVICE MANUAL

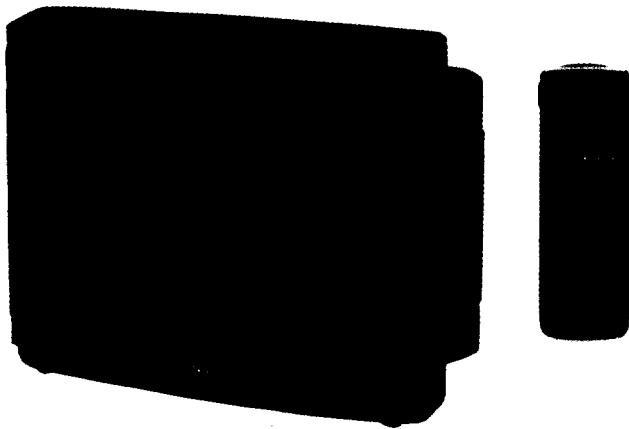

Spanish Model

KV-A 2123 E

Chassis No. SCC-E22X-A

KV-A2523 E

Chassis No. SCC-F12A-A

KV-A 2923 E

Chassis No. SCC-E22Y-A

AE-1C CHASSIS

MODELS OF THE SAME SERIES

KV-A2123E/A2523E/A2923E

KV-A2113E/A2513E

KV-C2523E/C2533E

【KV-A2123E/A2523E/A2923E】

SPECIFICATIONS

Television system	B/G/H	Outputs	21-pin connector: CENELEC standard
Color system	PAL, SECAM, NTSC3.58, NTSC4.43		Headphones jack: stereo minijack
Stereo system	GERMAN/NICAM stereo		External speaker terminals: 2-pin DIN
Channel coverage	B/G/H		Audio output jacks: phono jack
	VHF: E2-E12 UHF: E21-E69		(output dependent upon TV settings)
	CABLE TV (1) : S1-S41	Sound output	30 W + 30 W
	CABLE TV (2) : S01-S05, M1-M10, U1-U10	Power consumption	92 Wh (KV-A2123 E)
Picture tube	Hi-Black Trinitron tube		110 Wh (KV-A2523 E)
	Approx. 54.5 cm (21 inches)		112 Wh (KV-A2923 E)
	(Approx. 51 cm picture measured diagonally)	Dimensions incl. speakers	Approx. 615×439×448 mm (w/h/d)
	100° -degree deflection		(KV-A2123 E)
	Approx. 63.5 cm (25 inches)		Approx. 677×501×481 mm (w/h/d)
	(Approx. 59 cm picture measured diagonally)		(KV-A2523 E)
	110° -degree deflection		Approx. 761×568×512 mm (w/h/d)
	Approx. 72.4 cm (29 inches)		(KV-A2923 E)
	(Approx. 68 cm picture measured diagonally)	Weight incl. speakers	Approx. 28kg (KV-A2123 E)
	110° -degree deflection		Approx. 40kg (KV-A2523 E)
Inputs	Ⓔ 1 21-pin connector:		Approx. 55kg (KV-A2923 E)
	CENELEC standard including RGB input.		
	Ⓔ 2 21-pin connector:		
	including S video input		
	Flont : Ⓔ 3 Audio and video input jacks:		
	phono jack.		
	Including S Video input		
	Y: 1Vp-p ±3dB 75ohm		
	C: 0.3Vp-p ±3dB 75ohm		

-Continued on next page-





TRINITRON® COLOR TV
SONY®

[RM-816]

Remote control system infrared control
Power requirements 3 V dc
 2 batteries IEC designation
 R 6 (size AA)
Dimensions Approx.75×221×23 mm (w/h/d)
Weight Approx.230 g (including Batteries)

Design and specifications are subject to change without notice.

21 pin connector (—, —)

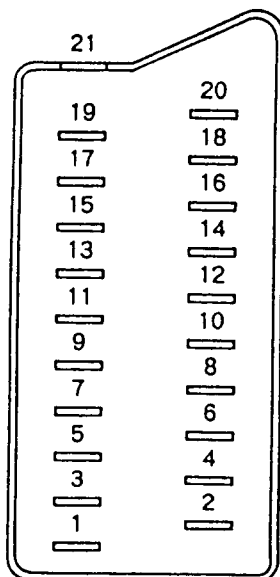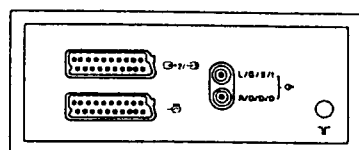

Pin No.	1	2	Signal	Signal level
1	○	○	Audio output B (right)	Standard level: 0.5Vrms Output Impedance: Less than 1kohm*
2	○	○	Audio Input B (right)	Standard level: 0.5Vrms Input Impedance: More than 10kohms*
3	○	○	Audio output A (left)	Standard level: 0.5Vrms Output Impedance: Less than 1kohm*
4	○	○	Ground (audio)	
5	○	○	Ground (blue)	
6	○	○	Audio Input A (left)	Standard level: 0.5Vrms Input Impedance: More than 10kohms*
7	○	●	Blue Input	0.7V ± 3dB, 75ohms, positive
8	○	○	Function select (AV control)	High state (9.5 – 12V): Part mode Low state (0 – 2V): TV mode Input Impedance: More than 10kohms Input capacitance: Less than 2 nF
9	○	○	Ground (green)	
10	○	○	Open	
11	○	●	Green	Green signal: 0.7V ± 3dB, 75ohms, positive
12	○	○	Open	
13	○	○	Ground (red)	
14	○	○	Ground (blanking)	
15	○	—	Red Input	0.7V ± 3dB, 75ohms, positive
	—	○	(S signal) chroma input	0.3V ± 3dB, 75ohms, positive
16	○	●	Blanking input (Y's signal)	High state (1 – 3V) Low state (0 – 0.4V) Input Impedance: 75ohms
17	○	○	Ground (video output)	
18	○	○	Ground (video input)	
19	○	○	Video output	1V ± 3dB, 75ohms, positive Sync: 0.3V (– 3, +10dB)
20	○	—	Video Input	1V ± 3dB, 75ohms, positive Sync: 0.3V (– 3, +10dB)
	—	○	Video Input/Y (S signal)	1V ± 3dB, 75ohms, positive Sync: 0.3V (– 3, +10dB)
21	○	○	Common ground (plug, shield)	

○ connected ● unconnected (open)

* at 20Hz – 20kHz

4 Pin Connector (—, —, —, —)

Pin No	Signal	Signal level
1	Ground	
2	Ground	
3	Y (S signal) input	1V ± 3dB 75ohm, positive Sync 0.3V _{+10dB}
4	C (S signal) input	0.3V ± 3dB 75ohm, positive

TABLE OF CONTENTS

<u>Section</u>	<u>Title</u>	<u>Page</u>	<u>Section</u>	<u>Title</u>	<u>Page</u>
1.	GENERAL		4.	CIRCUIT ADJUSTMENTS	
1-1.	TV Channel Presetting	4	4-1.	A Board Adjustments	25
1-2.	Basic Functions	6	4-2.	A1 Board Adjustments	25
1-3.	Special Functions	6	4-3.	B1 Board Adjustments	26
1-4.	Use of the Teletext Service	7	4-4.	D Board Adjustments	27
1-5.	Connections and Optional Functions	9	4-5.	J1 Board Adjustments	27
1-6.	General Information	10	4-6.	V Board Adjustments	28
			4-7.	Secondary Adjustments	28
2.	DISASSEMBLY		5.	DIAGRAMS	
2-1-1.	Rear Cover Removal (21 inch)	12	5-1.	Block Diagram	29
2-1-2.	Rear Cover Removal (25 inch, 29 inch)	12	5-2.	Circuit Boards Location	33
2-2.	Chassis Assembly Removal	12	5-3.	Printed Wiring Boards and Schematic Diagrams	33
2-3.	A, A1 and J1 Boards Removal	13	5-4.	Semiconductors	67
2-4.	B1 and V Boards Removal	13			
2-5.	Service Position	13	6.	EXPLODED VIEWS	
2-6-1.	Picture Tube Removal (21 inch)	14	6-1.	Chassis (KV-A2123E)	69
2-6-2.	Picture Tube Removal (25 inch, 29 inch)	15	6-2.	Picture Tube (KV-A2123E)	70
			6-3.	Chassis (KV-A2523E/A2923E)	71
3.	SET-UP ADJUSTMENTS		6-4.	Picture Tube (KV-A2523E/A2923E)	72
	(21 inch, 25 inch)		7.	ELECTRICAL PARTS LIST	73
3-1.	Beam Landing	16			
3-2.	Convergence	17			
3-3.	Focus	19			
3-4.	Screen (G2) and White Balance	19			
	(29 inch)				
3-1.	Beam Landing	21			
3-2.	Convergence	22			
3-3.	Focus	24			
3-4.	White Balance	24			

(CAUTION)

SHORT CIRCUIT THE ANODE OF THE PICTURE TUBE AND THE ANODE CAP TO THE METAL CHASSIS, CRT SHIELD, OR CARBON PAINTED ON THE CRT, AFTER REMOVING THE ANODE.

WARNING!!

AN ISOLATION TRANSFORMER SHOULD BE USED DURING ANY SERVICE TO AVOID POSSIBLE SHOCK HAZARD, BECAUSE OF LIVE CHASSIS.
THE CHASSIS OF THIS RECEIVER IS DIRECTLY CONNECTED TO THE AC POWER LINE.

SAFETY-RELATED COMPONENT WARNING !!

COMPONENTS IDENTIFIED BY SHADING AND MARK Δ ON THE SCHEMATIC DIAGRAMS, EXPLODED VIEWS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.


SECTION 1 GENERAL

1-1. TV CHANNEL PRESETTING


After installing the TV set, TV channels must be preset.

TV broadcasting stations broadcast their programmes on certain fixed frequencies (channels). In order to receive these programmes it is necessary to search for the relevant broadcasting station and to set record it as a channel. The "programme number" is the number that the user decides to associate with a certain channel.

For channel settings there are 60 positions available in the memory. In this way all stations broadcasting within the user's country can be received and recorded as a channel.

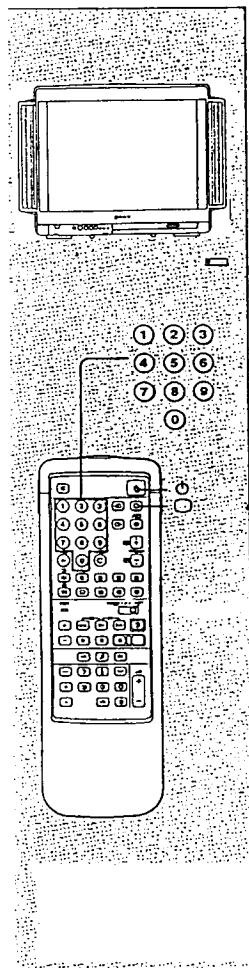

Turning the TV unit ON and OFF	
Operation	Result
1 Press on the TV set.	The TV set will come on. Note: If no picture appears on the screen, the TV set is in the stand-by mode. In this case follow instructions given in step 2.
2 Press or one of the selection numbers of the remote control unit.	A programme number appears on the screen.
Temporarily turning off the TV set: Press on the remote control unit.	The TV set will enter the stand-by mode. It can be turned on again by pressing the button, or the selection button of the remote control unit.
Turning off the TV set definitively: Press on the TV set.	The TV set will be turned off.

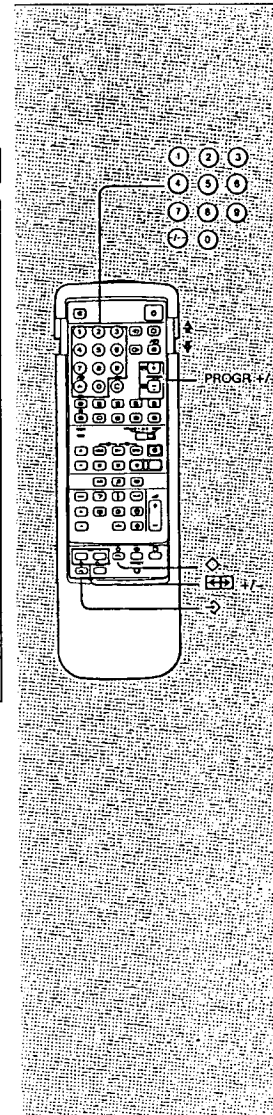


TV channels automatic presetting

If the numbers to be associated with certain TV channels are already known, the following explanation can be skipped. In this case go directly to the section "TV channels direct selection".

Operation	Result
1 Press to begin the preselection.	The programme number flashes.
2 Press PROGR +/- buttons of the remote control unit to select the channel number of the broadcasting station you want to memorize.	The programme number on the screen changes. NOTE: In case of a mistake, the "X" letter appears. Repeat once more the operation of step 2.
3 To search for broadcasting stations press + and - buttons.	When a broadcasting station is tuned correctly, the search will stop. If you want to skip it, press + or - again.
4 Press to memorize the channel to that the broadcasting station is tuned.	All data visualized under the channel number disappears from the screen.
5 To memorize other broadcasting stations repeat steps from 1 to 4.	


Direct TV channel setting

Direct presetting of TV channels is faster than automatic presetting. With this function any broadcasting station can be searched for and set as the desired channel.

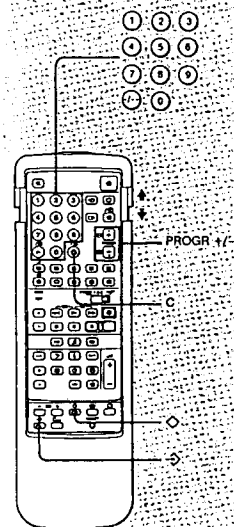

Operation	Result
1 Press → to begin the presetting. 	The programme number begins to flash on the screen.
2 Press the PROGR +/- buttons of the remote control unit to select the channel number under which you want to set the broadcasting station. Note: To select a 2-figure number press +/- button. E.g., if you wish to select number 23, press +/- first, and then 2 and 3.	The programme number on the screen changes. Note: In case of mistake, the "X" letter appears on the screen. Repeat once more the operation of step 2.
3 Press C. If you wish to select a cable station press C twice. 	Indication "C--" ("S--" for cable stations) flashes on the screen
4 By using the number buttons of the remote control unit select the channel number, always with two figures (for "4" press "04"). Note: Press the second figures within 5 seconds from the first. After 5 seconds the operation is canceled.	The channel number changes on the screen.
5 Press ◇ to memorize the channel to which the station is tuned. 	All indications, except the programme number, disappear from the screen.

To memorize other broadcasting stations repeat the above procedure.

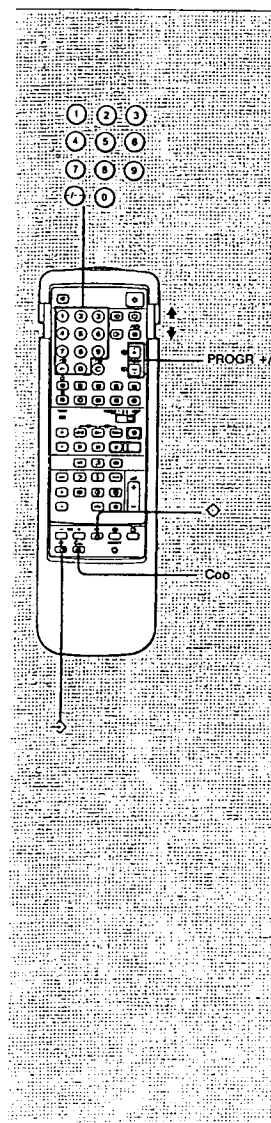

Exclusion of programmes

Once all desired stations have been memorized, unoccupied channel numbers, with stations of inferior quality signals can be excluded. The undesired channels can be excluded by using the PROGR + and - buttons.

Operation	Result
1 Press → to begin presetting. 	The programme number begins to flash on the screen.
2 By acting on the PROGR + and - buttons, or on the number keys of the remote control unit, select the programme number you wish to exclude. 	The programme number changes.
3 Press Coo. 	Under the programme number, the preceding channel number appears.
4 Press ◇. 	All indications under the programme number disappear from the screen. The excluded programme number will be memorized.

NoteNote

Undesired channels can be excluded only by using PROGR + and - keys. Excluded programme numbers appear on the screen if you press the number keys of the remote control unit.


Use of additional tuning functions

Temporary channel tuning

It is possible to temporarily memorize a channel, even if it has not been preset.

Operation	Result
1 Press C. Press C twice for a cable station.	"C" ("S" for cable stations) indication appears on the screen.
2 Using the number keys of the remote control unit select the channel number, always with two figures (e.g., "04" for channel "4").	The channel will be received, but it will not be set as a programme number.

1-2. BASIC FUNCTIONS

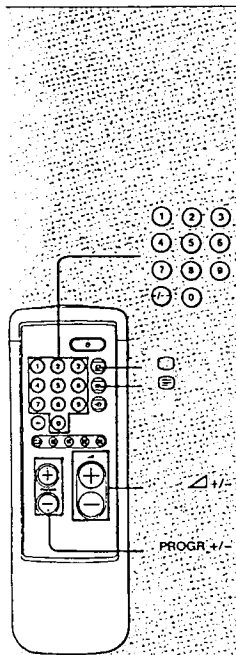

This section of the manual explains the use of the two fundamental functions of the TV set, selection of TV programmes and volume control.

Use the "simple" side of the remote control unit.

Programme selection

Before selecting programmes make sure that TV channels have been memorized.

Operation	Result
1 Turn the TV set on.	
2 Press PROG + /- buttons or the number keys of the remote control unit. To select a 2-figure number press -/- button. E.g., if you wish to select number 23, press -/- first, and then 2 and 3. 	The selected programme number appears on the screen.

Volume control

Operation	Result
Press + or -. 	The volume indication appears on the screen.

Use of additional functions



Use of other functions with the TV set buttons

It is also possible to select programmes and to adjust the volume by using P → and + or - buttons, located on the front panel of the TV set. In this case, press first P → until the indication P (channel) or (volume) appears on the screen, and then press + or - buttons.

Use of teletext service

Press . To revert to the TV mode, press . For further information on the teletext service.

1-3. SPECIAL FUNCTIONS

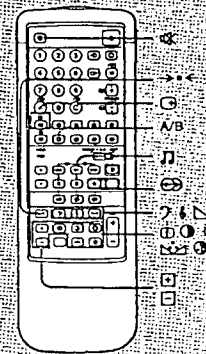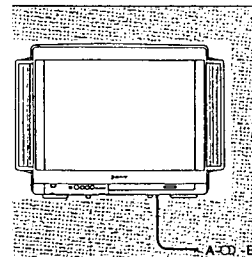

This section explains the use of functions for adjusting pictures and sound; for inserting on the screen the name of a channel; and for fine tuning of a channel.

Use the "complete" side of the remote control unit.

Use of special functions

The following functions can be used.

Function	Operation	Reset
Indication display	Press	Press again.
Sound muting	Press	Press again.
Language selection for bilingual programmes.	Press A/B. The selected language is displayed by the relevant indication on the screen.	Press A/B.
Sound adjustment for music programmes.	Press	Press again.
Use of special sound effects.	Press	Press again.
Time display (only during teletext broadcasting).	Press	Press again.

Picture and sound adjustment

Although picture and sound adjustment has already been performed in the factory, it is still possible to make them more suitable to one's own taste. The following table shows all available functions and their effects.

Operation

Function	Controls to be used	Result
Button selection		The symbol appears on the screen.
Adjustment of the selected function		The level has been adjusted.

Picture adjustment


Adjustment	Symbol	Result (+ ↔ -)
Colour		Further or lesser colour intensity
Contrast		Further or lesser contrast
Brightness		Bright (↔) dark
Hue (for NTSC only)		More red ↔ more green
Picture definition		More definition ↔ less definition

Sound adjustment

Adjustment	Symbol	Result (+ ↔ -)
Bass		More of low frequencies ↔ less of low frequencies
Treble		More of high frequencies ↔ less of high frequencies
Speakers balance		Volume increase from right speaker ↔ Volume increase from left speaker

Reversion to the original adjustment

Press .

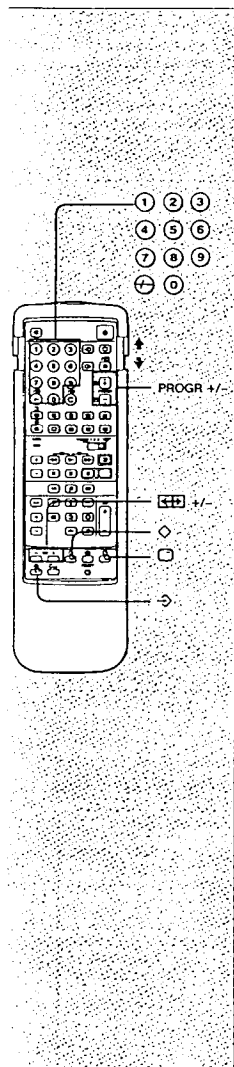

Broadcasting station identification

By associating a name with a certain broadcasting station it is possible to avoid having to remember, each time, in which channel number that particular station has been memorized.

Five different characters are available for station identification.

Operation	Result
1 By using PROGR + or -, or the number keys of the remote control unit, select the programme number to be set for identification.	The programme number to be set for identification appears on the screen.
2 Press →	The number flashes on the screen.
3 Press □	The first indication line flashes on the screen.
4 Using the + or - buttons select a letter of the alphabet, a number, or a blank space.	Alphabet letters, numbers or a blank space (" ") appear on the screen, in that order.
5 Press □	In this way the first character has been set, and the following position now flashes on the screen.
6 Repeat steps 4 and 5, and fill all five available spaces.	
7 Press ◇	All indications under the programme number disappear from the screen. All indications remaining on the screen have been memorized.

Manual fine tuning


If the picture is not perfect, it is possible to fine tune it manually.

Operation	Result
Press + or - repeatedly until the picture is at the optimum.	The indication →F← appears on the screen.
Press → to start preselection.	The programme number starts flashing on the screen.
Press ◇.	Manual fine tuning has been memorized.

Note: Manual fine tuning will be reset when the channel is selected again.

to un'altra volta.

1-4. USE OF THE TELETEXT SERVICE

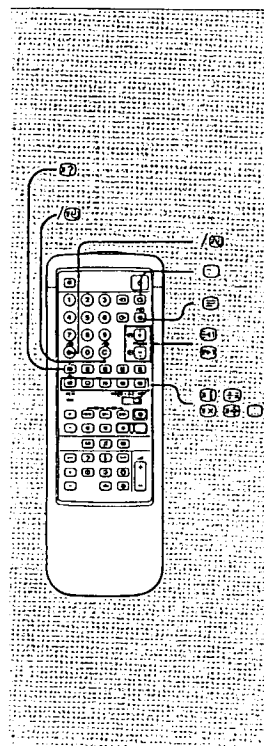

Through the teletext service a great deal of information can be received at any time. Broadcasting stations make this service available through TV broadcasts. To use the teletext service, use the green keys on the "complete" side of the remote control unit. When the "simple" side of the remote control unit is used, only the basic functions are available.


How to display teletext service

Operation	Result
1 Select the channel you want to watch.	The channel changes on the screen.
2 Press □	If there is no teletext signal, the indication "Page 100" appears on the screen.
3 Use the number keys of the remote control unit to insert the three figures corresponding to the desired teletext page. Note In case of a mistake, press any three numbers, and then repeat the operation with the correct numbers.	The selected page number appears on the screen. After a few seconds, the selected page appears on the screen.
To revert to normal TV programmes: Press □.	
To change teletext channel: First press □ to revert to the TV mode, and then repeat procedure steps 1 to 3.	


Note: A weak TV signal may cause troubles in the use of teletext.

Use of special teletext functions

Required function	Operation	Result (on the screen)
Page index required.	Press □ (INDEX).	Page index appears.
Sub-pages required (page 888).	Press □	The sub-page appears (page 888).
Access to previous or following pages.	Press □ (PAGE +) or □ (PAGE -).	The preceding or the following page appears.

Required function	Operation	Result (on the screen)
Superimposition of the teletext on the TV programme.	In the TV mode, press TEXT twice. To revert to the normal teletext function press TEXT again.	 Teletext information will appear superimposed on the TV programme.
To prevent page changes due to page up-dating.	Press TEXT (STILL). Press TEXT (TXT/MIX) to revert to the normal function.	 The TEXT (STILL) symbol appears on the screen.
Magnification of teletext characters.	Press once to magnify the upper half of the screen. Press twice to magnify the lower half of the screen. Pressing the button three times the normal vision is restored.	 The upper or the lower half of the page is magnified.
Display of hidden information (answers to quizzes, ecc.).	Press TEXT (RIV). Press again to hide the answers.	 The information is displayed.
Watching a programme while the teletext searches for the required page.	1. Ask again for the page.	The number is displayed.
	2. Press TEXT	TV programme is displayed.
	3. When the required page has been found, the page number will be displayed.	 P201
	4. Press TEXT to display the page.	The desired page will be displayed.
Display of a page at a preset time.	1. Request the page.	The selected page will be displayed.
	2. Press TEXT (MEM.T).	In the lower part of the screen the indication "T*****" appears.
	3. Set the required time by using the number keys, and by inputting four figures (e.g. 0730 for "7:30").	The required time is displayed on the screen.
	To watch TV programmes until a preset time Press TEXT (CANC.). At the required time, the selected page appears in the upper part of the screen. Press TEXT to display the page. To cancel the request Display the teletext page and then press TEXT (CANC.M.).	

Note: Depending on the teletext service, certain functions may not be available.

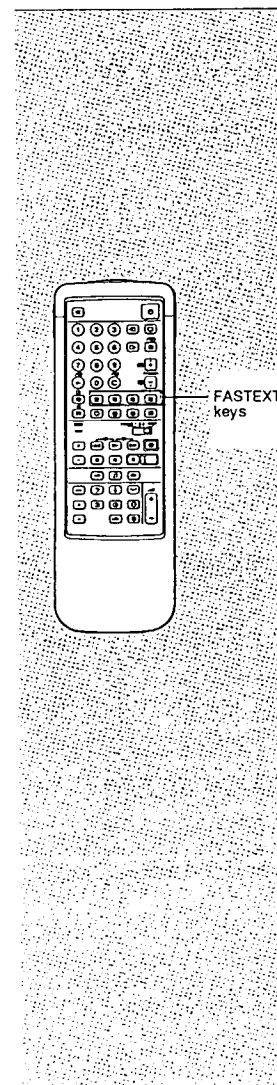

Use of the FASTEXT function

The FASTEXT function allows rapid access, at the touch of a single button, to the teletext functions. In the lower part of the screen, a colour coded index will be displayed when a FASTEXT teletext page is broadcasted. Each colour corresponds to the coloured keys on the remote control unit.

Operation

Operation	Result
Press one of the coloured key on the remote control unit corresponding to the coloured indications of the FASTEXT teletext page.	The selected teletext page appears on the screen.

Note

The correct use of the FASTEXT teletext function depends on the signal being broadcast by the TV stations. Some TV stations may not broadcast FASTEXT teletext signal.

1-5. CONNECTIONS AND OPTIONAL FUNCTIONS


This TV set may be connected to other audio/video machines, such as videocameras, VTRs, videodisc players, or stereo systems.

Connection to an external audio/video system


This TV set incorporates three groups of connectors, for input and output to the TV signal. Each group has the following characteristics.

Connector	Input signal	Output signal
Ⓐ-1	Normal audio/video signal or RGB signal	TV tuner audio/video signal
Ⓒ-2/Ⓒ-	Normal audio/video signal and S-video signal	Audio/video signal from a selectable source
Ⓔ, Ⓕ, Ⓖ front panel	Normal audio/video signal and S-video signal	No signal


Connection of a TV set

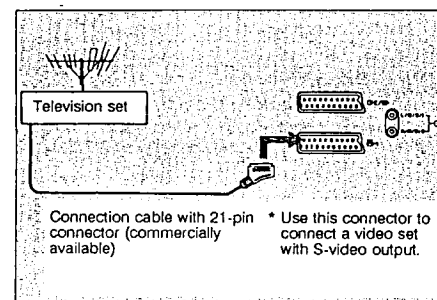

Connection of an audio unit

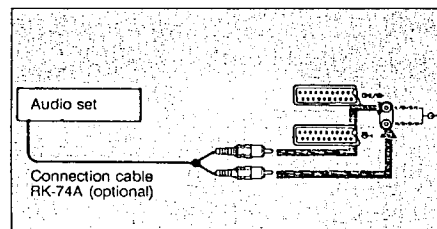


Connection to a computer with RGB output

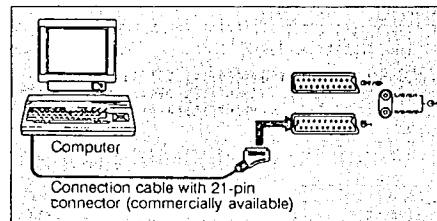

Temporary connection of video apparatus

For a temporary connection (e.g. of a videocamera) use the front panel terminals.

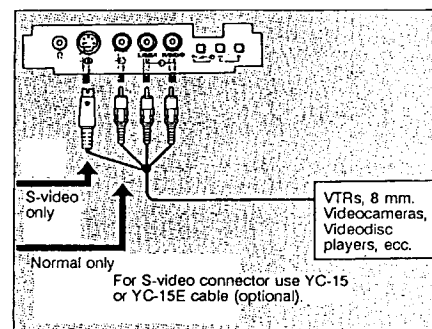


Connection of a video taperecorder through the "r" connector
Connect the antenna input (AERIAL-IN) of the TV set to the antenna output (AERIAL-OUT) of the video taperecorder.

S-video input (Y/C input)

The video signal is formed by two separate signals: the luminance (Y) and the chrominance (C). Through the separation of the two signals it is possible to improve picture quality (luminance in particular), preventing reciprocal interferences. This TV set features two S-video sockets able to directly receive this type of signal.

Pictures with distortion

Move the TV set away from the video taperecorder if pictures or sound become distorted.

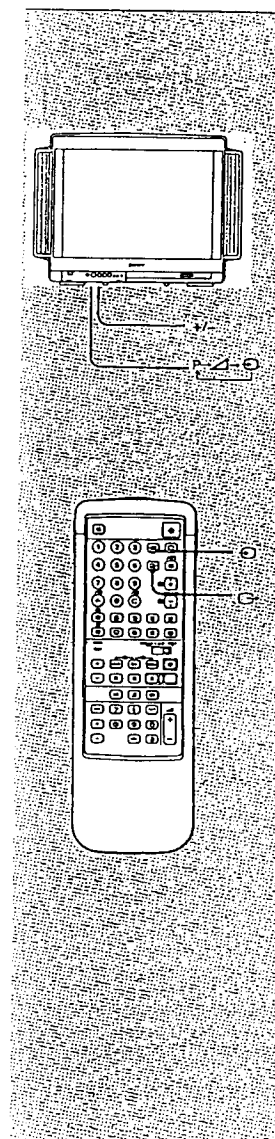

Video programme playback

Using the input selector, pictures coming from a video taperecorder connected to the TV sets input, may be played back.

Operation

Operation	Result
Select the desired video input by pressing Ⓔ repeatedly.	The symbol of the selected input appears on the screen (see table hereunder).
Press Ⓕ button to revert to TV mode.	

Selectable inputs

Symbol	Selected input
Ⓐ 1	Audio/video signal from Ⓐ-1 connector.
Ⓐ	RGB signal from Ⓐ-1 connector.
Ⓒ 2	Audio/video signal from Ⓒ-2/Ⓒ- connector.
Ⓒ 2	S-video signal (from a VTR with S-video output) from Ⓒ-2/Ⓒ- connector.
Ⓔ 3	Audio/video signal from Ⓔ, Ⓕ connector located on the front panel.
Ⓒ 3	S-video signal from S-video Ⓒ (4 pin) connector located on the front panel.

Input can be selected also with Ⓔ-Ⓕ buttons of the TV set.

In this case, first select Ⓔ, and then press the +/- buttons to select the desired input.

Selection of video output from a Ⓒ-2/Ⓒ- connector

The Ⓒ-2/Ⓒ- connector may output 4 video signals. Select the outgoing video signal in the following way.


Operation

Operation	Result
Press Ⓒ repeatedly to select the desired video input.	The selected video input symbol appears on the screen (see the table following).

Output signal

Symbol	Selected output
1 Ⓒ	Audio/video signal from Ⓐ-1 connector.
2 Ⓒ	Audio/video signal from Ⓒ-2/Ⓒ- connector.
3 Ⓒ	Audio/video signal from Ⓔ and Ⓕ connectors.
TV Ⓒ	Audio/video signal from T-type antenna connector "r".

1-6. GENERAL INFORMATION

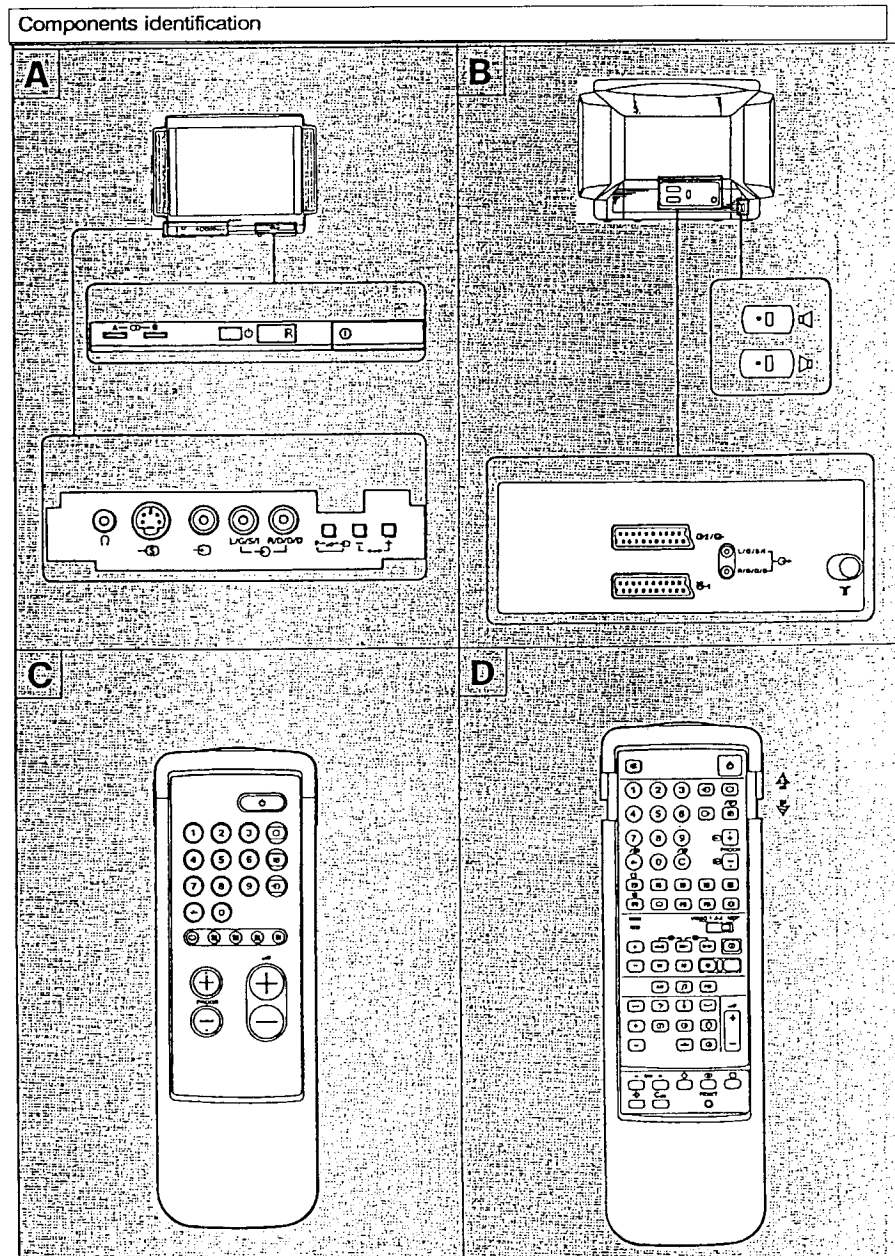

This section briefly describes controls of the TV set and the remote control unit, and their relevant functions.

A TV set front panel	
Indication	Description
	Power switch
	Stand-by switch
	Bilingual function indications
	Headphones connector (stereo mini-jack)
	Input connectors (S-video/video/audio)
	Function selector (programme/volume/input)
	Function adjustment keys


B TV set rear panel	
Indication	Description
	Speaker connectors (upper: left speaker; lower: right speaker)
	Connector 2, Euro AV (SCART, 21-pin). S-video in/video in/TV/video out signals.
	Connector 1, Euro AV (SCART, 21-pin). RGB in/video in/TV/out signals.
	Audio output connectors (RCA pin)
	Antenna connector (of IEC standard)

C Remote control unit — simplified side	
Indication	Description
	Input selector
	Teletext service key
	TV set power switch and TV mode selector
	Standby key
1,2,3,4,5,6,7,8,9,0	Number keys
	Channel selection key/2-figure programmes
	Volume adjustment key
PROGR +/-	Programme selection key


D Remote control unit — complete side	
Indication	Description
	Sound muting key
	Standby key
1,2,3,4,5,6,7,8,9,0	Number keys
	Input selector
	TV set power switch and TV mode selector
	Output selector
	Teletext key
	Music programme key
A/B	Bilingual programmes language selection
	Channel selection key/2-figure programmes
C	Channel direct selection key
	Special sound effect key
	Time display
	Teletext operation keys
	Display key
	Reset key
	Volume adjustment keys
PROGR +/-	Programme selection keys
	Image and audio adjustment keys
MEM	MEM light indication
VIDEO 1/2/3, MDP	Video unit selector
	Video units function key
Coo	Programme cancelling key
	Channel presetting key
+ -	Channel tuning keys
	Channel storing keys
	Broadcasting stations identification key
RESET	Cancel key

SECTION 2 DISASSEMBLY


2-1-1. REAR COVER REMOVAL (21 inch)

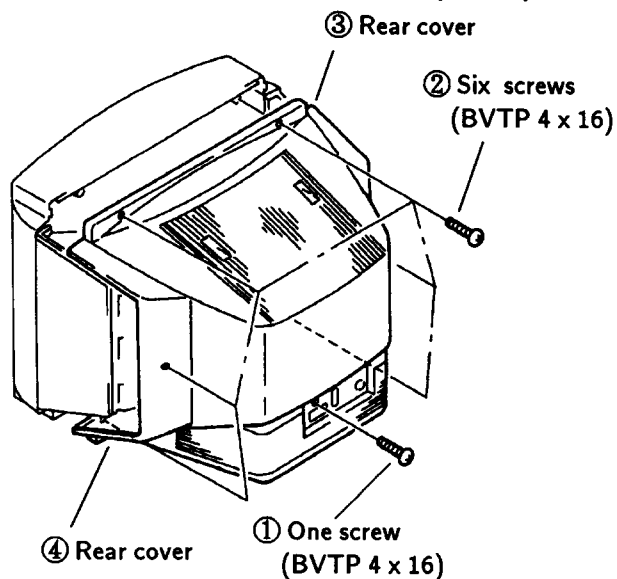


2-1-2. REAR COVER REMOVAL (25 inch, 29 inch)

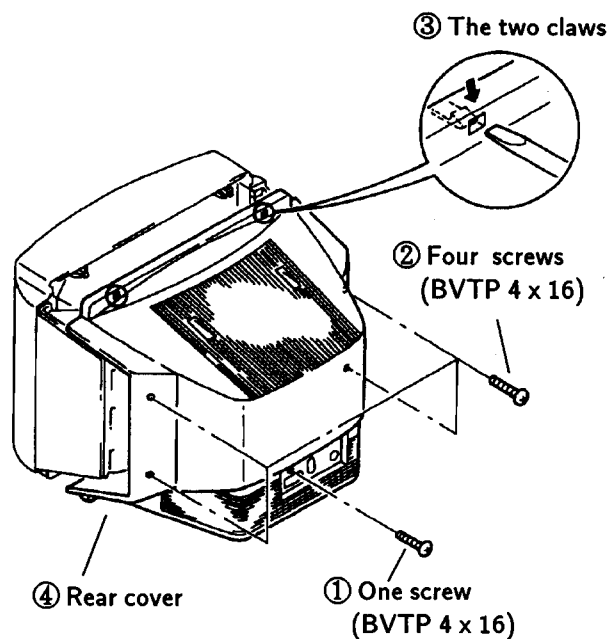


2-2. CHASSIS ASSEMBLY REMOVAL

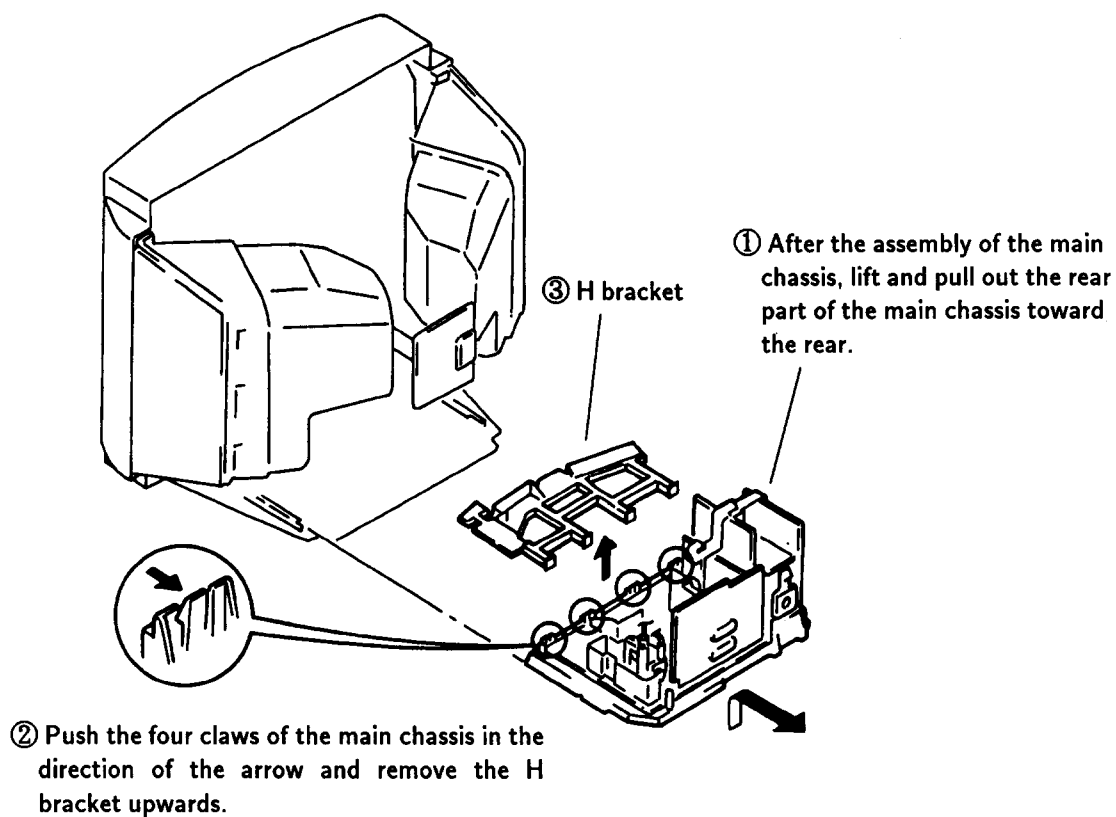

2-3. A, A1 AND J1 BOARDS REMOVAL

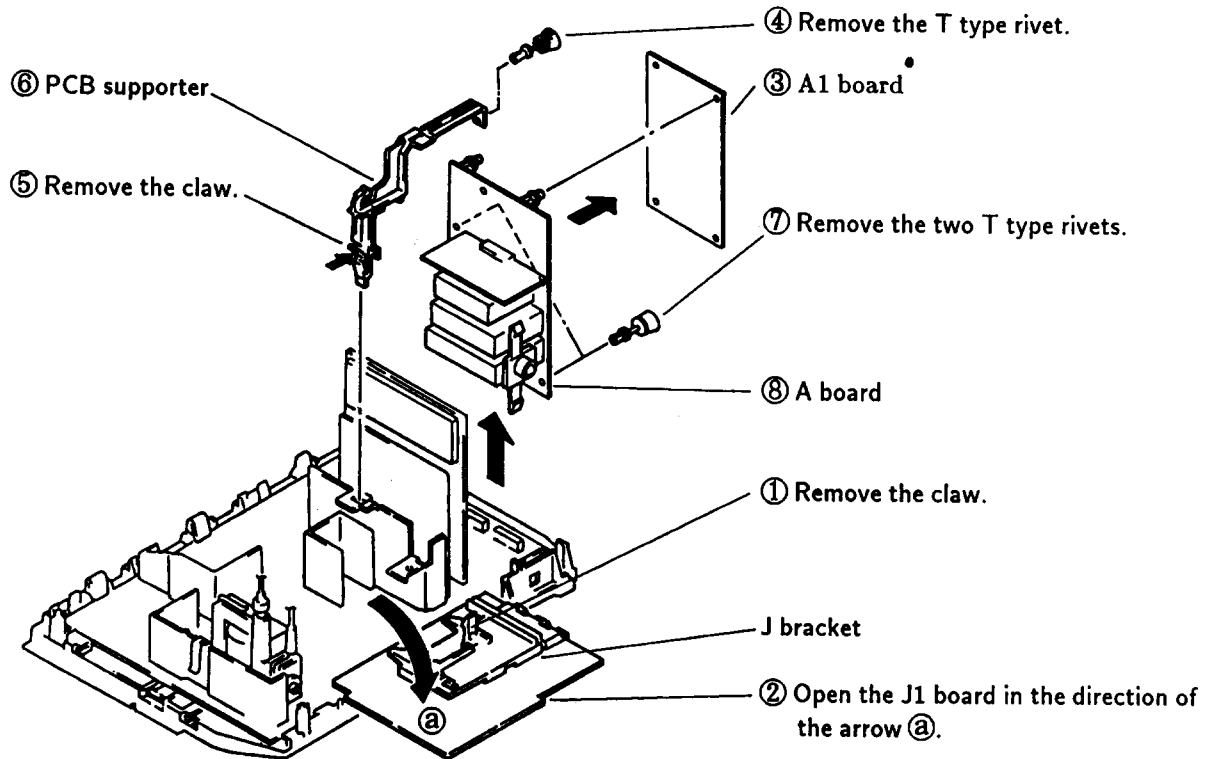


2-4. B1 AND V BOARDS REMOVAL

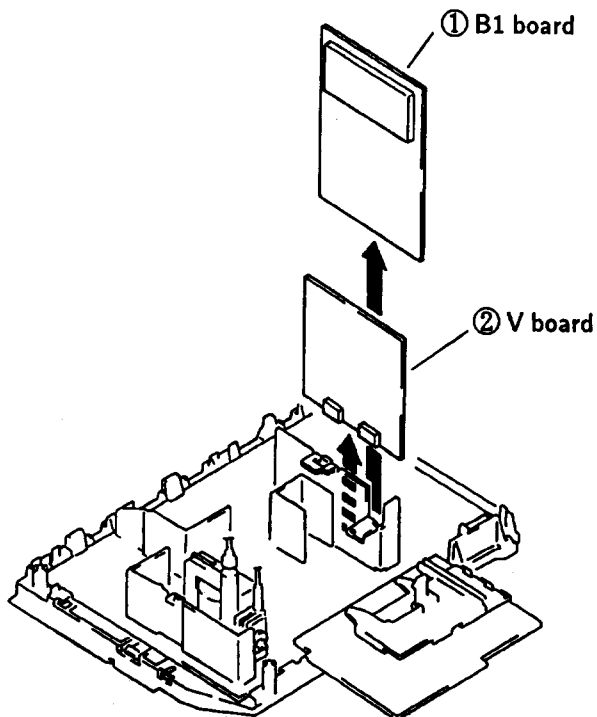


Note : 10 pin extension cable (S-0945-001-0)

2-5. SERVICE POSITION

※ Remove the H bracket from the main chassis assembly and then perform the following servicing.
(Refer to 2-2. CHASSIS ASSEMBLY REMOVAL.)

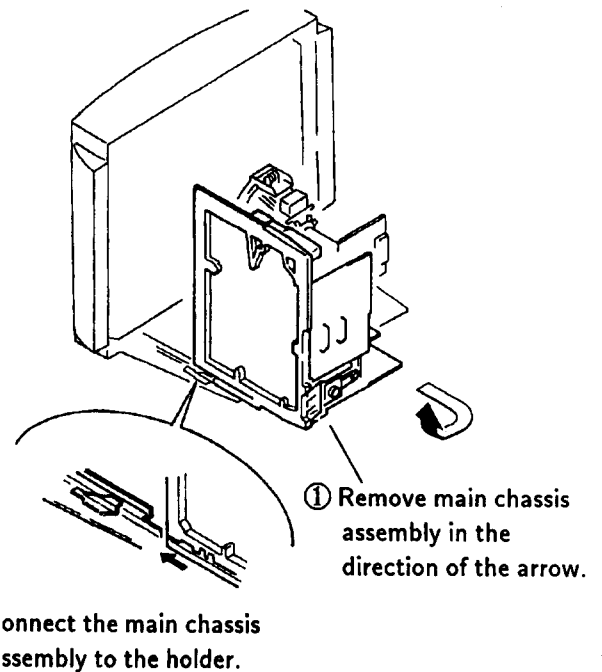


2-6-1. PICTURE TUBE REMOVAL (21 inch)

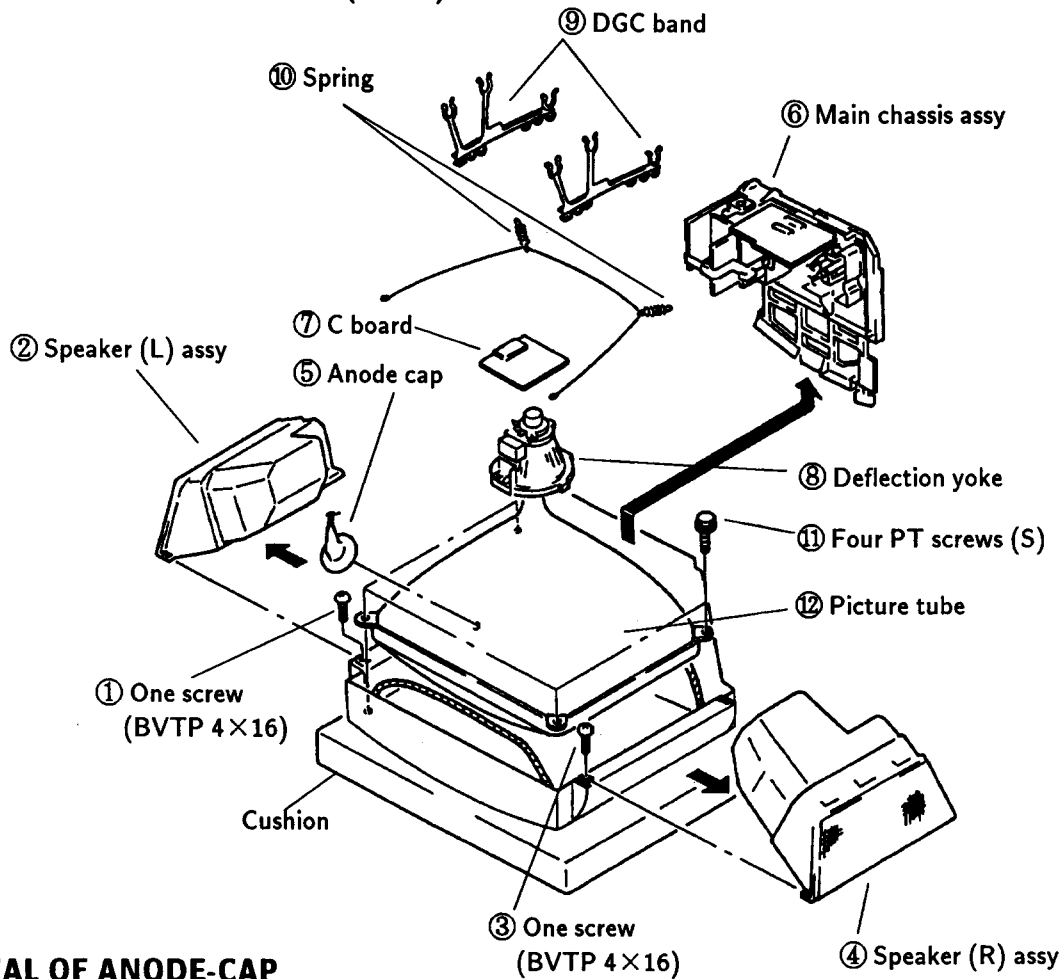

• REMOVAL OF ANODE-CAP

NOTE : Short circuit the anode of the picture tube and the anode cap to the metal chassis,
CRT shield or carbon painted on the CRT, after removing the anode.


• REMOVING PROCEDURES

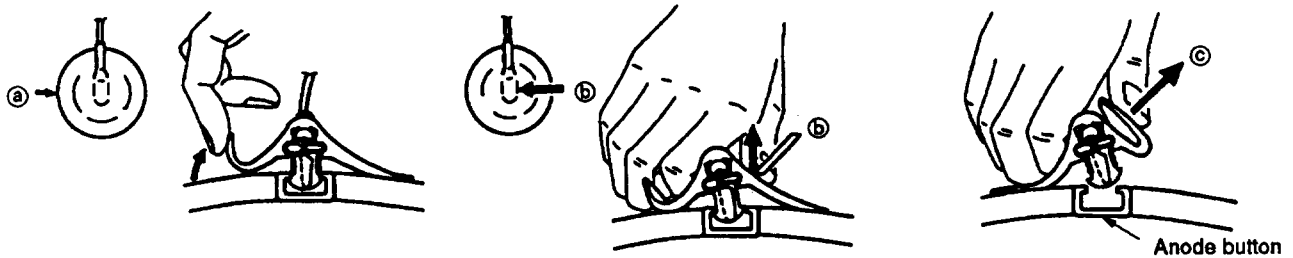


- ① Turn up one side of the rubber cap in the direction indicated by the arrow (a).
- ② Using a thumb pull up the rubber cap firmly in the direction indicated by the arrow (b).
- ③ When one side of the rubber cap is separated from the anode button, the anode-cap can be removed by turning up the rubber cap and pulling up it in the direction of the arrow (c).


• HOW TO HANDLE AN ANODE-CAP

- ① Don't hurt the surface of anode-caps with sharp shaped material!
- ② Don't press the rubber hardly not to hurt inside of anode-caps!
A material fitting called as shatter-hook terminal is built in the rubber.
- ③ Don't turn the foot of rubber over hardly!
The shatter-hook terminal will stick out or hurt the rubber.

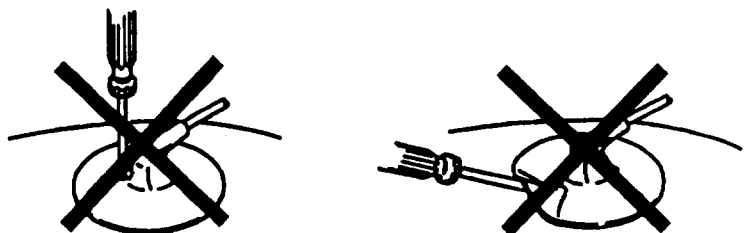


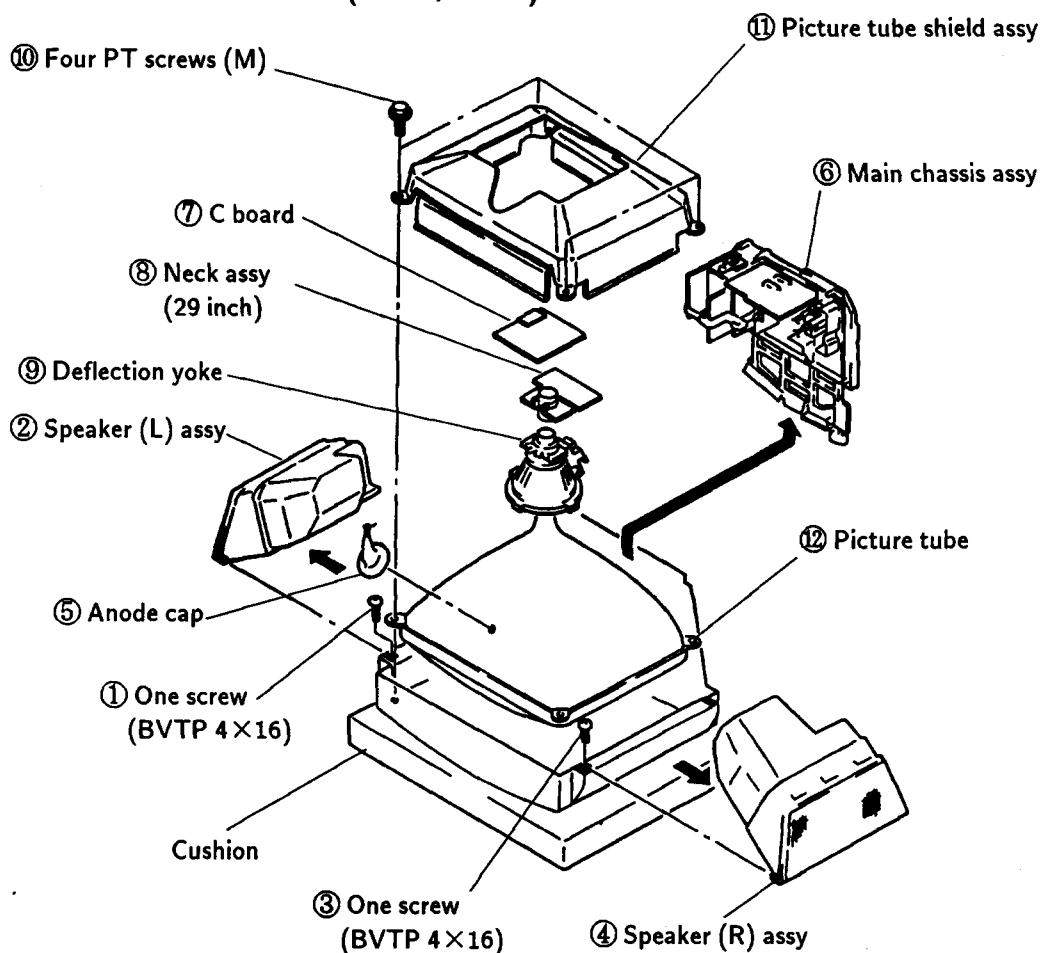2-6-2. PICTURE TUBE REMOVAL (25 inch, 29 inch)**• REMOVAL OF ANODE-CAP**

NOTE : Short circuit the anode of the picture tube and the anode cap to the metal chassis, CRT chield or carbon painted on the CRT, after removing the anode.

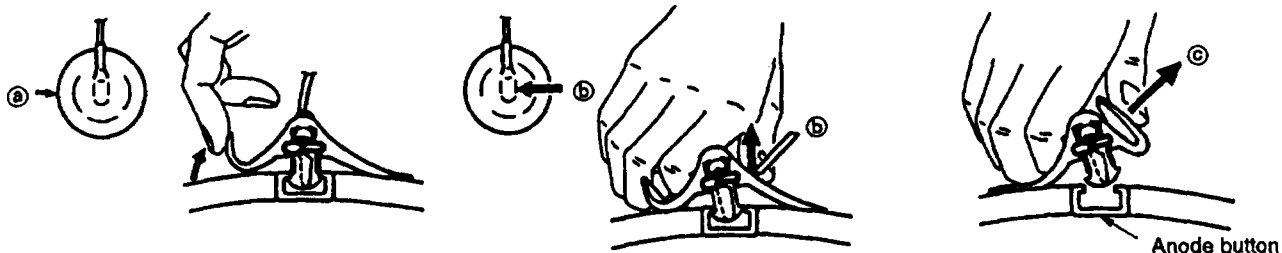• REMOVING PROCEDURES**• HOW TO HANDLE AN ANODE-CAP**

- ① Don't hurt the surface of anode-caps with sharp shaped material!
- ② Don't press the rubber hardly not to hurt inside of anode-caps!
A material fitting called as shatter-hook terminal is built in the rubber.
- ③ Don't turn the foot of rubber over hardly!
The shatter-hook terminal will stick out or hurt the rubber.

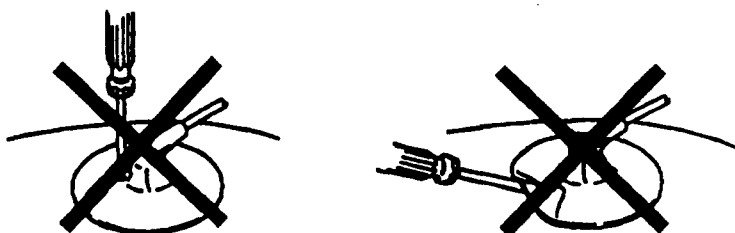

SECTION 3

SET-UP ADJUSTMENTS

- The following adjustments should be made when a complete realignment is required or a new picture tube is installed.
- These adjustments should be performed with rated power supply voltage unless otherwise noted. The controls and switch below should be set as follows unless otherwise noted :

● CONTRAST control..... 80%(or Normal by commander)

⚙ BRIGHTNESS control..... 50%

Perform the adjustments in order as follows:

Preparation: (21 inch, 25 inch)

- Set the side of the unit with the PICTURE TUBE so that it faces east or west in order to reduce the influence of external magnetic force.
- Turn the power switch for the unit ON and erase the magnetic force using a degausser..

3-1. BEAM LANDING

Demagnetize with a degausser

1. Input a raster signal with the pattern generator.

CONTRAST } normal
BRIGHTNESS }

2. Turn the raster signal of the pattern generator to red.
3. Move the deflection yoke backward, and adjust with the purity control so that red is in the center and blue and green are at the sides evenly.
(Fig.3-1 - 3-3)
4. Move the deflection yoke forward, and adjust so that the entire screen becomes red. (Fig.3-1)
5. Switch over the raster signal to blue and blue and confirm the condition.
6. When the position of the deflection yoke is determined, tighten it with a deflection yoke mounting screw.
7. When landing at the corner is not right, adjust by using the disk magnets. (Fig.3-4)

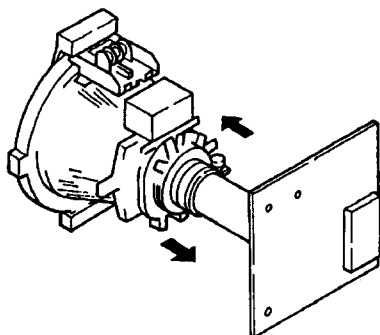


Fig.3-1

1. Beam Landing
2. Convergence
3. Focus
4. Screen (G 2) and White Balance

Note: Test Equipment Required.

1. Color bar/Pattern Generator
2. Degausser
3. DC Power Supply
4. Digital multimeter
5. Oscilloscope

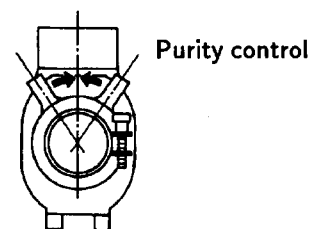


Fig.3-2

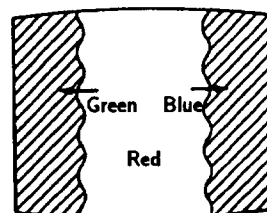


Fig.3-3

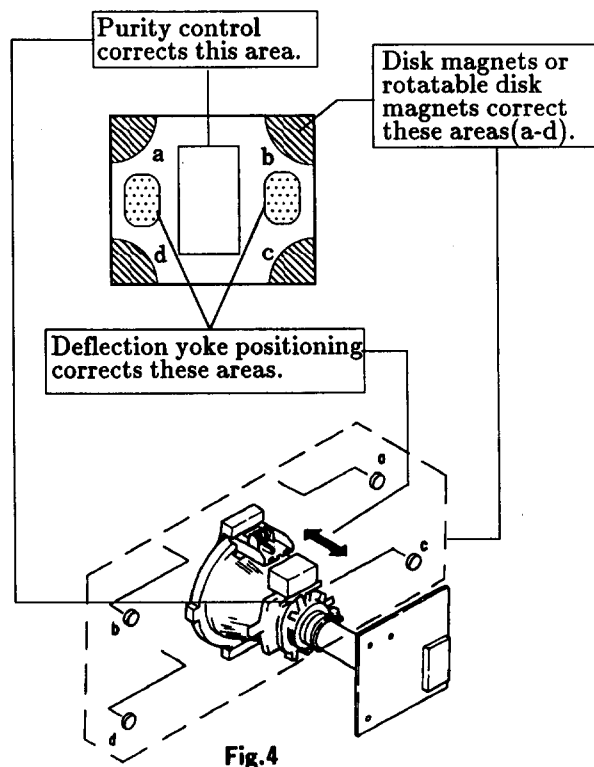



Fig.4

3-2. CONVERGENCE


Preparation:

- Before starting, perform FOCUS, H.SIZE, and V. SIZE adjustments.
- Set BRIGHTNESS control to minimum.
- Feed in the dot pattern.


(1) Horizontal and Vertical Static Convergence

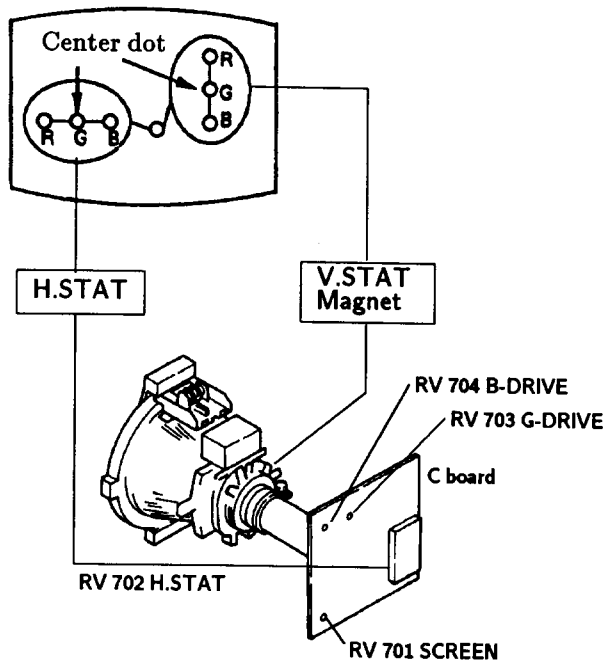

1. Adjust H.STAT VR to converge red, green and blue dots the in center of the screen.(Horizontal movement)
 2. Adjust V. STAT magnet to converge red, green and blue dots in the center of the screen. (Vertical movement)
 3. If the red, green and blue dots do not converge on the center of screen with H.STAT VR, perform horizontal convergence adjustment using H.STAT VR and V.STAT magnet as shown below. (In this case, H.STAT VR and V.STAT magnet effect each other.)
- Tilt the V.STAT magnet and adjust static convergence to open or close the V.STAT magnet.

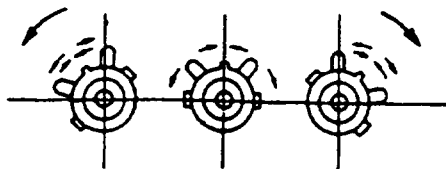

4. When the V.STAT magnet is moved in the direction of arrow (a) and (b), red, green and blue dots move as shown below.

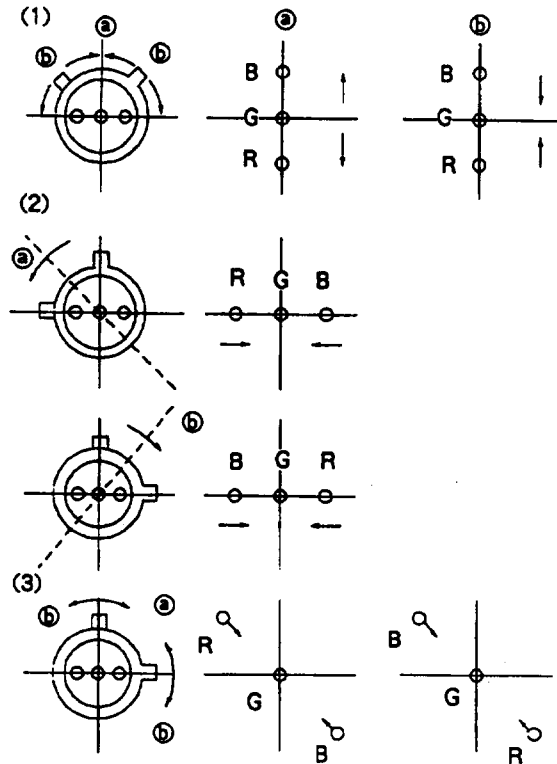


(KV-21 inch only)

If the red and blue dot do not converge with green dots, perform following steps.

Move BMC magnet (a) to correct insufficient H.static convergence.


Rotate BMC magnet (b) to correct insufficient V.static convergence.

In either case, repeat Beam Landing Adjustment.

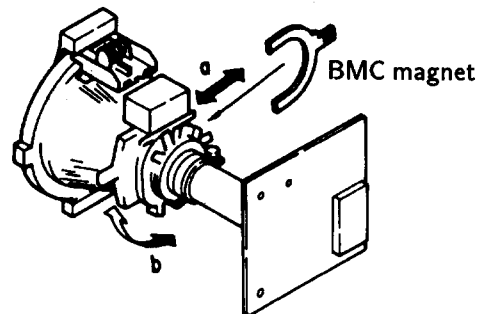


(KV-25 inch only)

● Operation of BMC (Hexapole) Magnet

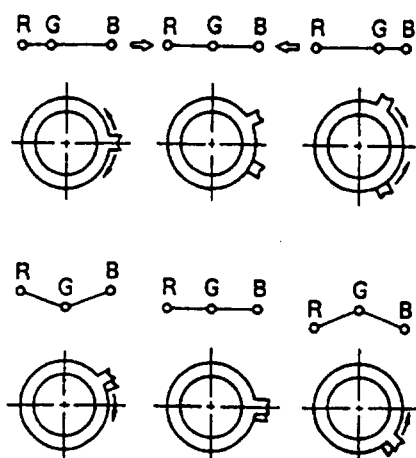

- The respective dot positions resulting from moving each magnet interact, so be sure to perform adjustment while tracking.
Use the H.STAT VR to adjust the red, green, and blue dots so they coincide at the center of screen (by moving the dots in the horizontal direction).

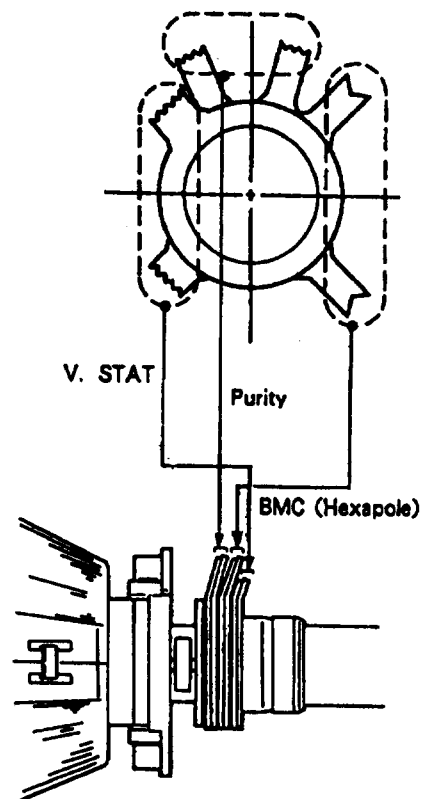

(2)Dynamic Convergence Adjustment


Preparation:



- Before starting perform Horizontal and Vertical static convergence Adjustment.

1. Slightly loosen deflection yoke screw.
2. Remove deflection yoke spacers.



3. Move the deflection yoke for best convergence as shown below.

4. Tighten the deflection yoke screw.
5. Install the deflection yoke spacers.

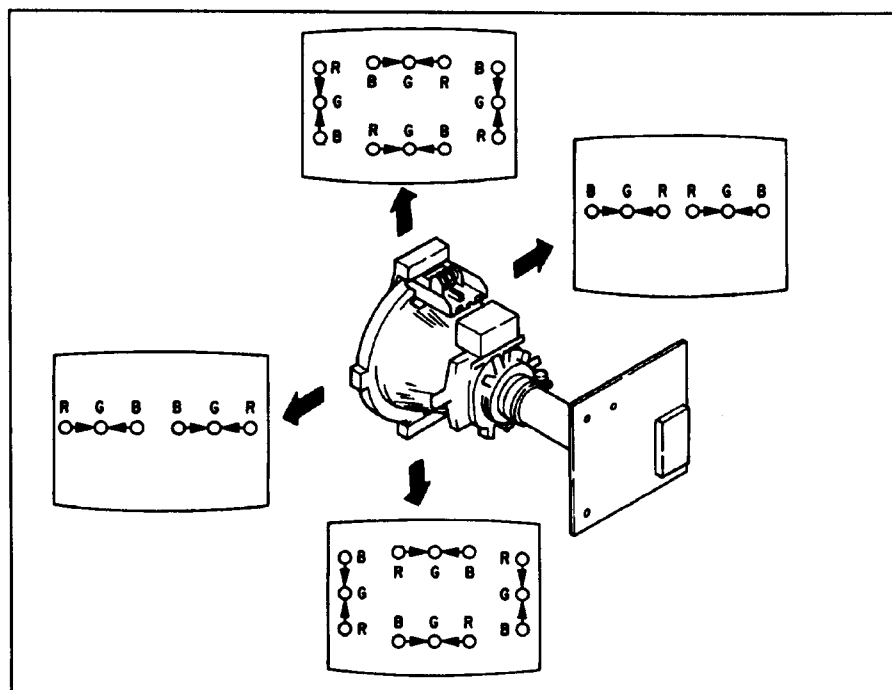

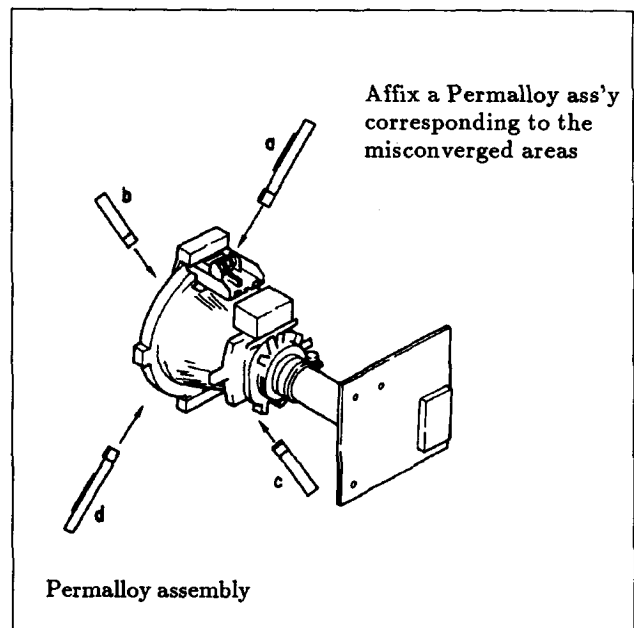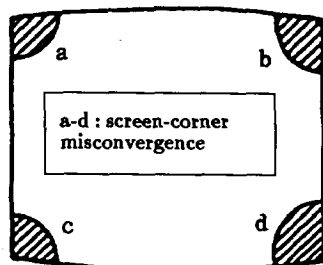(3) Screen-corner Convergence**3-3. FOCUS**

Adjust FOCUS so that the whole screen is in best focus.

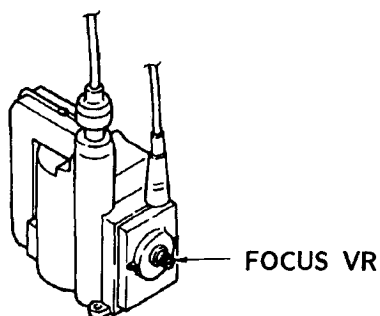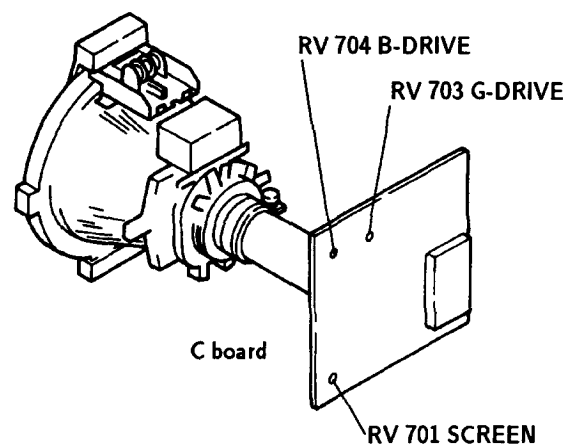**3-4. SCREEN (G 2) and WHITE BALANCE****Screen (G 2) Setting**

1. Input dot signal from the pattern generator.
2. Set the picture BRIGHTNESS control to minimum level.
3. Apply 170 V DC to the cathodes of R,G and B from an external power source.
4. While watching the picture, adjust the G 2 volume (RV701) immediately before fly-back line disappears.

White Balance Adjustment

1. Input all-white signal from the pattern generator.
2. Adjust the BRIGHTNESS and COLOR controls to the standard level.
3. Adjust the following using RV 704 (B DRIVE) and RV 703 (G DRIVE)

In the following adjustments, the CONTRAST, COLOR and BRIGHTNESS controls are set to normal unless otherwise specified.

Preparations: (29 inch)

- In order to reduce the influence of geomagnetism on the set's picture tube face it east or west.
- Switch on the set's power and degauss with the degausser.

3-1. BEAM LANDING

1. Input the white signal with the pattern generator.
Contrast } normal
Brightness }
2. Position neck ass'y as shown in Fig 3-2.
3. Set the pattern generator raster signal to red.
4. Move the deflection yoke to the rear and adjust with the purity control so that the red is at the center and the blue and the green take up equally sized areas on each side.
(See Figures 3-1 through 3-3.)
5. Move the deflection yoke forward and adjust so that entire screen is red. (See Figure 3-1.)
6. Switch the raster signal to blue, then to green and verify the condition.
7. When the position of the deflection yoke has been decided, fasten the deflection yoke with the screws.
8. If the beam does not land correctly in all the corners, use a magnet to adjust it.
(See Figure 3-4.)

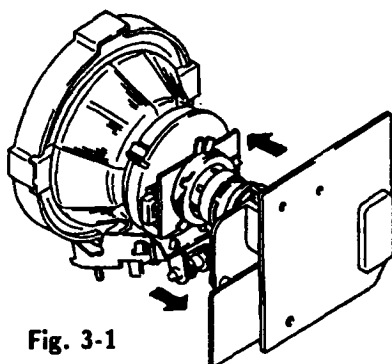


Fig. 3-1

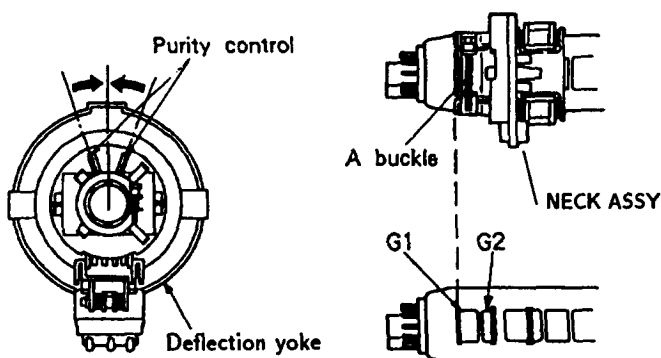


Fig. 3-2

Fig. 3-3

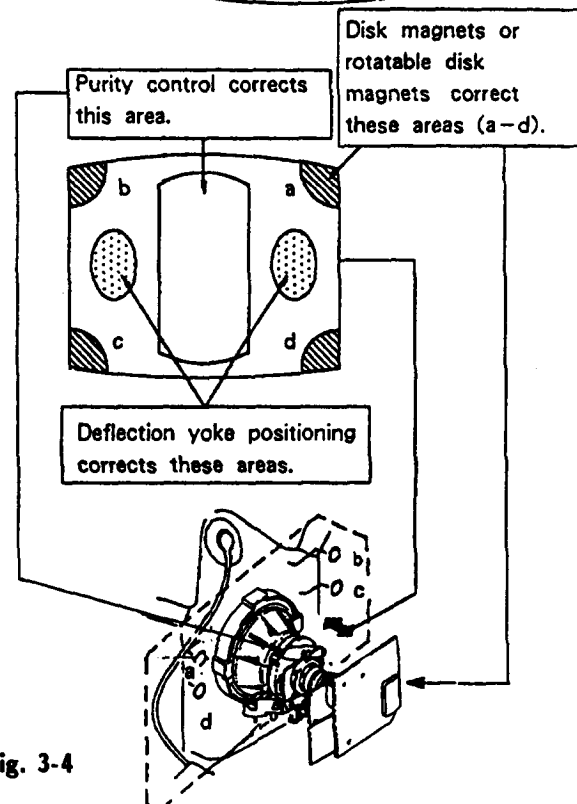
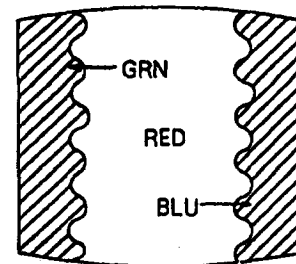



Fig. 3-4

3-2. CONVERGENCE

Preparations :

- Before starting this adjustment, adjust the focus, horizontal size, and vertical size.
- Minimize the brightness setting.
- Provide dot pattern.

(1) Horizontal and vertical static convergence




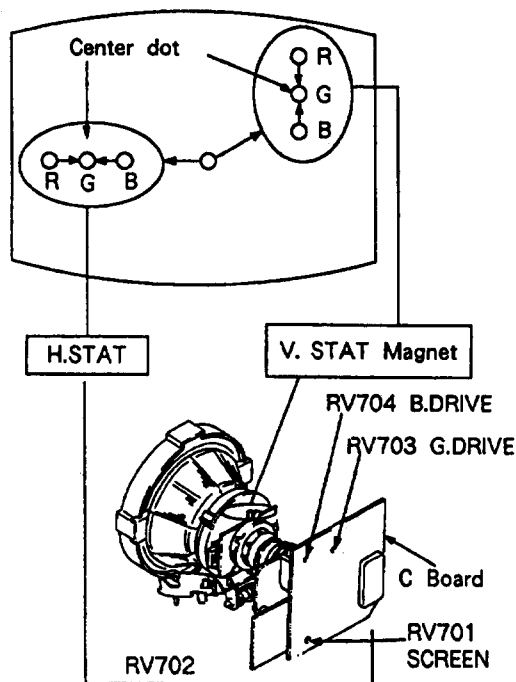


1. (Moving horizontally), adjust the H.STAT control so that the red, green, and blue points are on top of each other at the center of the screen.
2. (Moving vertically), adjust the V.STAT magnet so that the red, green, and blue points are on top of each other at the center of the screen.
3. If the H.STAT variable resistor cannot bring the red, green, and blue points together at the center of the screen, adjust the horizontal convergence with the H.STAT variable resistor and the V. STAT magnet in the manner given below.
(In this case, the H.STAT variable resistor and the V. STAT magnet influence each other)


- Tilt the V.STAT magnet and adjust the static convergence by opening or closing the V.STAT magnet.



4. If the V.STAT magnet is moved in the direction of the ㉓ and ㉔ arrows, the red, green, and blue points move as shown below.

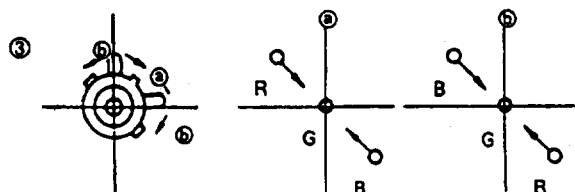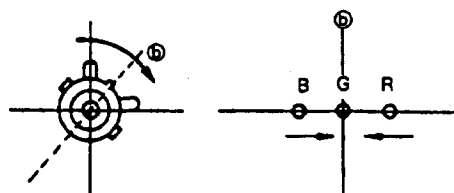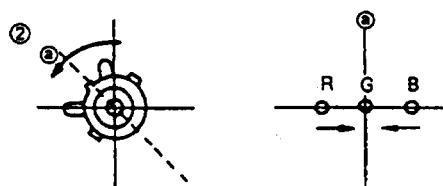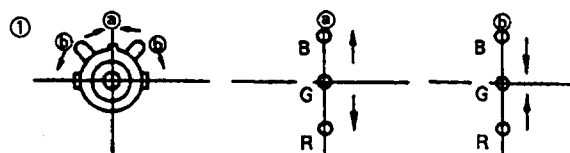


● Operation of BMC (Hexapole) Magnet

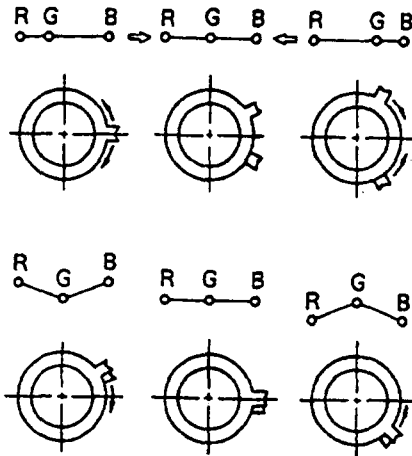

- The respective dot positions resulting from moving each magnet interact, so be sure to perform adjustment while tracking.

Use the H.STAT VR to adjust the red, green, and blue dots so they coincide at the center of screen (by moving the dots in the horizontal direction).

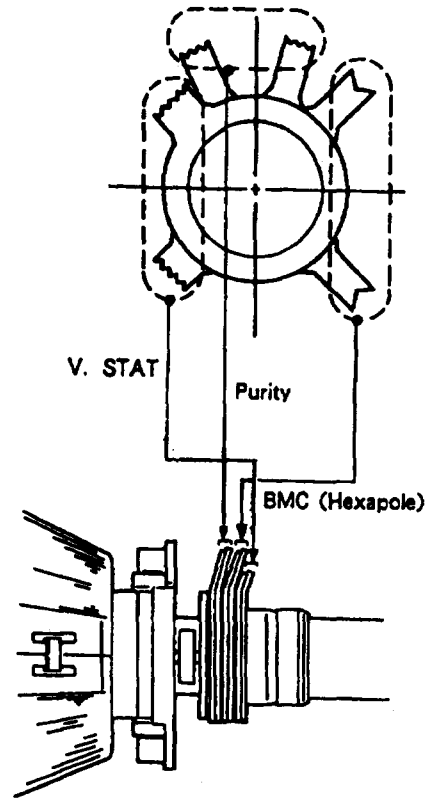


(2) Dynamic convergence adjustment

Preparations :


Before starting this adjustment, adjust the horizontal static convergence and the vertical static convergence.

1. Slightly loosen the deflection yoke screws.
2. Remove the deflection yoke spacer.


3. Move the deflection yoke as shown in the figure below and optimize the convergence.
4. Tighten the deflection yoke screws.
5. Install the defelection yoke spacer.

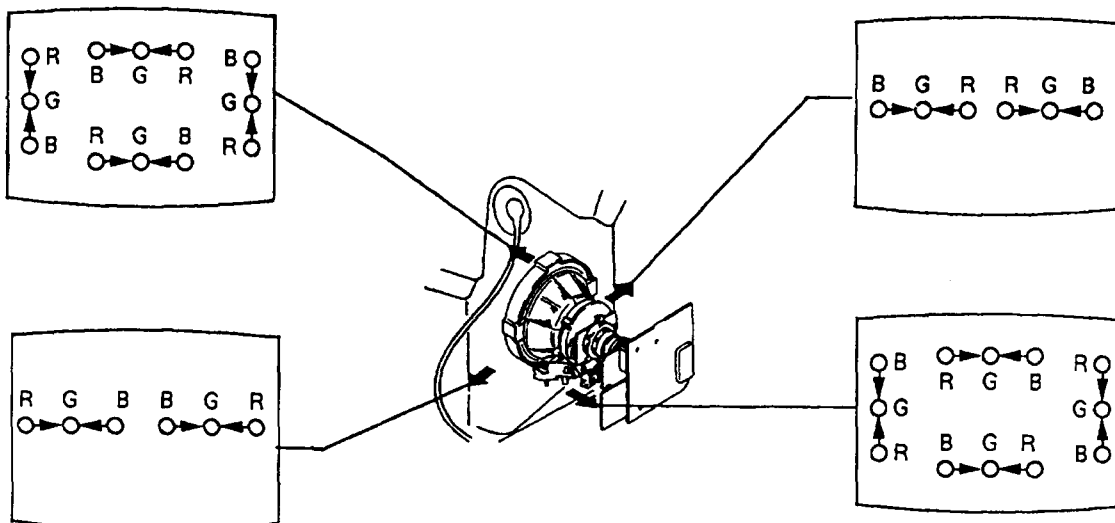

(3) Screen corner convergence

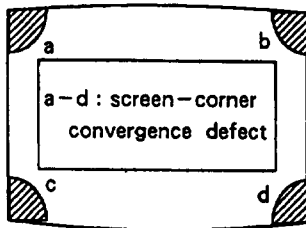


Install the permalloy assembly for the section with faulty.

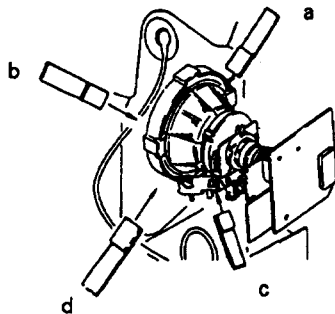

Permalloy

3-3. FOCUS

Adjust the focus to optimize the screen.

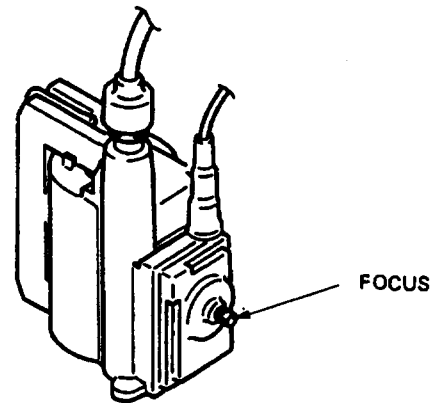

3-4. WHITE BALANCE

[Screen G2 setting]

1. Input the dot signal from the pattern generator.
2. Set the picture brightness control to its lowest level.
3. Apply 170V DC to the R, G, and B cathodes with an external power supply.
4. While watching the picture, adjust G2 control RV701 (Screen) to the point just before the return lines disappear.


[White balance adjustment]

1. Input an all-white signal from the pattern generator.
2. Set the picture brightness and color controls to their normal levels.
3. Use the RV704 (B Drive) and RV703 (G Drive) to adjust white balance.

In the adjustments below, have the picture color and brightness settings at their normal levels unless there is a specific instruction to the contrary.

SECTION 4 CIRCUIT ADJUSTMENTS

4-1. A BOARD ADJUSTMENTS

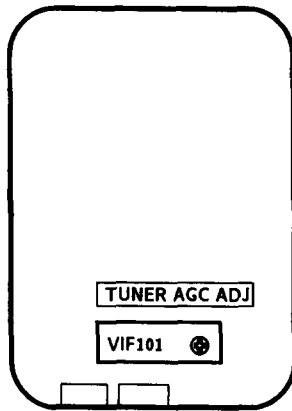


A BOARD (COMPONENT SIDE)

TUNER AGC ADJUSTMENT (AGC VR)

1. Align with an appropriate signal between stations.
2. Adjust AGC VR so that snow noise and cross modulation just disappear from the picture.

IFG5.5S SIF

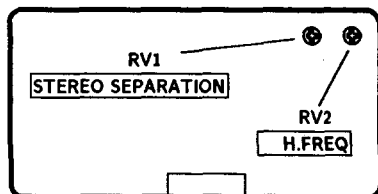

IFG5.5S SIF -component side-


STEREO SEPALATION ADJUSTMENT (RV1)

1. Input stereo signals. (L-CH 400Hz, R-CH 1KHz)
2. Check the stereo indicator.
3. Connect on oscilloscope to pin⑧ (CH1) of CN1 through band pass filter of 1KHz
4. Adjust RV1 so that 1KHz voltage goes down to the minmum.

H FREQ (RV2)

1. Input a PAL COLOR BAR signal, then connect a jumper between pin⑫ IC4 and GND.
2. Connect a frequency counter to pin④ IFG5.5S (HP) of CN1 through a probe of 10 : 1.
3. Adjust RV2 (H.FREQ) $15.625 \pm 50\text{Hz}$.
4. After adjustment, remove the jamper.

4-2. A1 BOARD ADJUSTMENTS

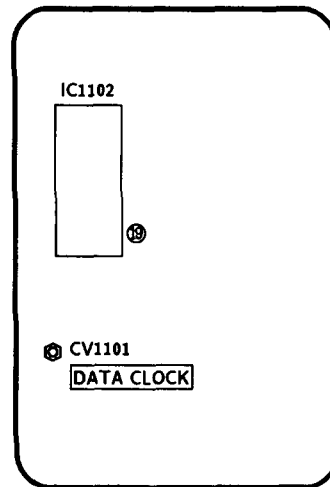


A1 BOARD (COMPONENT SIDE)

DATA CLOCK ADJUSTMENT (CV1101)

1. Tune in a no signal.
2. Connect a frequency counter to pin⑩ of IC1102 (PCLK) through a probe of 10 : 1
3. Adjust CV1101 (DATA CLOCK) so that frequency becomes $728.022\text{KHz} \pm 1\text{Hz}$.

4-3. B1 BOARD ADJUSTMENTS

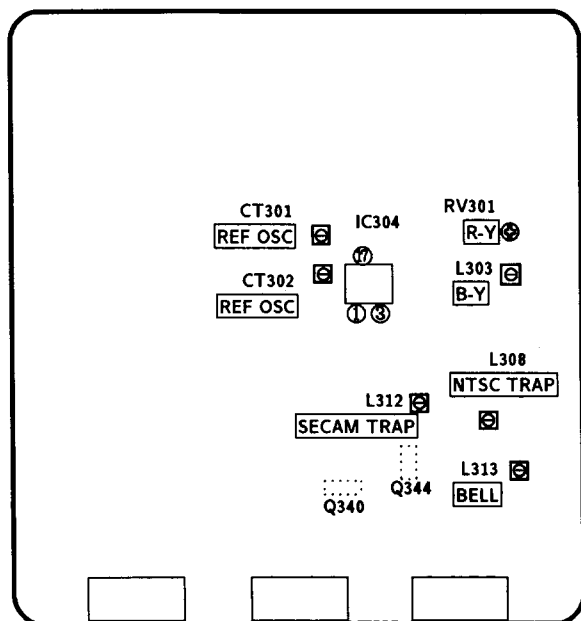

B1 BOARD (COMPONENT SIDE)

REFERENCE OSCILLATOR ADJUSTMENT (CT302 8.8MHz)


1. Input a PAL color bar signal.
2. Ground pin ⑦ of the IC304.
3. Adjust CT302 to obtain synchronization.

REFERENCE OSCILLATOR ADJUSTMENT (CT301 7.16MHz)

1. Input an NTSC color bar signal.
2. Ground pin ⑦ of IC304.
3. Adjust the CT301 to obtain synchronization.
4. Remove the jumper grounding pin ⑦ of IC304.


BELL FILTER ADJUSTMENT (L313)

1. Input a SECAM color bar signal.
2. Connect the oscilloscope to the emitter of Q344.
3. Adjust L313 so that the waveform is flat.

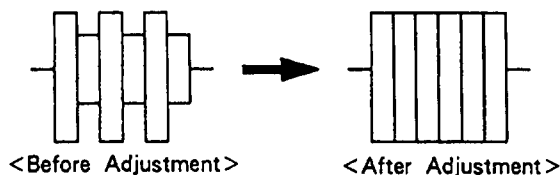


DISCRIMINATION ADJUSTMENTS (RV301 and L303)

1. Input a SECAM color bar signal.
2. Connect the oscilloscope to pin ① of IC304.
3. Adjust RV301 until the white and black sections of the waveform at pin ① are at the 0 level. Connect the oscilloscope to pin ③ of IC304.
4. Adjust L303 until the white and black sections of the waveform at pin ③ are at the 0 level.

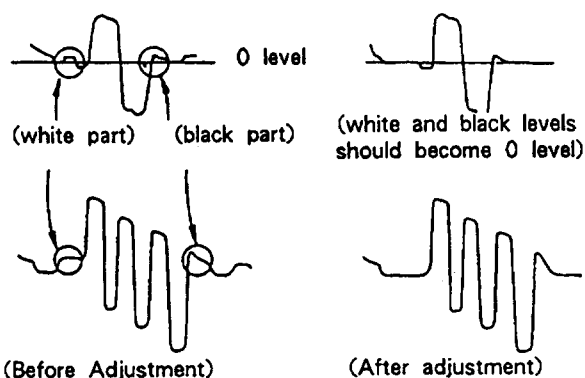


SECAM TRAP (L312)

1. Input a SECAM color bar signal.
2. Connect oscilloscope to Q340 emitter and adjust L312 to minimize color carrier on the Y-signal.

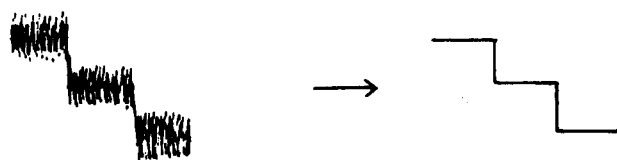


NTSC TRAP (L308)

1. Input a NTSC (3.58) color bar signal.
2. Connect oscilloscope to Q340 emitter and adjust L308 to minimize color carrier on the Y-signal.

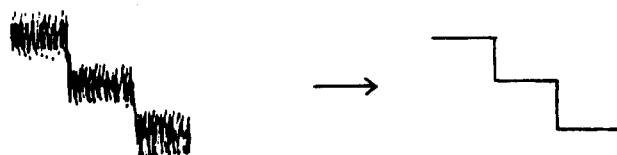

4-4. D BOARD ADJUSTMENTS

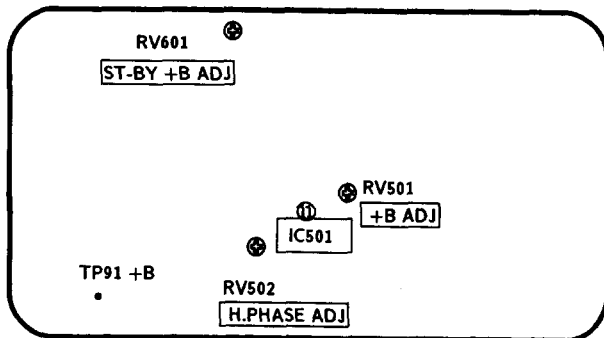

D BOARD (COMPONENT SIDE)

+B ADJUSTMENT (RV501)


1. Connect the digital multimeter to TP91.
2. Adjust RV501 to obtain $135 \pm 0.2V$.

ST-BY +B ADJUSTMENT (RV601)

1. Put the system into $\odot$ standby mode (remote commander).
2. Connect the digital multimeter to TP91.
3. Adjust RV601 to obtain $135 \pm 3V$.
4. Take the system out of $\odot$ standby mode (remote commander).

H.PHASE ADJUSTMENT (RV502)


1. Input a PAL color bar signal.
2. Set the picture and brightness controls to their normal levels.
3. Set RV1508 (H.CENT) to its mechanical center.
4. Connect the oscilloscope to pin ⑪ (SCP) of IC 501.
5. Rotate RV502 to adjust to $H \pm 0.1\mu s$.

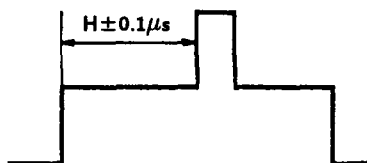




Standard of H. PHASE

Model Size	H
21"	$5.6\mu s$
25"	$5.1\mu s$
29"	$5.5\mu s$


4-5. J1 BOARD ADJUSTMENTS

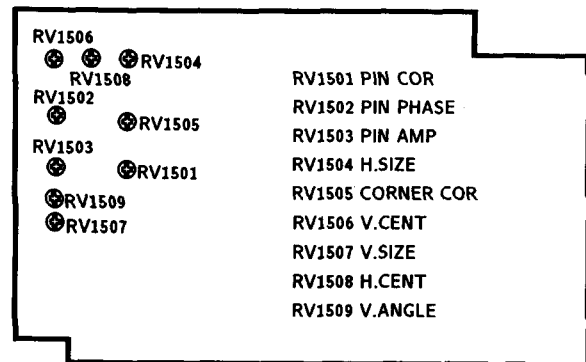

J1 BOARD (COMPONENT SIDE)

RV1508
H. CENT (HORIZONTAL CENTER)RV1504
H. SIZE (HORIZONTAL SIZE)RV1506
V. CENT (VERTICAL CENTER)RV1507
V. SIZE (VERTICAL SIZE)RV1509
V. ANGLE (VERTICAL ANGLE)RV1503
PIN AMP (PINCUSHION AMPLIFIER)RV1502
PIN PHASE (PINCUSHION PHASE)RV1501
PIN. COR (PINCUSHION CORRECT)RV1505
CORNER COR (CORNER CORRECT)

4-6. V BOARD ADJUSTMENT

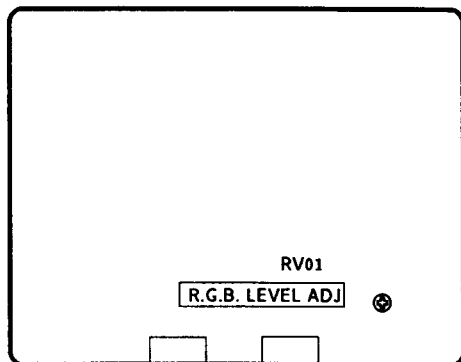

V BOARD (COMPONENT SIDE)

RGB LEVEL ADJUSTMENT (RV01)

1. Maximize the picture setting.
2. Adjust RV01 so that the RGB output is 0.75V.

4-7. SECONDARY ADJUSTMENTS

SUB BRIGHTNESS ADJUSTMENT



1. Set the system to receive a test pattern.
2. Press → • ← on the remote commander to put the system into normal mode.
3. Switch off the power.
4. While depressing the adjusting buttons + and - simultaneously, turn on the power. (SUB mode is obtained)
5. Minimize the ● contrast setting.
6. Adjust the ⚙ brightness control so that the gray scale 0 IRE section is cut off completely and the 20 IRE section is barely glowing.
7. Depress the ◇ (store) button of the remote commander.
(SUB mode is released)


If there is no test color pattern

1. Set the system to receive a color pattern.
2. Press → • ← on the remote commander to put the system into normal mode.
Set the ● color to its normal state.
- 3-5. Steps are the same as above.
6. Since 20 IRE is nearly blue, adjust the ⚙ brightness control so that the blue barely glows.
7. Same as step 7 above.
8. Press → • ← on the remote commander to put the system into normal mode.


SUB COLOR ADJUSTMENT

1. Set the system to receive color bars.
2. Press → • ← on the remote commander to put the system into normal mode.
3. Cut off the power.
4. While depressing the adjustment buttons + and - simultaneously, turn on the power. (SUB mode is obtained).
5. Adjust the color control so that the B out waveform (pin ⑤ of C board connector CNC72) is as shown in the figure below.
6. Depress the ◇ (store) button of the remote commander. (SUB mode is released)

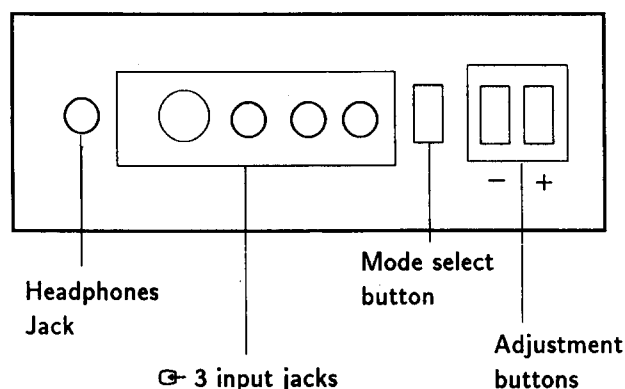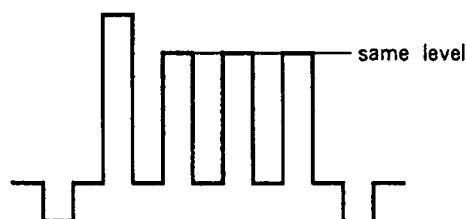



5-2. CIRCUIT BOARDS LOCATION

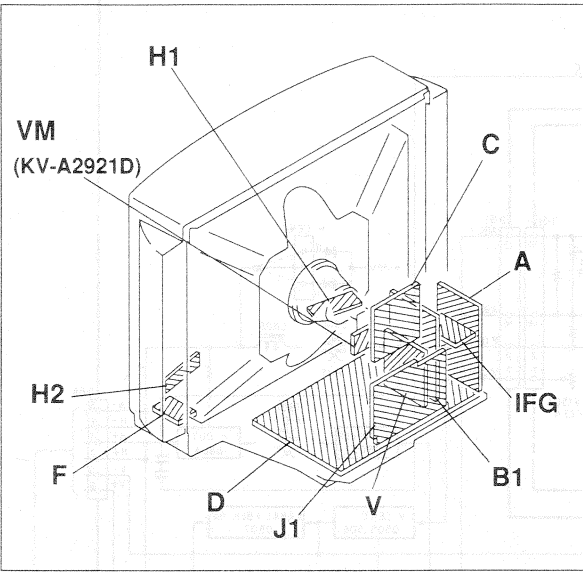

Reference information	
RESISTOR	: RN METAL FILM
	: RC SOLID
	: FPRD NONFLAMMABLE CARBON
	: FUSE NONFLAMMABLE FUSIBLE
	: RW NONFLAMMABLE WIREWOUND
	: RS NONFLAMMABLE METAL OXIDE
	: RB NONFLAMMABLE CEMENT
	: ※ ADJUSTMENT RESISTOR
COIL	: LF-8L MICRO INDUCTOR
CAPACITOR	: TA TANTALUM
	: PS STYROL
	: PP POLYPROPYLENE
	: PT MYLAR
	: MPS METALIZED POLYESTER
	: MPP METALIZED POLYPROPYLENE
	: ALB BIPOLAR
	: ALT HIGH TEMPERATURE
	: ALR HIGH RIPPLE

5-3. PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS

— Conductor Side —

- Note:
- All capacitors are in μF unless otherwise noted.
pF: μF 50WV or less are not indicated except for electrolytics and tantalums.
 - All electrolytics are in 50V unless otherwise specified.
 - All resistors are in ohms.
 $\text{k}\Omega = 1000\Omega$, $\text{M}\Omega = 1000\text{K}\Omega$
 - Indication of resistance, which does not have one for rating electrical power, is as follows.


Pitch: 5 mm
Rating electrical power 1/4W

- METAL FILM (:RN) resistors in 1%, 1/6W unless otherwise specified.
- : nonflammable resistor.
- : internal component.
- : panel designation, or adjustment for repair.
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- : earth-ground.
- : earth-chassis.
- All voltages are in V.
- Voltage are dc with respect to ground unless otherwise noted.
- Readings are taken with a 10-M Ω digital multimeter.
- Readings are taken with a color-bar signal input.
- Voltage variations may be noted due to normal production tolerance.
- : B+ bus.
- : signal path. (RF)
- Circled numbers are waveform references.


Note:
The components identified by shading and mark are critical for safety. Replace only with part number specified.

H1 [CONTROL SW, AV INPUT, HEADPHONE] H2 [SIRCS RECEIVER, INDICATOR] F [AC IN, POWER SW]


— H1 Board —

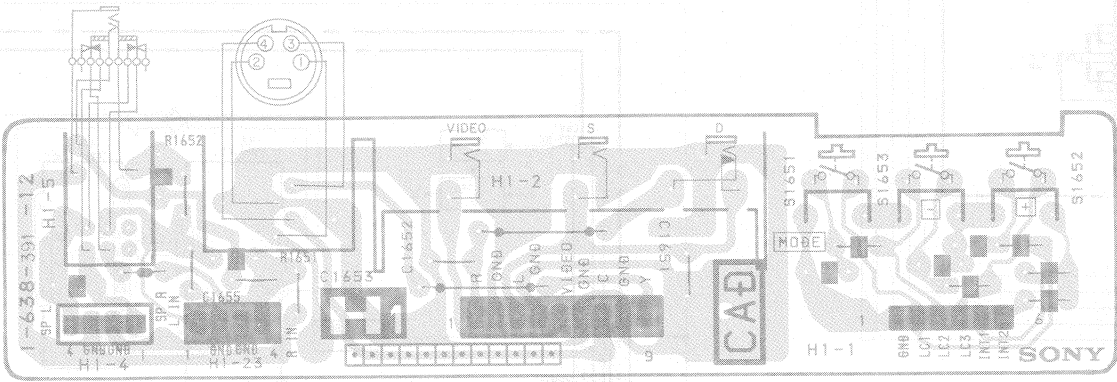

— H2 Board —

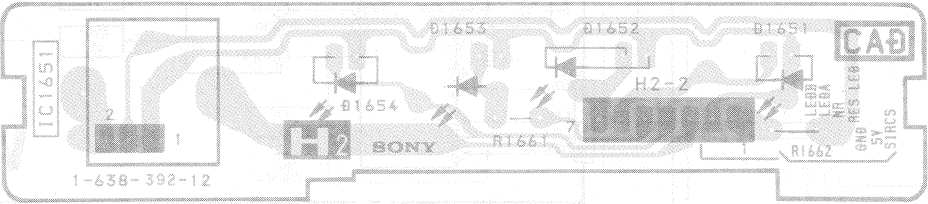

— F Board —

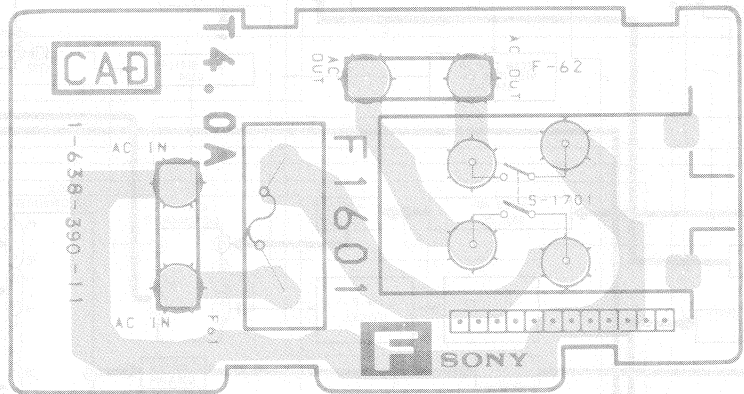


A [TUNER]

— A Board —




A [TUNER, SIF, VIF] **VM** [VM AMP]

— A Board —

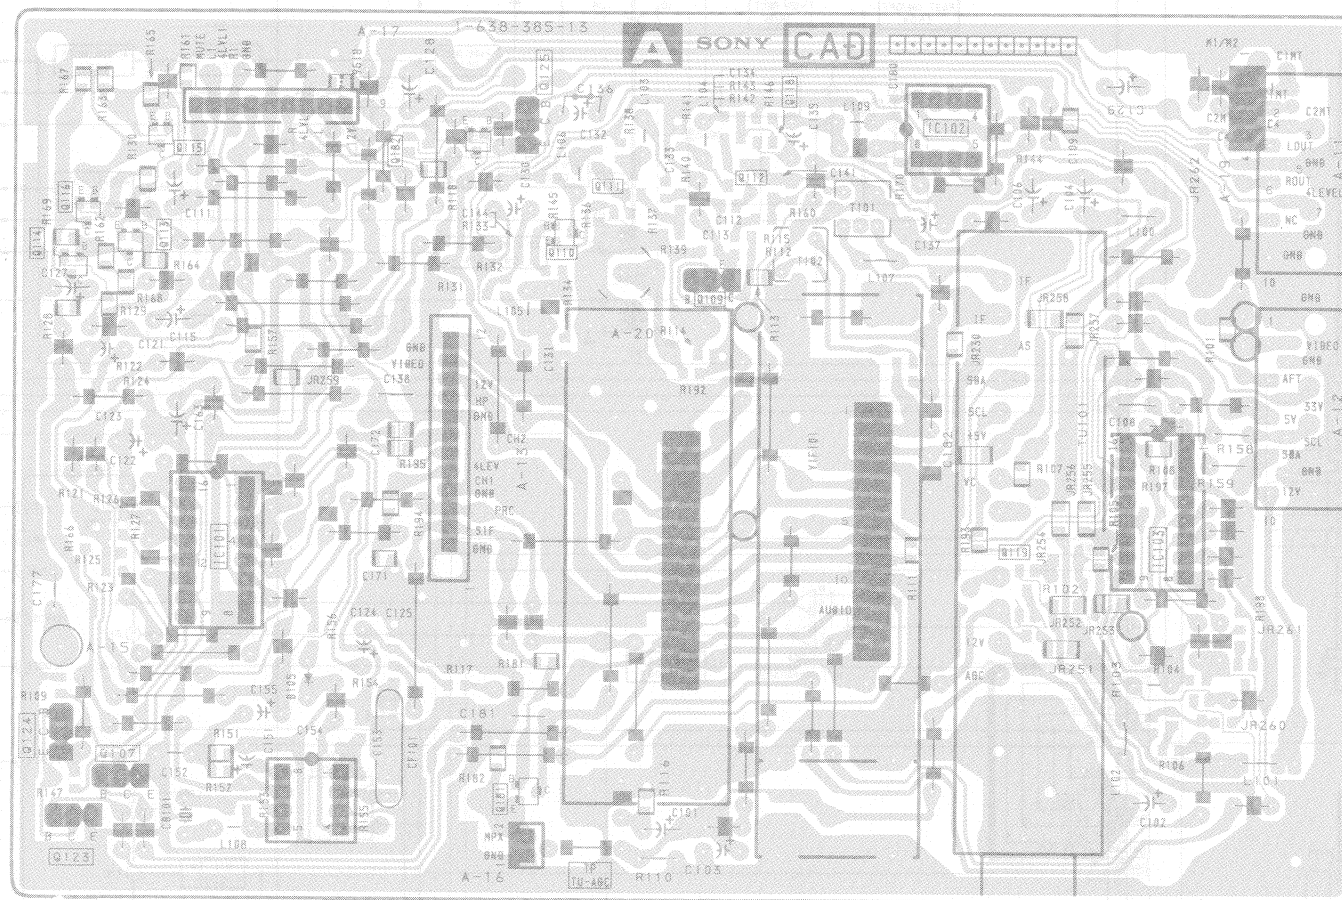



— VM Board — (KV-A2921D ONLY)

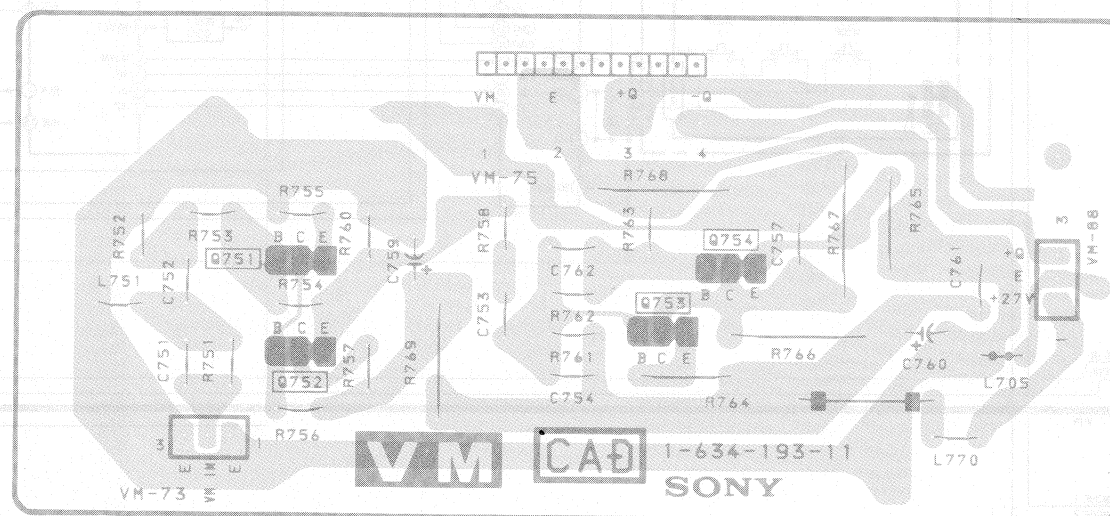

J1 [AUDIO CONTROL, AV INPUT
Y/C INPUT, SCART VIDEO OUT,
EAST-WEST CORRECTION]

— J1 Board —

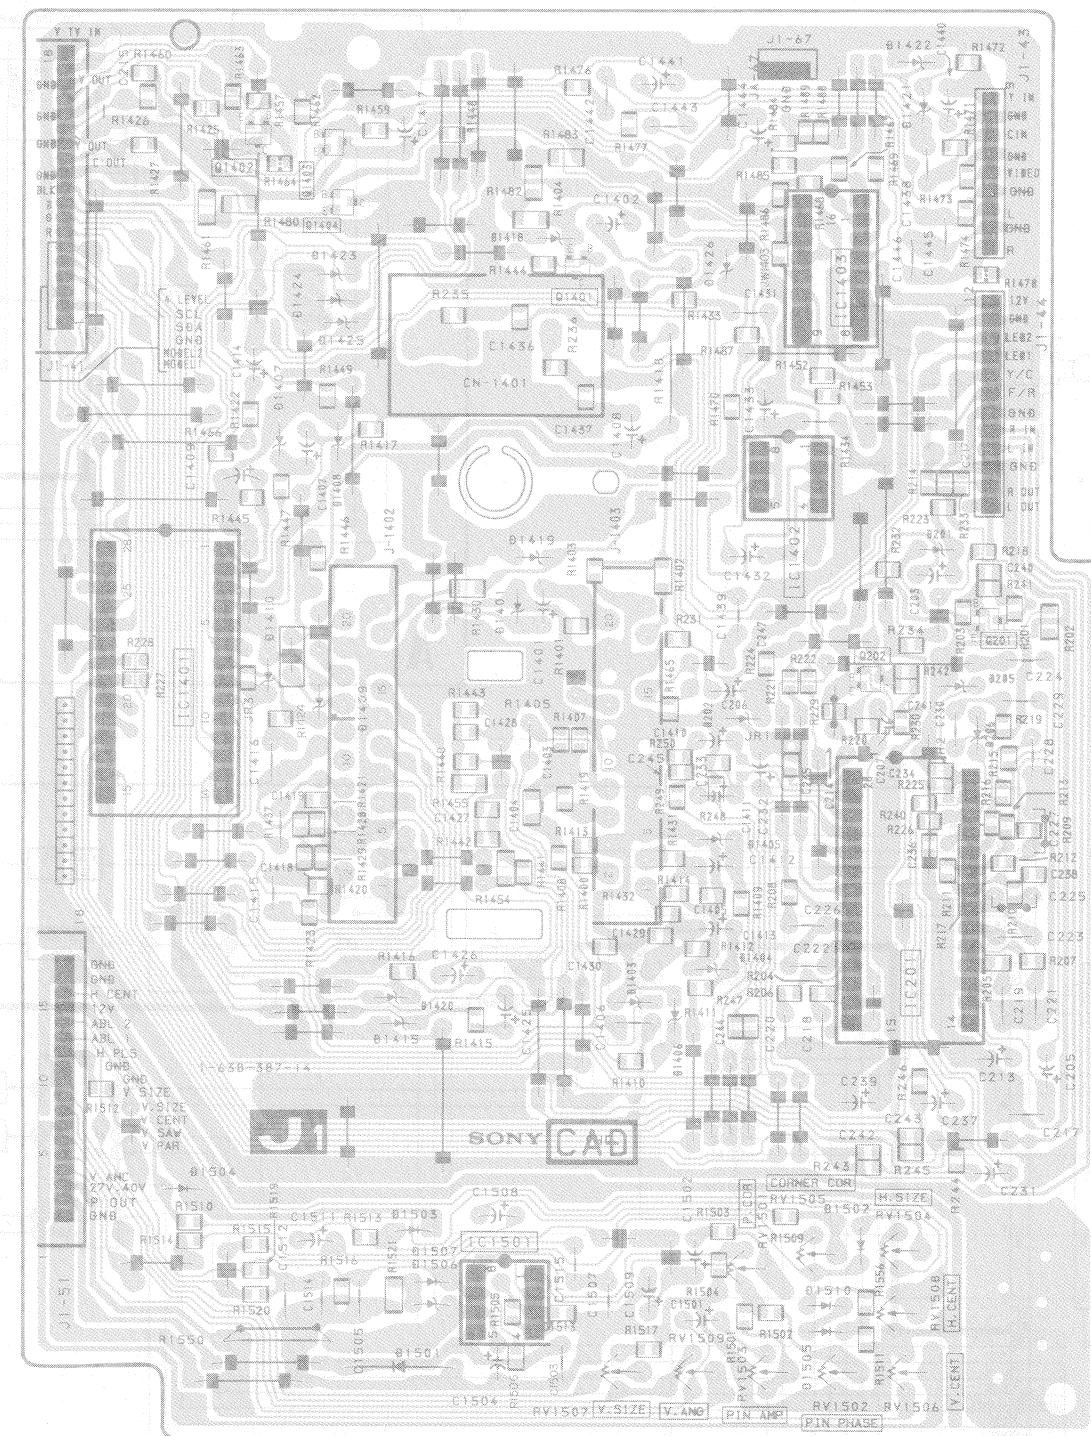

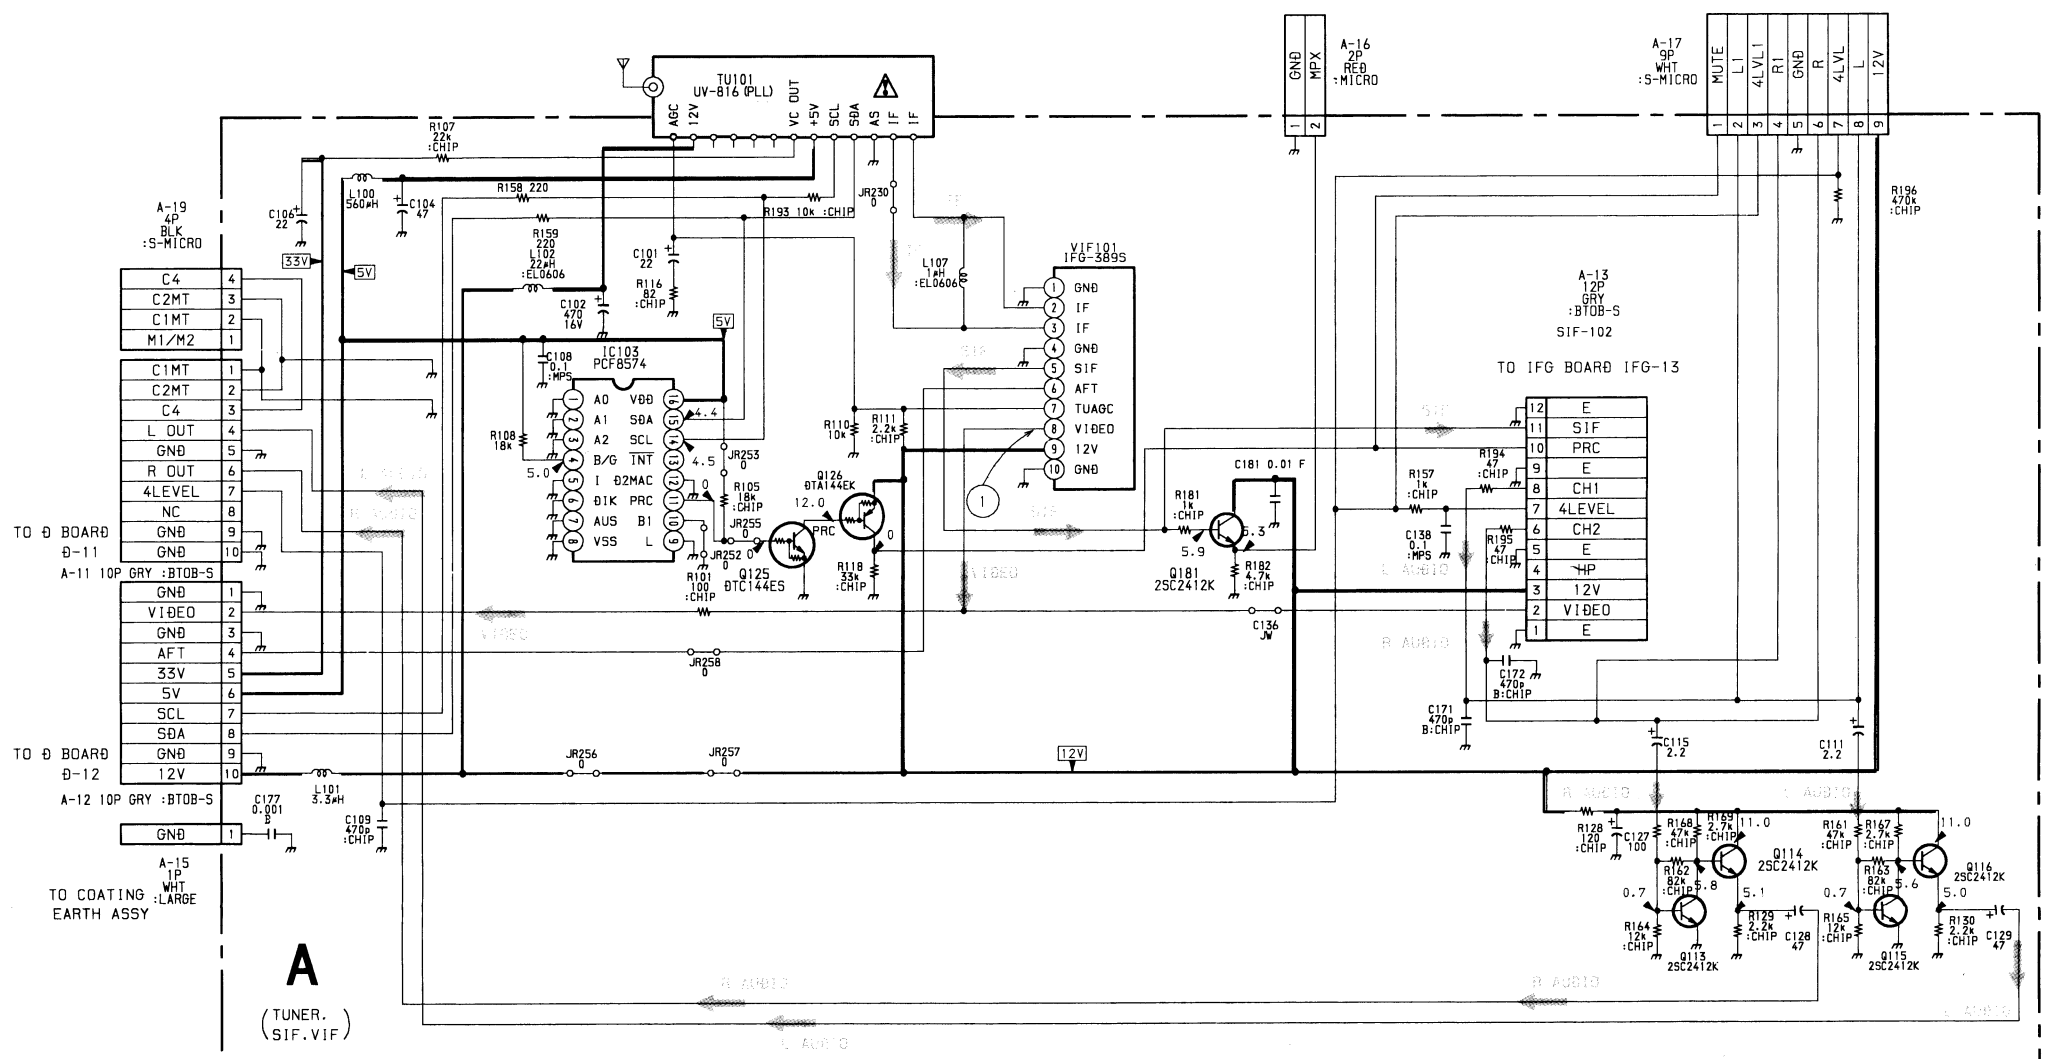


B-SS4172<AEP>-A..



— A Board —

IC103	PCF8574	EXPANDER
Q113	2SC2412K	AU010 AMP
Q114	2SC2412K	AU010 AMP
Q115	2SC2412K	AU010 AMP
Q116	2SC2412K	AU010 AMP
Q125	0TC144ES	MUTE SW
Q126	0TA144EK	MUTE SW
Q181	2SC2412K	NICAM BUFFER


— A Board —

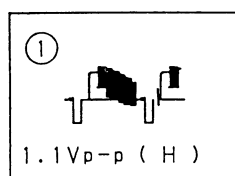

A BOARD IC103 PCF8574

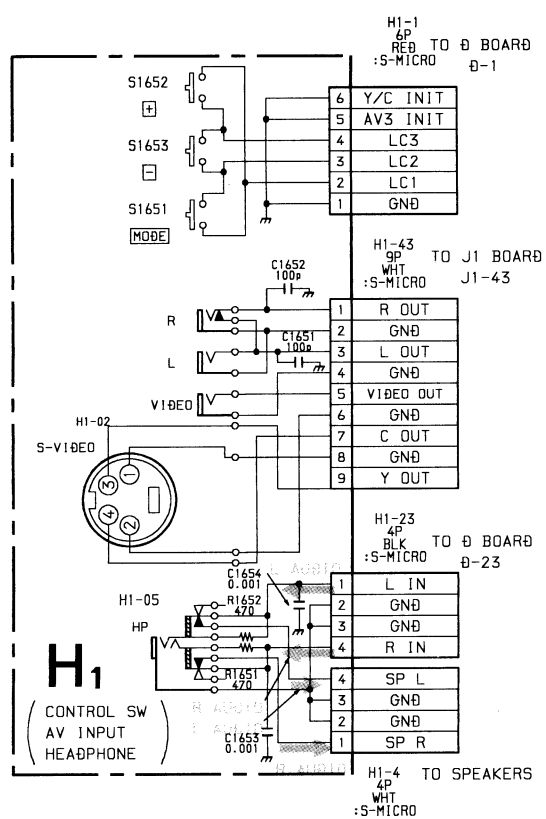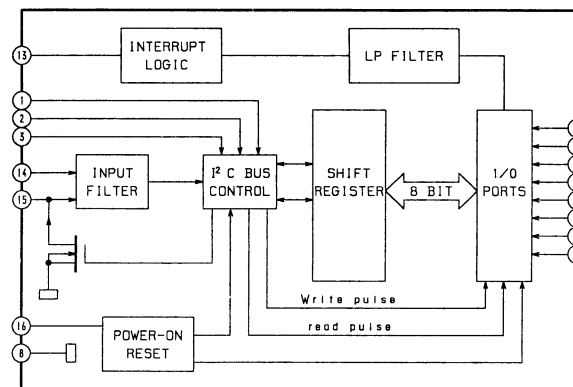

B-SS4161<UK.>-H1.

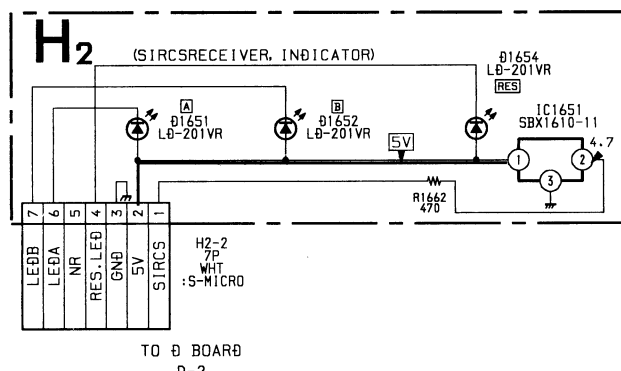



— H2 Board —

IC1651	SBX1610-11	INFRARED RECIVER
Ø1651	LØ-201VR	AUDIO CHANNEL A INDICATOR
Ø1652	LØ-201VR	AUDIO CHANNEL B INDICATOR
Ø1654	LØ-201VR	RESET INDICATOR


— VM Board — (KV-A2921D ONLY)


Q751	JC501	REF-AMP
Q752	JC501	REF-AMP
Q753	25B734	PUSH-PULL
Q754	25Ø774	PUSH-PULL

— VM Board — (KV-A2921D ONLY)

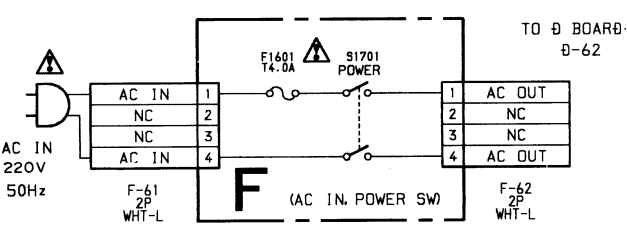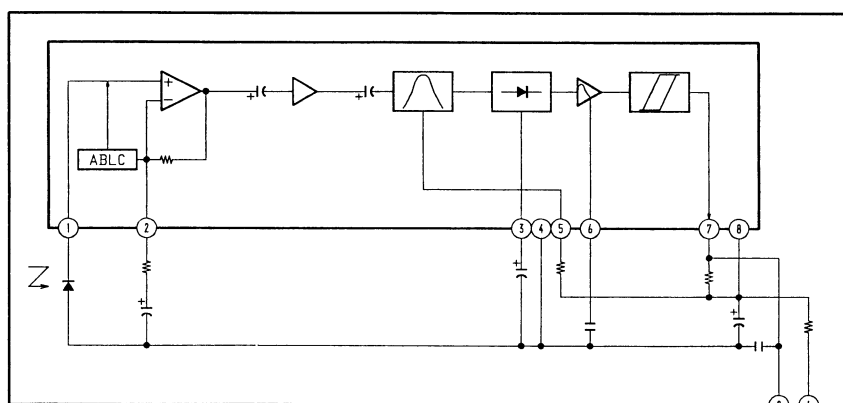

B-SS 4172 <AEP>-F

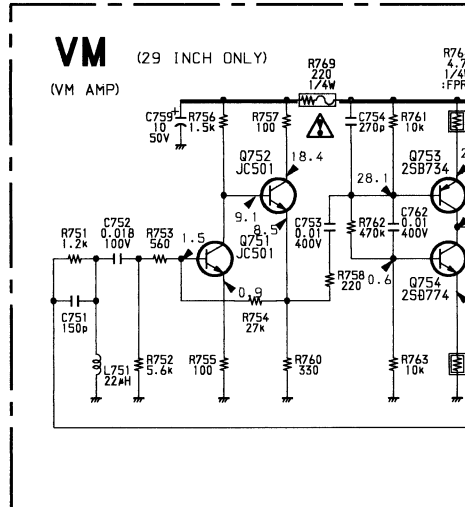


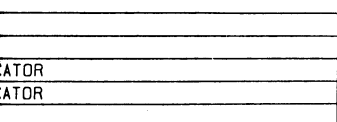


	REF-AMP
	REF-AMP
	PUSH-PULL OUT
	PUSH-PULL OUT


The schematic diagram shows a 27V power supply circuit. It features a transformer with a 27V secondary winding. The primary winding is connected to a 230V AC source. The secondary winding is connected to a bridge rectifier consisting of two diodes, Q753 and Q754. The output of the rectifier is connected to a filter capacitor, C757, which is rated at 0.01F and 200V. The filter capacitor is connected to a 27V Zener diode, R767, which is rated at 820Ω and 1/2W. The Zener diode is connected to ground. The output of the Zener diode is connected to the positive terminal of the power supply. The negative terminal of the power supply is connected to ground. The circuit also includes several resistors: R761 (10k), R762 (470k), R763 (10k), R764 (4.7k), R765 (4.7k), R766 (1.2k), and R768 (2W). Capacitors C754 (270pF) and C762 (0.01F) are used for biasing and filtering. The output voltage is 27V.

	KV-A2121Ø	KV-A2521Ø	KV-A2921Ø
C1512	0.0068 400V	0.0068 400V	—
C1514	0.022 250V	0.022 250V	—
C1515	820P	820P	—
R1515	680K	680K	—
R1520	470K 1/10W	470K 1/10W	390K 1/10W
R1550	JW (15)	JW (15)	1 1W

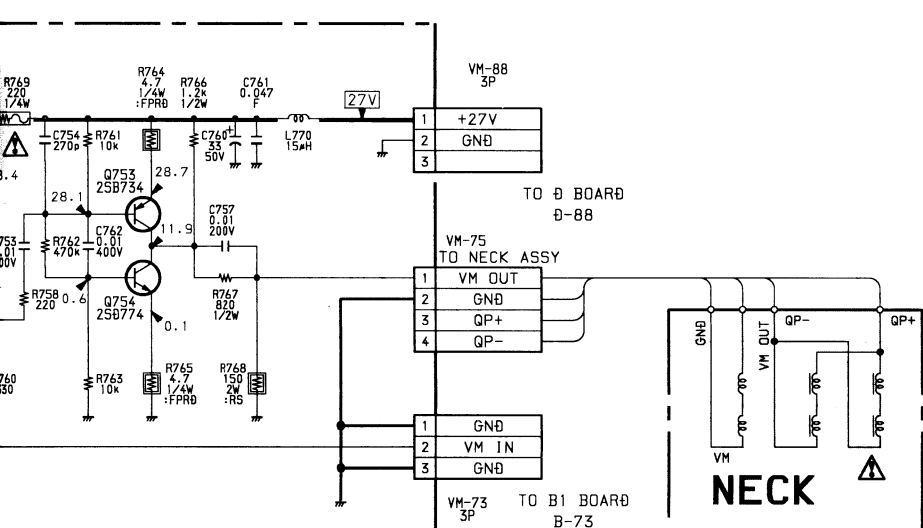


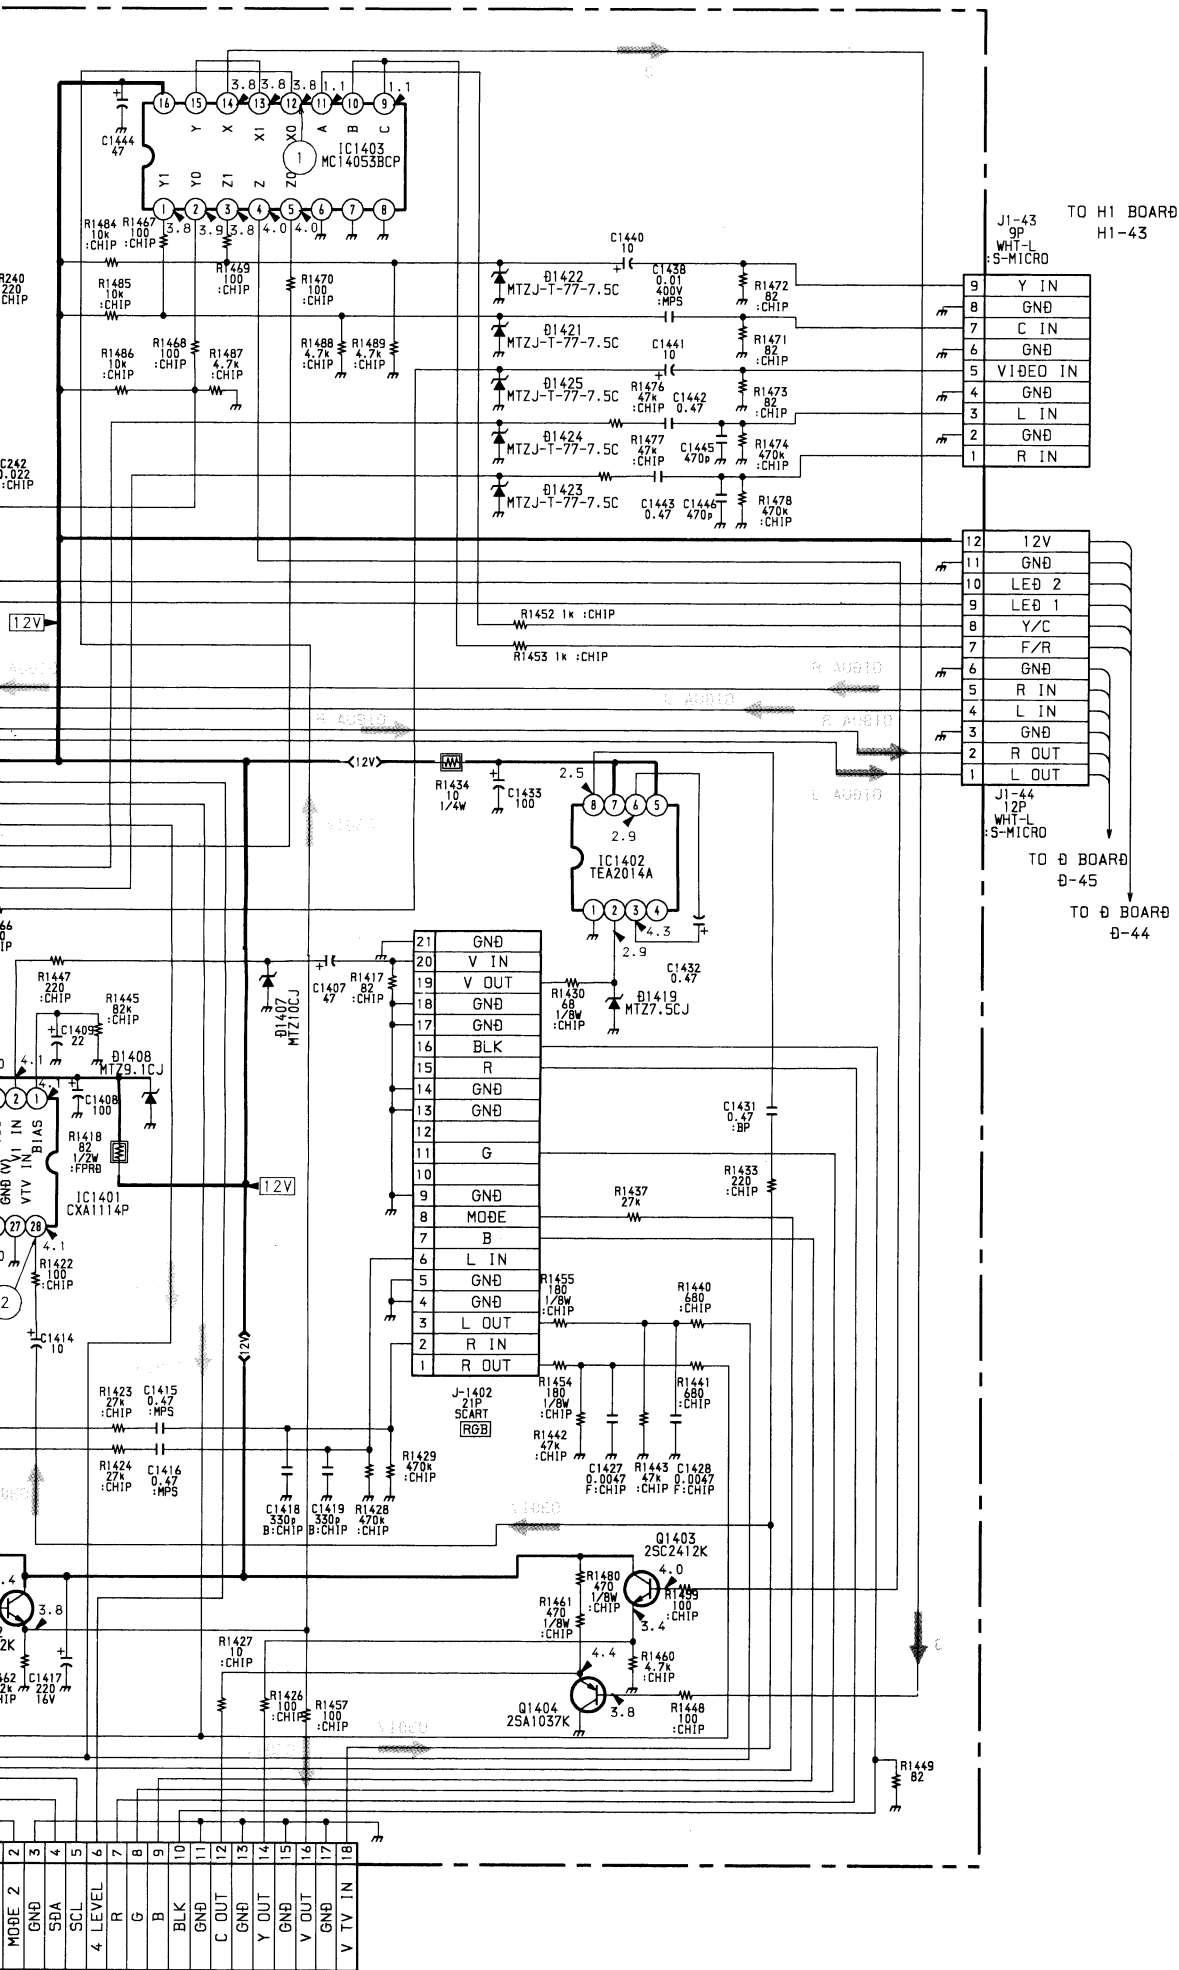


B-SS4161<UK.>-J1.

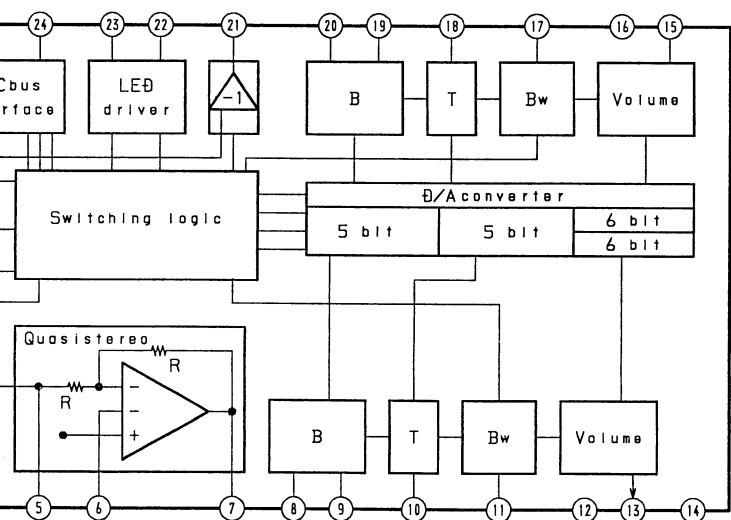

J1 BOARD IC1403 MC14053BCP

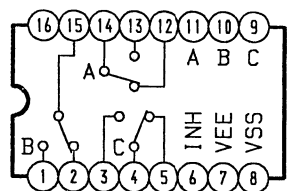


J1 BOARD IC1501 TEA2031A

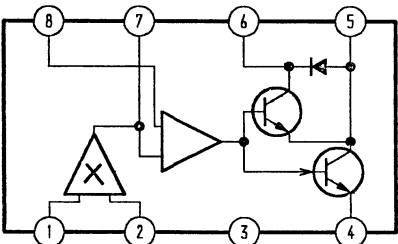


— J1 Board —

IC201	TDA6200	AUDIO CONTROL
IC1401	CXA1114P	AV SW
IC1402	TEA2014A	SCART VIDEO OUT
IC1403	MC14053BCP	COMPOSITE Y/C SW
IC1501	TEA2031A	EAST-WEST CORRECTION
Q201	2SC2412K	AUDIO R BUFF
Q202	2SC2412K	AUDIO L BUFF
Q1401	2SA1037K	VIDEO OUT
Q1402	2SC2412K	VIDEO OUT BUFF
Q1403	2SC2412K	Y OUT BUFF
Q1404	2SA1037K	C OUT BUFF
Ø201	MTZJ-T-77-9.1C	PROTECT
Ø202	MTZJ-T-77-9.1C	PROTECT
Ø205	MTZJ-T-77-7.5C	PROTECT
Ø206	MTZJ-T-77-7.5C	PROTECT
D1401	MTZJ-T-77-7.5C	PROTECT
D1403	MTZJ-T-77-7.5C	PROTECT
D1404	MTZJ-T-77-7.5C	PROTECT
D1405	MTZJ-T-77-7.5C	PROTECT
D1406	MTZJ-T-77-7.5C	PROTECT
D1407	MTZN-T-77-10C	PROTECT
D1408	MTZJ-T-77-9.1C	REG
D1409	MTZJ-T-77-9.1C	PROTECT
D1410	MTZJ-T-77-9.1C	PROTECT
D1415	MTZJ-T-77-7.5C	PROTECT
D1418	MTZJ-T-77-7.5C	PROTECT
D1419	MTZJ-T-77-7.5C	PROTECT
D1420	MTZJ-T-77-7.5C	PROTECT
D1421	MTZJ-T-77-7.5C	PROTECT
D1422	MTZJ-T-77-7.5C	PROTECT
D1423	MTZJ-T-77-7.5C	PROTECT
D1424	MTZJ-T-77-7.5C	PROTECT
D1425	MTZJ-T-77-7.5C	PROTECT
D1426	MTZJ-T-77-7.5C	PROTECT
D1501	RGP10GPKG23	PROTECT
D1502	1SS133	ØCOUPLING H SIZE
D1503	1SS133	CLIPPING V PARABORA
D1504	1SS133	CLIPPING H PULSE
D1505	1SS133	REG
D1506	HZS36NB4TØ	PROTECT
D1507	1SS133	PROTECT
D1510	1SS133	REG


— J1 Board —

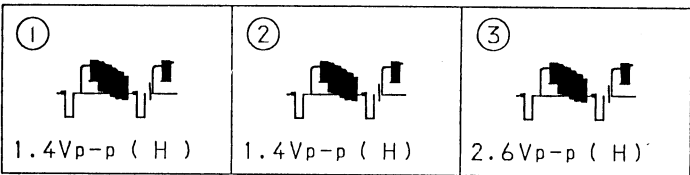

J1 BOARD IC1401 CXA1114P

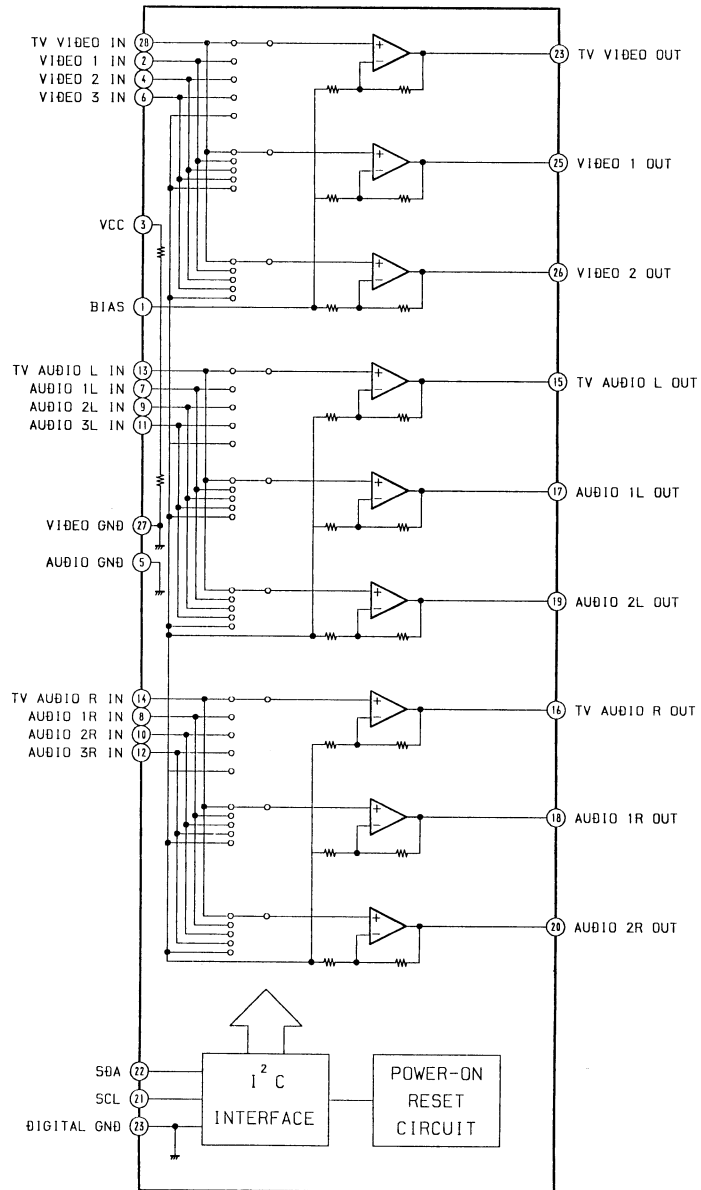
















J1 BOARD IC1402 TEA2014A

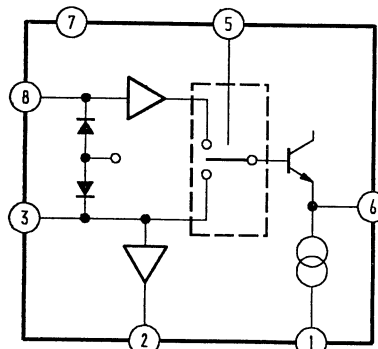


	KV-A2121D	KV-A2521D	KV-A2921D
C519	0.47	0.47	0.33
C526	27P	27P	22P
C536	4.7 16V	10 16V	10 16V
C617	220 25V	100 50V	100 50V
C620	1 63V	0.47 50V	0.47 50V
C811	1 200V	2 200V	2 200V
C815	1 200V	1 200V	0.82 200V
C817	0.0106 1.4KV	0.015 1.4KV	0.017 1.4KV
C821	680P 2KV	680P 2KV	470P 2KV
R525	1K 1/10W	1K 1/10W	—
R531	—	120K 1/10W	120K 1/10W
R532	—	—	—
R533	180 1/10W	0 1/10W	0 1/10W
R535	4.7M 1/4W	2.2M 1/4W	2.2M 1/4W
R545	39K 1/10W	22K 1/10W	22K 1/10W
R547	5.6K 1/10W	3.3K 1/10W	3.3K 1/10W
R548	1.2 1W	1 1W	1 1W
R549	470 2W	390 2W	390 2W
R552	1.2K 1W	—	—
R561	—	—	270K 1/10W
R570	—	—	680 1/10W
R600	—	1 1/4W	1 1/4W
R603	15 3W	12 3W	12 3W
R607	4.7K 1/10W	4.7K 1/10W	5.6K 1/10W
R631	27K 2W	27K 2W	—
R643	0.15 2W	0.12 2W	0.12 2W
R811	100 1W	22 2W	22 2W
R812	75K 1/2W	68K 1/2W	51K 1/2W
R825	1 1W	0.47 1W	0.47 1W
R5503	4.7 1/10W	4.7 1/10W	10 1/10W
R5506	—	—	12K 1/10W
JW202	—	—	5MM
JW203	5MM	5MM	—
JW204	5MM	5MM	—
JW205	—	—	5MM
JW206	5MM	5MM	—
JW207	5MM	5MM	—
JW216	15MM	15MM	—
JW229	10MM	10MM	—
L801	—	—	3.9MH
Ø88	—	—	3P CONNECTOR
Ø271	MTZJ12C	MTZJ13B	MTZJ13B
Ø506	ØA204K	ØA204K	—
Ø509	—	1SS133	1SS133
Ø514	JW (5)	JW (5)	1SS133
Ø515	—	—	1SS133
Ø807	—	ERC06-15S	ERC06-15S
Ø808	ERØ28-Ø8S	ERØ29-Ø8J	ERØ29-Ø8J

1C001	SØA20560-A012	TUNING CTL
1C002	MC14051BCP	ON SCREEN DISPLAY
1C003	BA4558	AFT COMPARATOR
1C005	SØA2546	MY MEMORY
1C251	TØA2050	AUDIO OUT (L)
1C261	TØA2050	AUDIO OUT (R)
1C501	TEA2028B	DEFLECTION PROCESSOR
1C502	TØA8170	V OUT
1C601	TEA2260	PRIMARY SMRS CTL
1C604	TEA7605	+5V REG
1C608	MC7812CT	+12V REG
Q001	ØTC144EK	50/60Hz SW
Q002	ØTC144EK	BLK SW
Q003	2SA1037K	SYNC SEPARATOR
Q004	2SA1037K	SYNC SEPARATOR
Q005	ØTC144EK	Y/C SW
Q006	ØTC144EK	FRONT/REAR SW
Q007	2SC2412K	MODE 2 SWITCH
Q008	2SC2412K	MODE 1 SWITCH
Q009	2SC2412K	MUTE SW
Q010	2SC2412K	RESET
Q251	2SC2412K	AUDIO MUTE
Q261	2SC2412K	AUDIO MUTE
Q271	2SC2412K	VOLTAGE ØTECT
Q502	2SA1037K	CONSTANT CURRENT SOURCE
Q505	2SØ774	V CENT
Q506	2SØ734	V CENT
Q507	2SA1037K	CANAL +BLK
Q598	2SA1037K	VIDEO AMP
Q601	2SØ1357T114EF	STBY SW
Q602	2SØ1548	REG OUT
Q603	2SØ1357T114EF	STBY SW
Q604	2SA1037K	FAST ON/OFF
Q605	2SC2412K	STBY SW
Q606	2SC2412K	STBY SW
Q607	2SØ2096-EF	+12V REG
Q608	2SC2412K	STBY SW
Q609	2SØ789-3	STBY SW
Q801	2SC2412K	ABL AMP
Q804	2SØ1941	H OUT
Q805	2SC2688	H DRIVER


Ø001	MTZJ6.8C	PROTECT
Ø002	MTZJ6.8C	PROTECT
Ø003	1SS133	HUE CTL
Ø005	MTZJ5.6B	PROTECT
Ø006	MTZJ33A	VC VOLTAGE REGULATION
Ø007	MTZJ3.9B	PROTECT RESET
Ø009	MTZJ5.6B	CLIPPING SYNC LEVEL
Ø010	MTZJ6.2B	PROTECT
Ø011	MTZJ6.2B	PROTECT
Ø012	1SS133	PROTECT
Ø013	MTZJ6.8C	PROTECT
Ø271	RD12ES-B2	VOLTAGE ØTECT (21 INCH ONLY)
Ø271	MTZJ13B	VOLTAGE ØTECT (25/29 INCH ONLY)
Ø272	1SS133	ØCOUPING MUTE AUDIO
Ø501	1SS133	SOFT START
Ø504	GPØ8ØPKG23	V PULSE OUT
Ø506	ØA204K	CURRENT REG (21/25 INCH ONLY)
Ø508	1SS133	CANAL +BLK LEVEL
Ø509	1SS133T-77	V LIN (25/29 INCH ONLY)
Ø511	GPØ8ØPKG23	PROTECT
Ø512	GPØ8ØPKG23	PROTECT
Ø513	MTZJ4.7B	PROTECT
Ø514	1SS133T-77	PROTECT (29 INCH ONLY)
Ø515	1SS133T-77	PROTECT (29 INCH ONLY)
Ø601	Ø4SØ6ØL-F	AC RECT
Ø602	RGP1ØGPKG23	REF RECT
Ø603	GPØ8ØPKG23	SMPS ØRIVE 1
Ø604	GPØ8ØPKG23	SMPS ØRIVE 2
Ø605	GPØ8ØPKG23	SMPS ØRIVE 3
Ø606	RGP1ØGPKG23	+12V RECT
Ø607	RGP1ØGPKG23	REF RECT
Ø608	ERC25-Ø6S	PLUSE CLIPPER
Ø609	MTZJ33A	FAST ON/OFF
Ø610	CTU-12S	+14V RECT
Ø611	ERØ29-Ø8J	+135V RECT
Ø612	CTU-12S	+7V RECT
Ø613	RGP15J-6Ø4ØG23	AF V RECT-1
Ø614	RGP15J-6Ø4ØG23	AF V RECT-2
Ø616	MTZJ6.2B	+12V REG
Ø617	1SS133	PROTECT
Ø618	MTZJ5.6B	+12V REF
Ø619	MTZJ33A	FAST ON/OFF-2
Ø620	ØA204K	+12V REF
Ø621	MTZJ33A	FAST ON/OFF-3
Ø622	1SS133	PROTECT
Ø623	1SS133	ØCOUPING STBY
Ø624	1SS133	ØCOUPING ØTBY
Ø630	MTZJ15A	+12V RECT
Ø801	RGP1ØGPKG23	+27V RECT
Ø802	RGP1ØGPKG23	+200V RECT
Ø803	RGPØ2-17PKG23	G2 RECT
Ø804	GPØ8ØPKG23	H CENTER-1
Ø805	GPØ8ØPKG23	H CENTER-2
Ø806	ERC06-15S	H ØAMPER-1
Ø807	ERC06-15S	H ØAMPER-2 (25/29 INCH ONLY)
Ø808	ERØ28-Ø8S	PIN ØAMPER (21 INCH ONLY)
Ø808	ERØ29-Ø8S	PIN ØAMPER (25/29 INCH ONLY)

①  1.4Vp-p (H)	②  3.0Vp-p (V)	③  5.0Vp-p (V)
④  3.0Vp-p (V)	⑤  4.4 Vp-p (H)	⑥  11.0Vp-p (H)
⑦  15.0Vp-p (H)	⑧  3.6Vp-p (H)	⑨  0.8Vp-p (503KMz)
⑩  1.4Vp-p (H)	⑪  0.8Vp-p (V)	⑫  2.2Vp-p (V)
⑬  32.0 Vp-p (V)	⑭  28.0Vp-p (V)	⑮  3.6Vp-p (H)
⑯  250Vp-p (H)	⑰  12.0Vp-p (H)	⑱  1400Vp-p (H)
⑲  220Vp-p (H)	⑳  7.0Vp-p (V)	㉑  54.0Vp-p (V)
㉒  1.4Vp-p (H)	㉓  4.4 Vp-p (12MHz)	



	KV-A2121D	KV-A2521D	KV-A2921D
V901	A51JXH61X	A59JWC61X	A68JYL61X

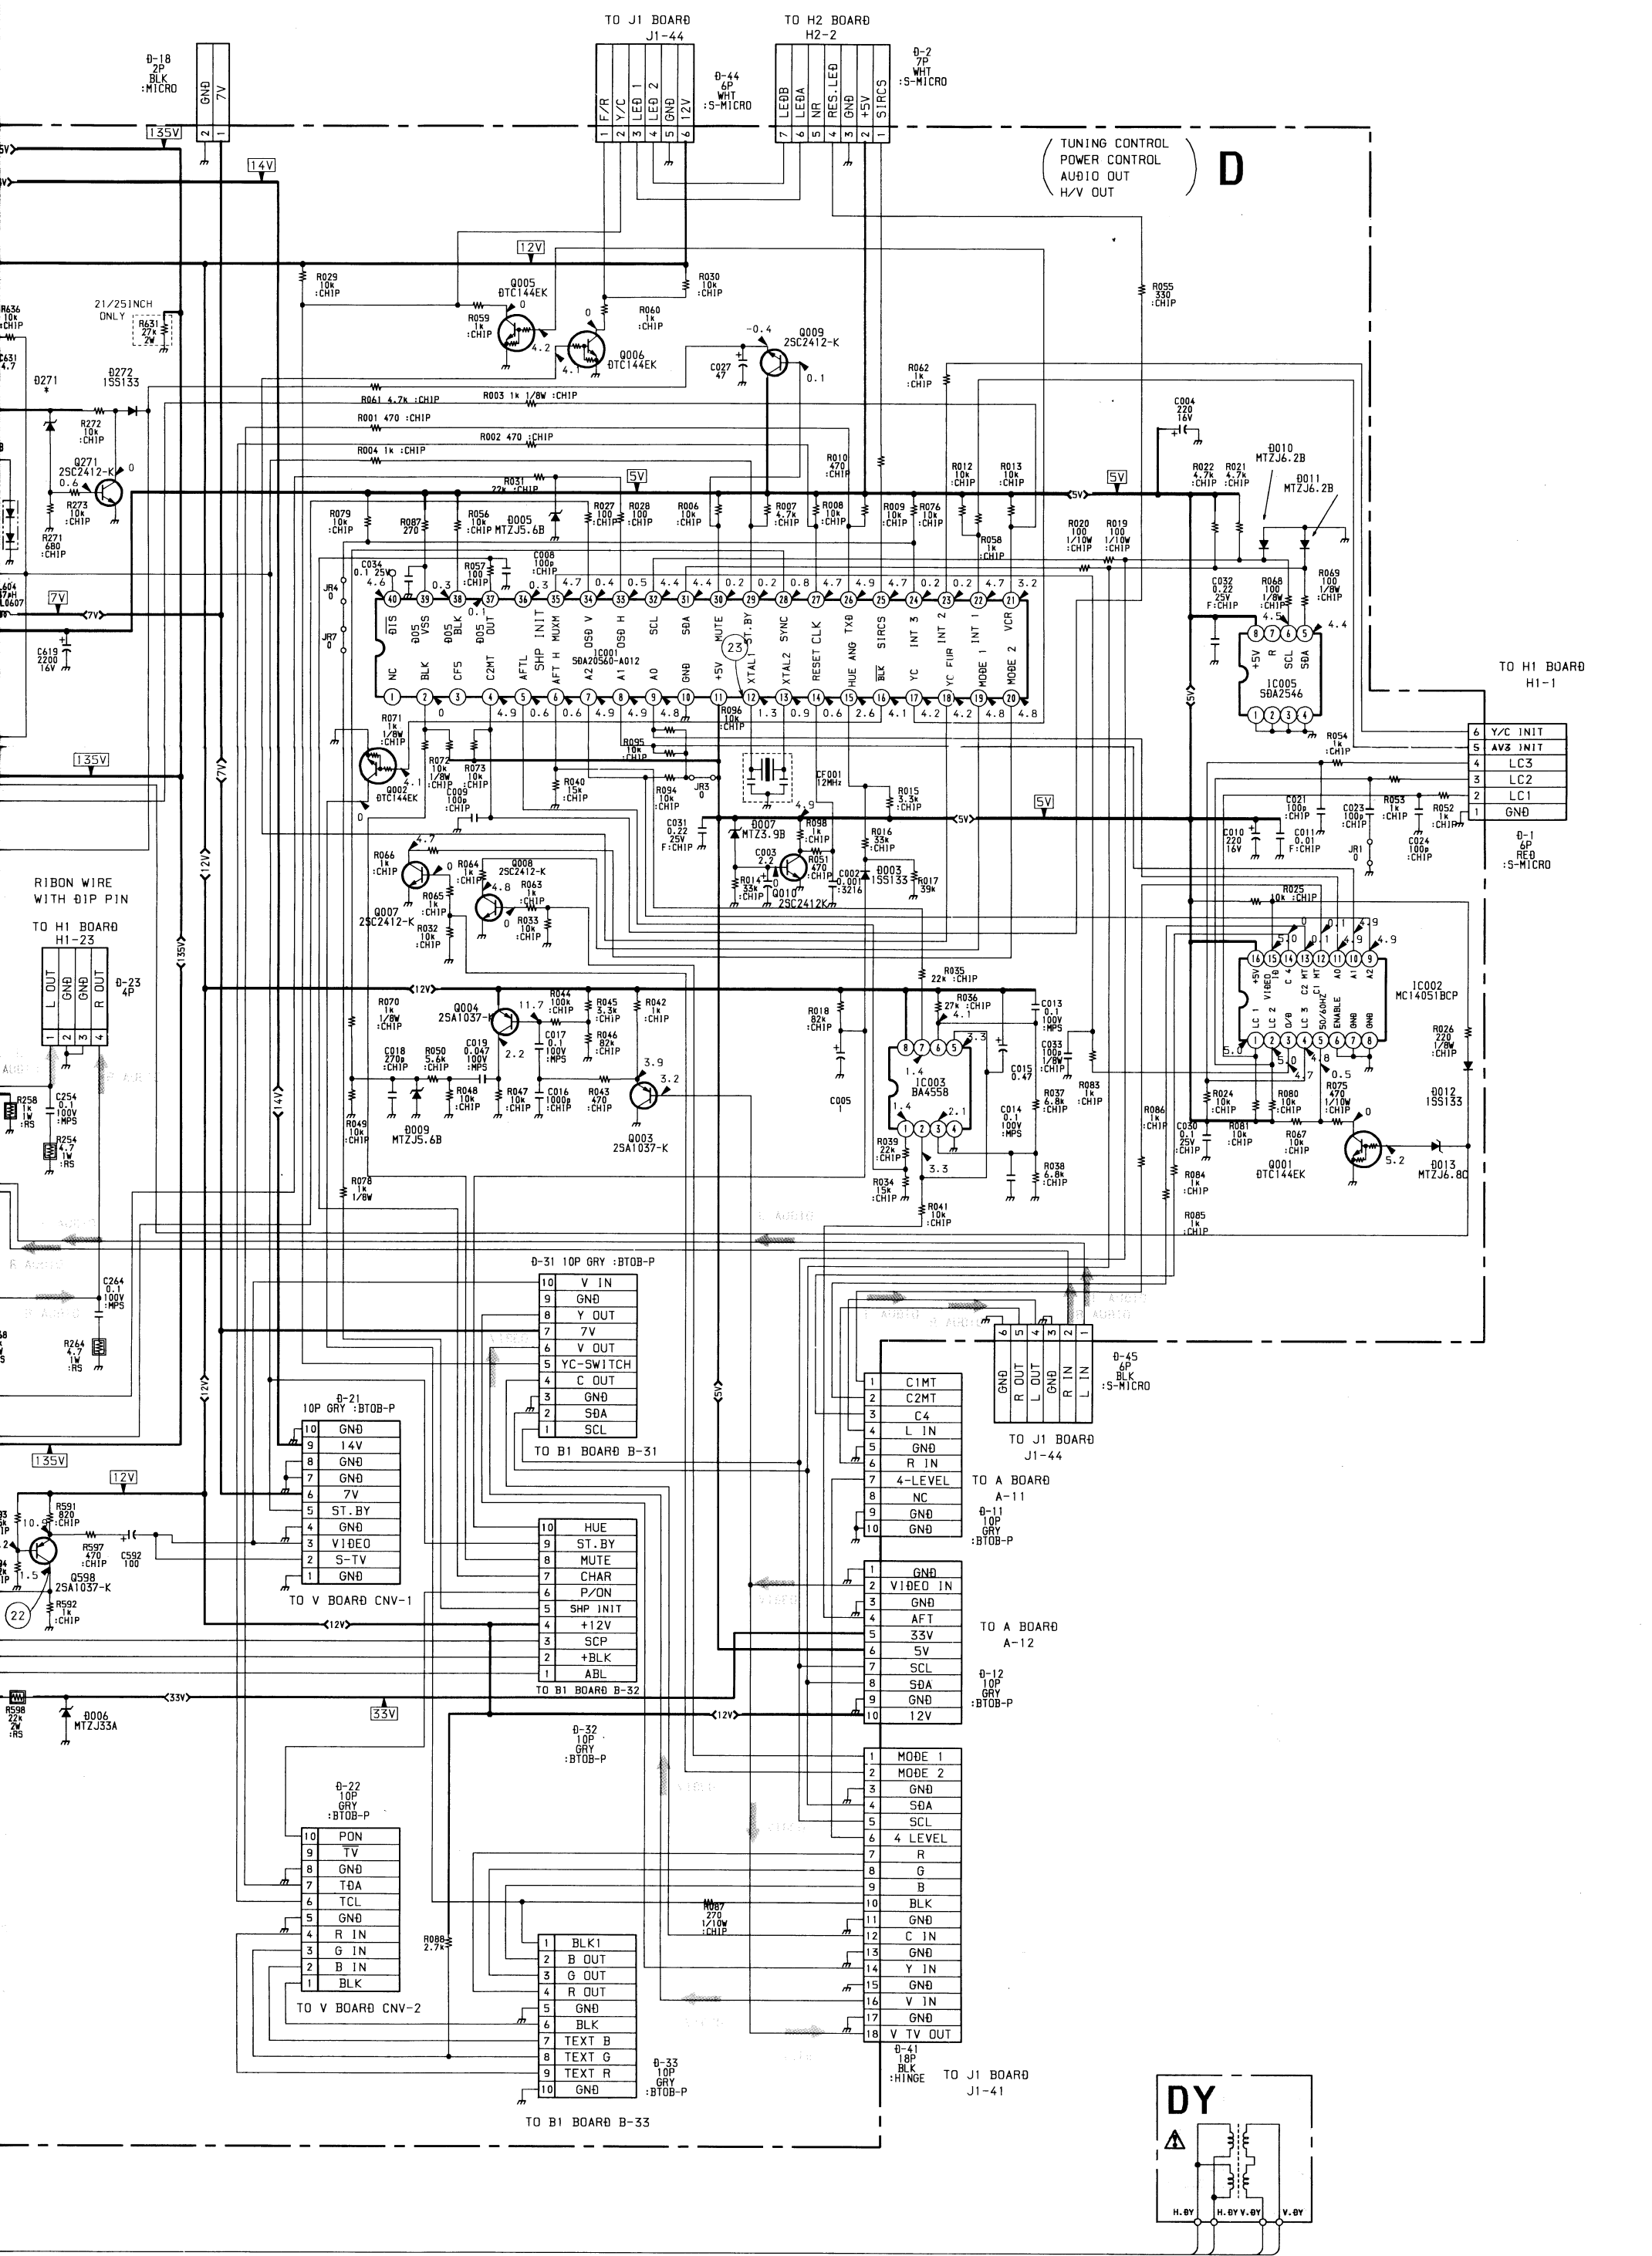

D BOARD IC251/261 TDA2050

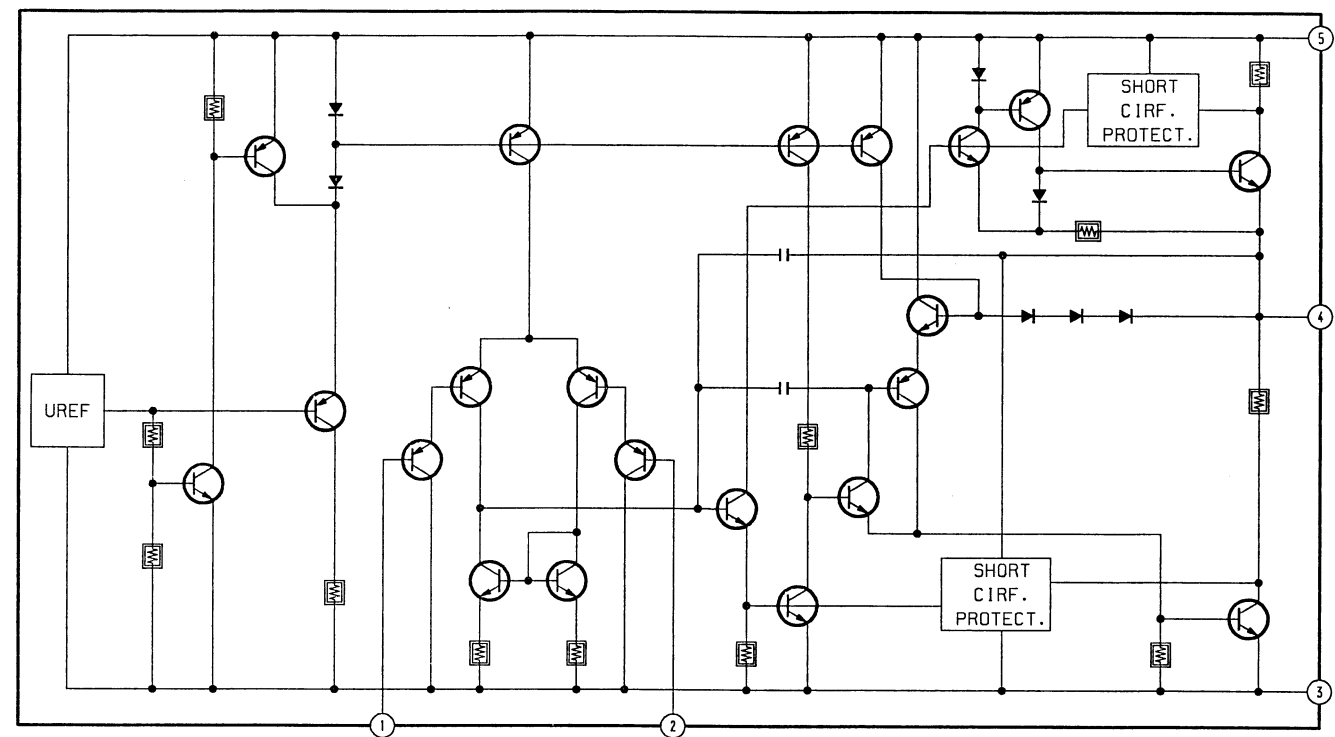


D BOARD IC502 TDA8170

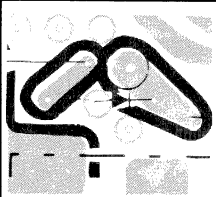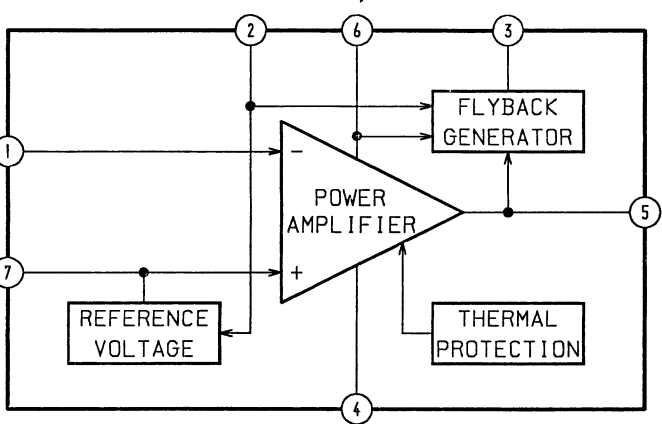


NOTE:
The circuit indicated as left contains high voltage of over 600 Vp-p. Care must be paid to prevent an electric shock in inspection or repairing.

D BOARD IC501 TEA2028B

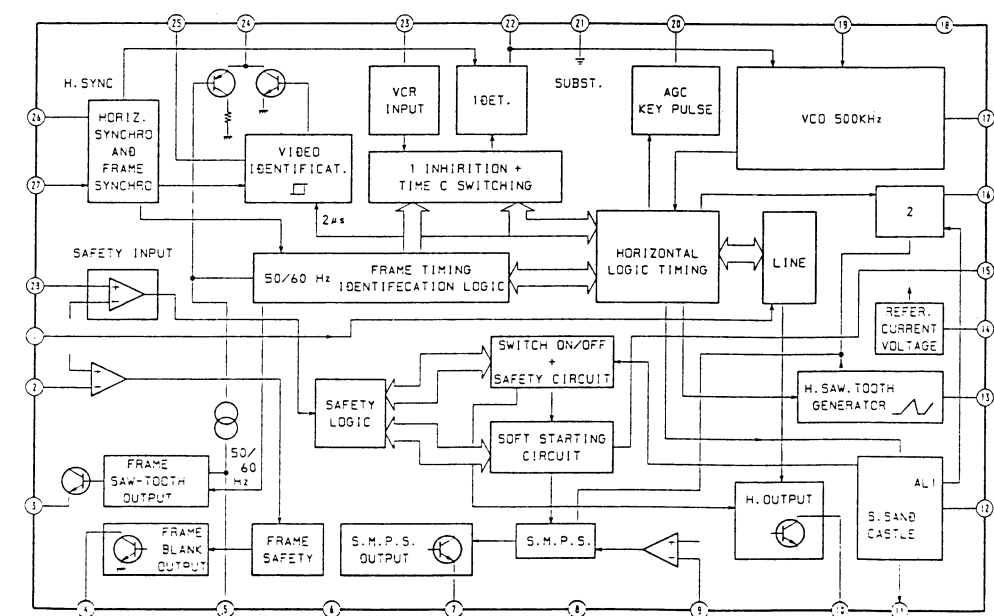


D BOARD IC601 TEA2260

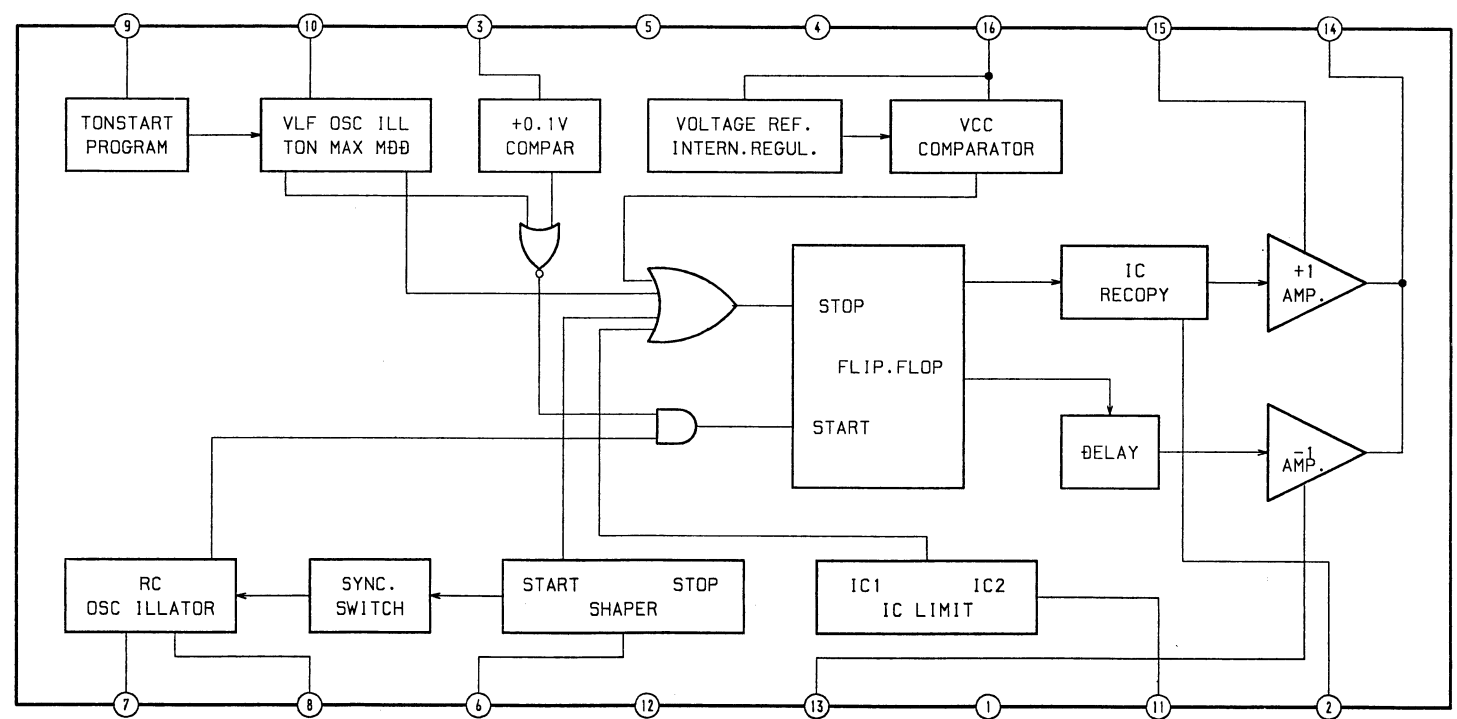


D

TUNING CONTROL, POWER CONTR
AUDIO OUT, H/V OUT

— D Board —

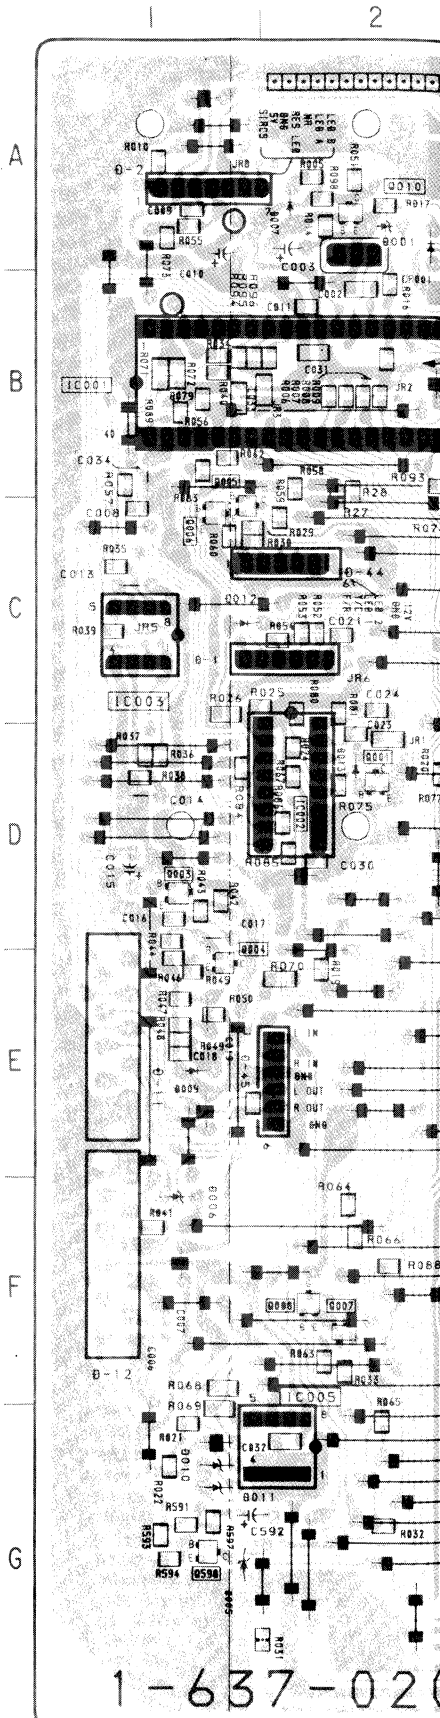


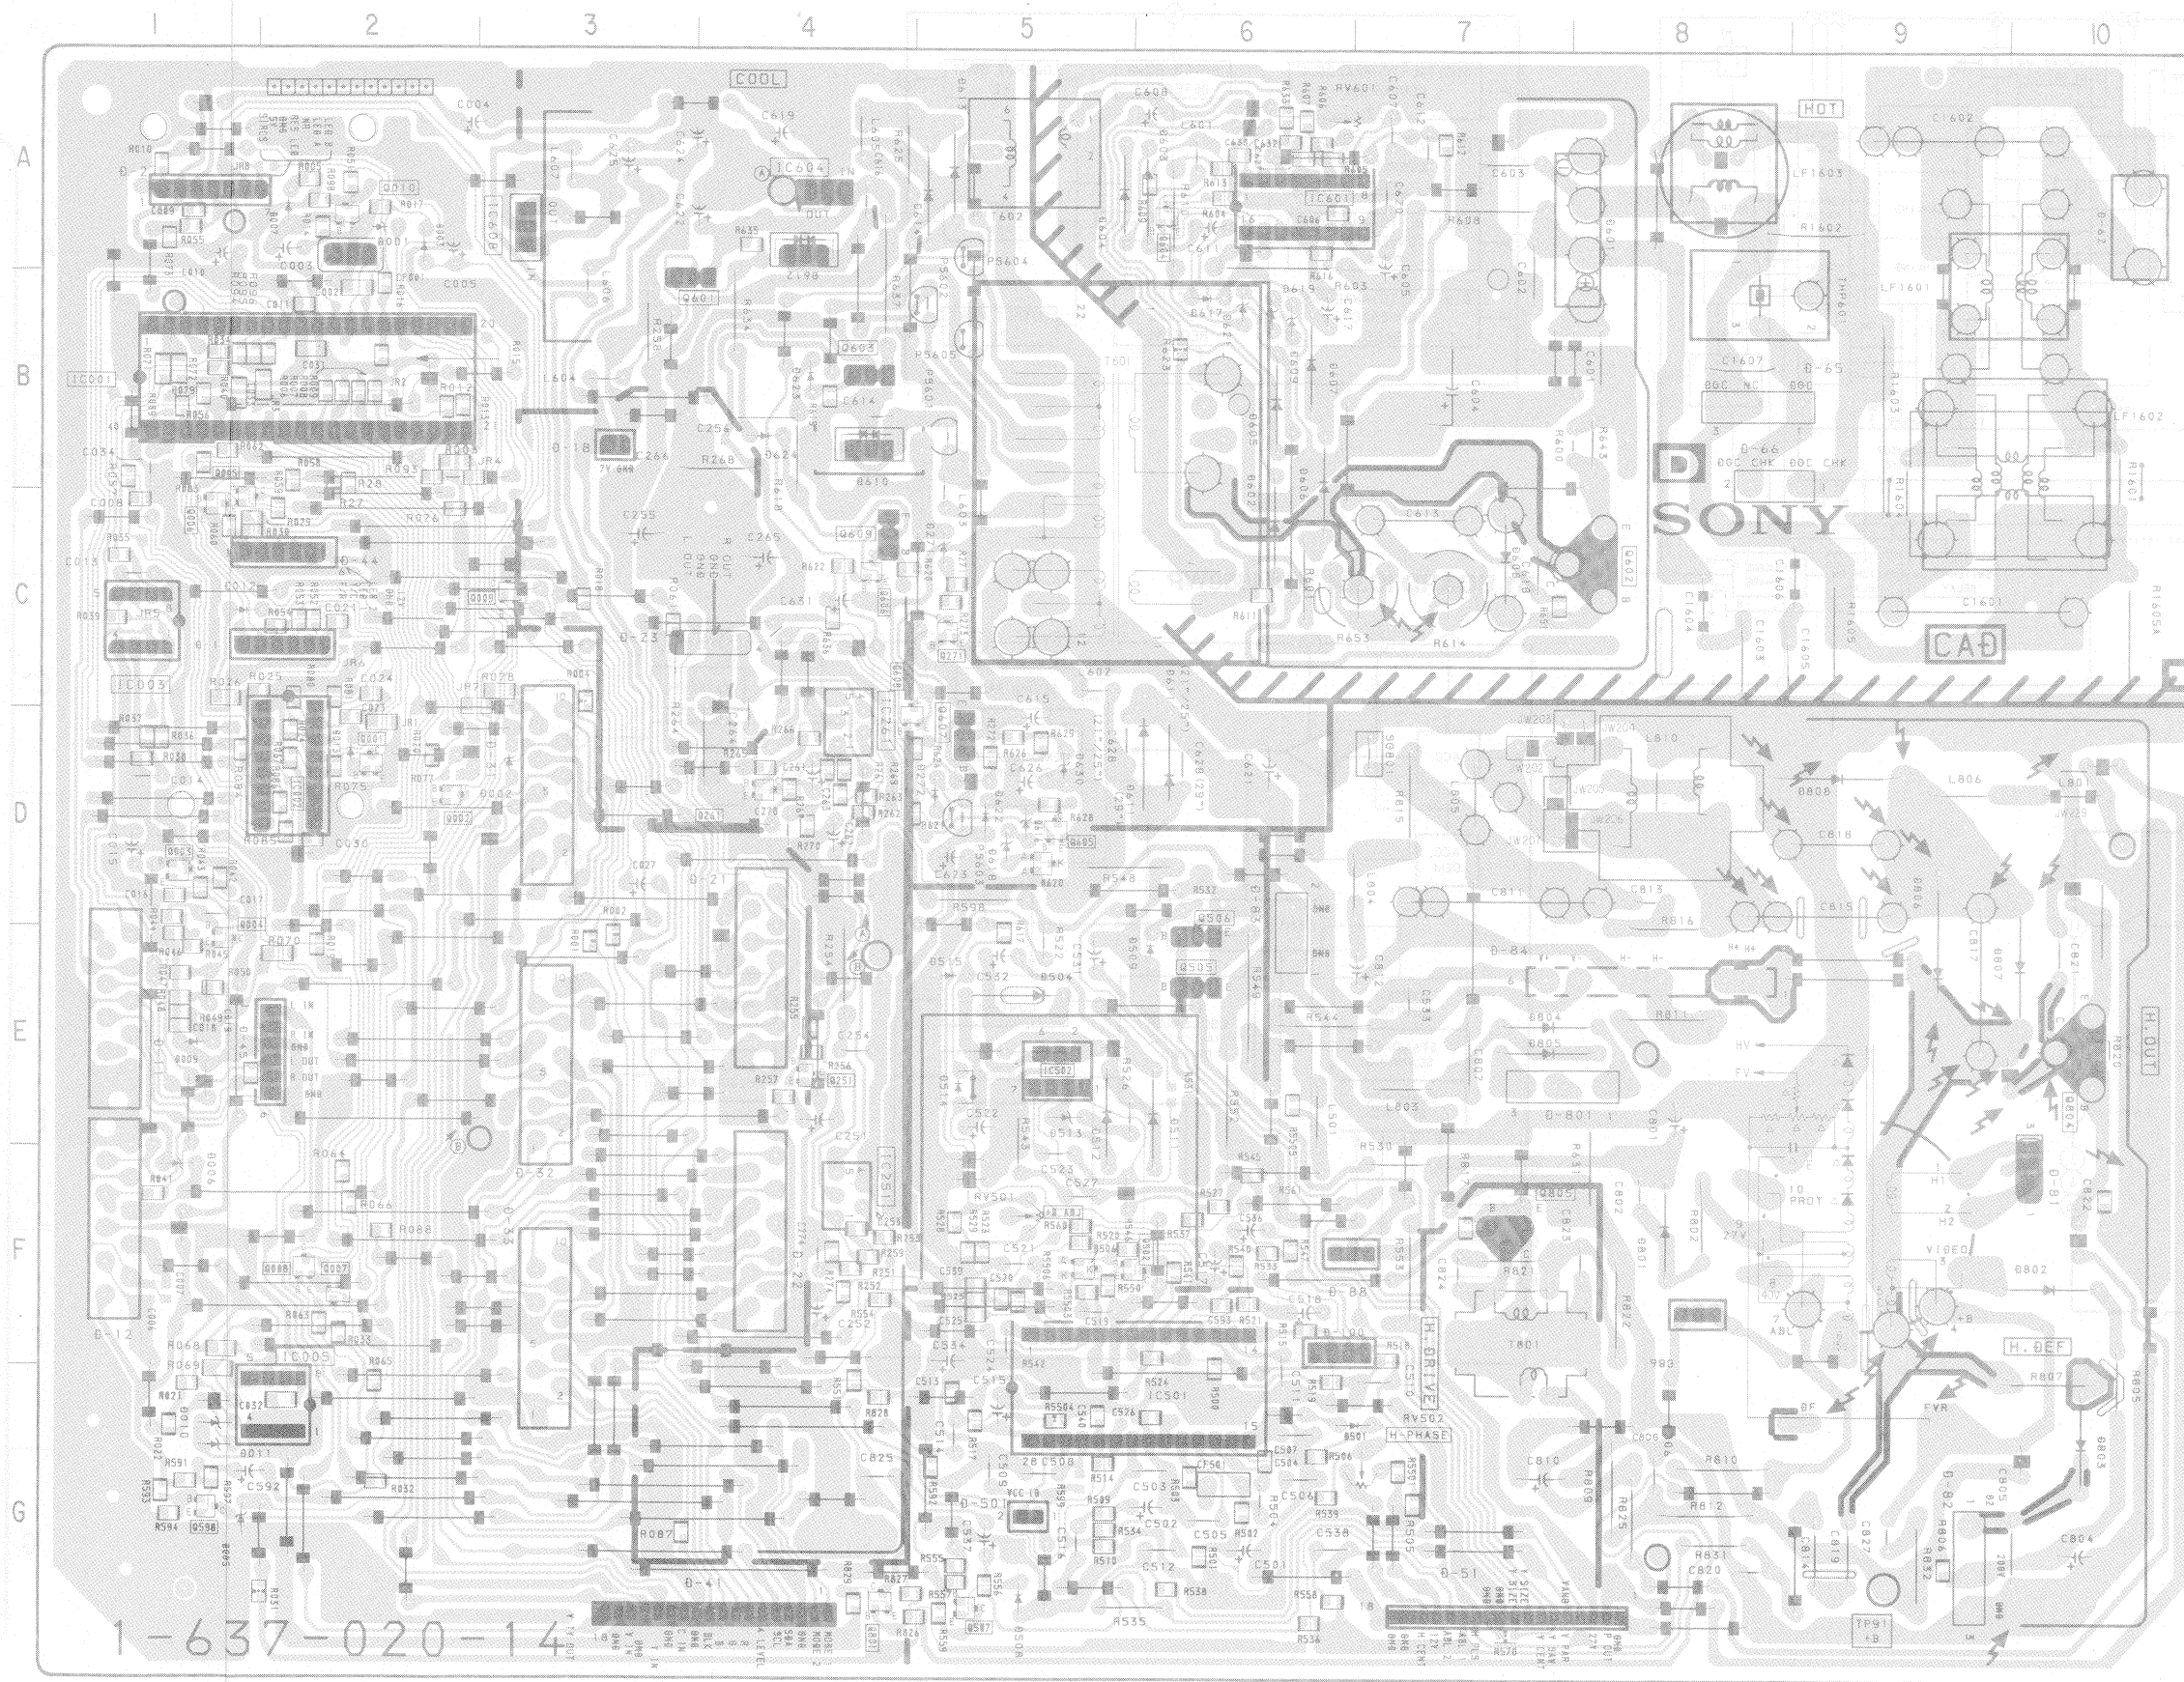


1-637-020-14

IC		D012	C-1
IC001	B-2	D013	D-2
IC002	D-2	D271	C-5
IC003	C-1	D272	D-5
IC005	G-2	D501	G-7
IC251	F-4	D504	E-5
IC261	D-4	D506	F-5
IC501	G-6	D508	G-5
IC502	E-5	D509	E-6
IC601	A-6	D511	E-6
IC604	A-4	D512	E-5
IC608	A-3	D513	E-5
		D514	E-5
		D515	E-5
		D601	A-8
		D602	C-6
		D603	A-6
		D604	A-5
		D605	B-6
		D606	B-6
		D607	B-6
		D608	C-7
		D609	B-6
		D610	B-4
		D611	D-6
		D612	A-4
		D613	A-5
		D614	A-5
		D616	D-5
		D617	B-6
		D618	D-5
		D619	B-6
		D620	D-5
		D621	B-6
		D622	D-5
		D623	B-4
		D624	B-4
		D630	D-5
		D801	F-8
		D802	F-10
		D803	G-10
		D804	E-7
		D805	E-7
		D806	E-9
		D807	E-10
		D808	D-9
TRANSISTOR		VARIABLE RESISTOR	
Q001	D-2	RV501	F-5
Q002	D-2	RV502	G-7
Q003	D-1	RV601	A-6
Q004	E-1		
Q005	C-1		
Q006	C-1		
Q007	F-2		
Q008	F-2		
Q009	C-3		
Q010	A-2		
Q251	E-4		
Q261	D-4		
Q271	C-5		
Q502	F-2		
Q505	E-6		
Q506	D-6		
Q507	G-5		
Q598	G-1		
Q601	B-3		
Q602	C-8		
Q603	B-4		
Q604	A-6		
Q605	D-5		
Q606	C-4		
Q607	D-5		
Q608	D-4		
Q609	C-4		
Q801	G-4		
Q804	E-10		
Q805	F-7		
DIODE		TP	
D001	A-2		
D002	D-3		
D003	A-2		
D005	G-1		
D006	F-1		
D007	A-2		
D009	E-1		
D010	G-1		
D011	G-1		
		TP91	G-9


B1 BOARD IC301 TDA4580-V7

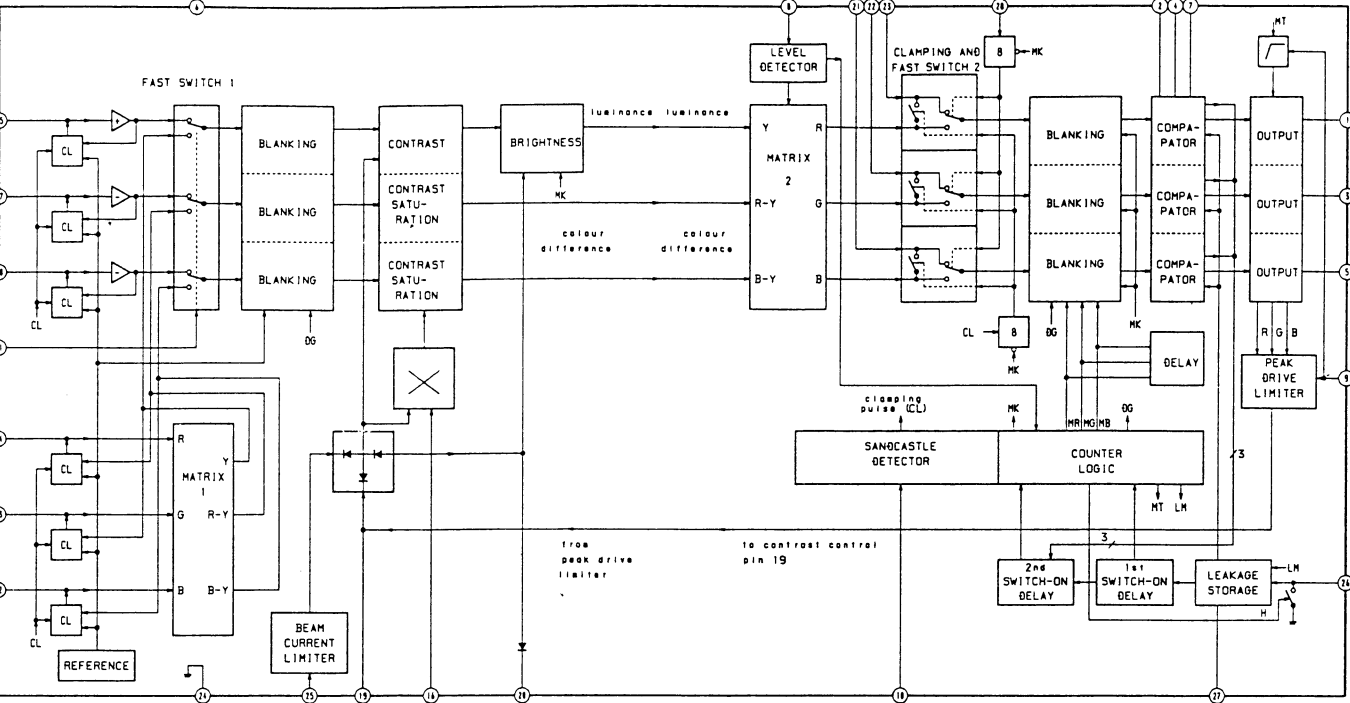


B1 BOARD IC303 TDA4660T

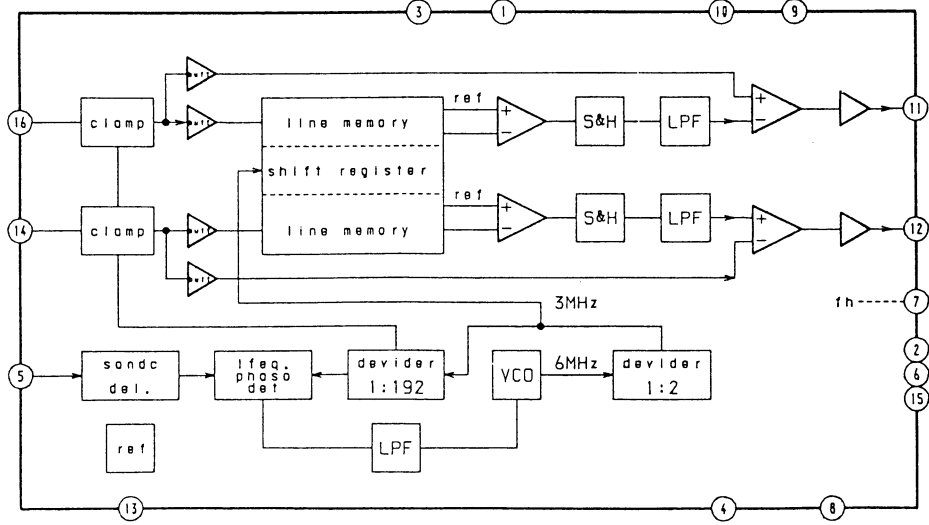

B1 BOARD IC302 TDA8442-N3

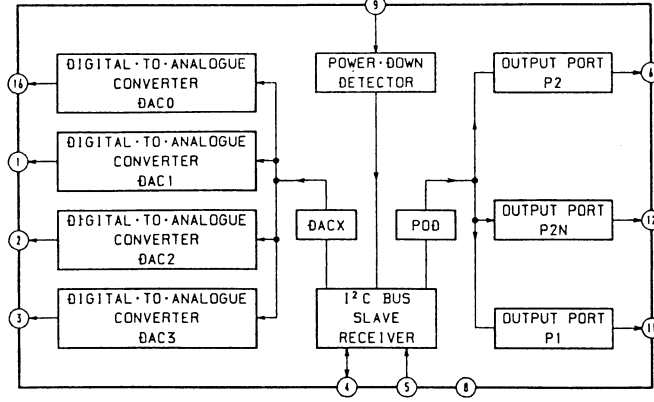

B1 BOARD IC304 TDA4650WP

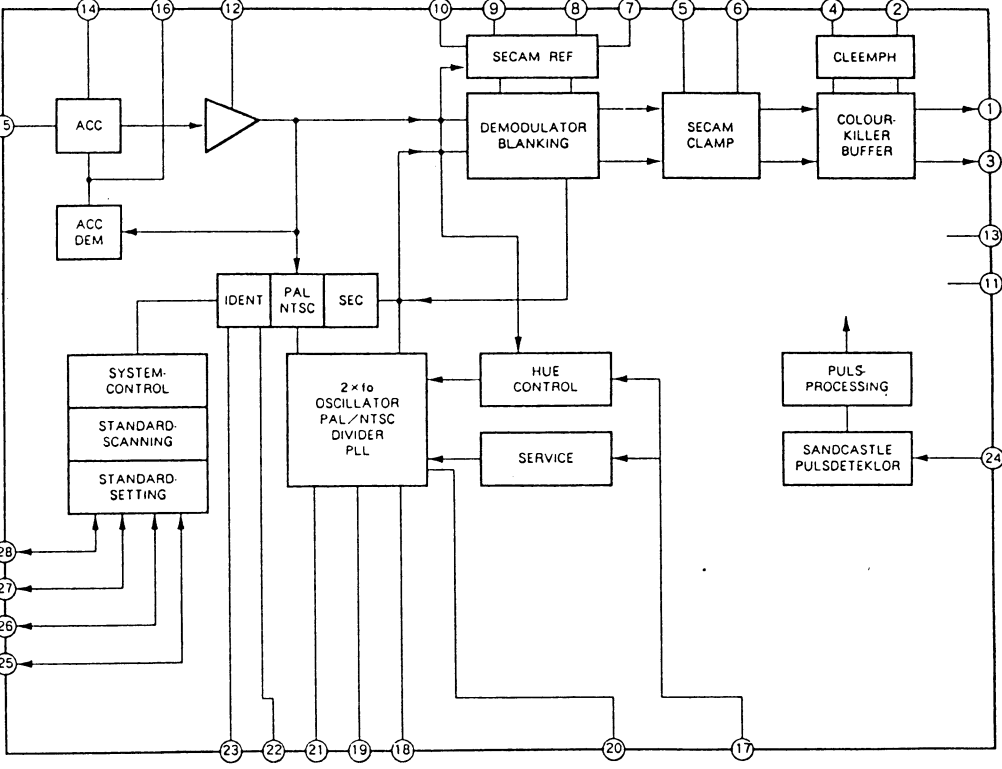


— B1 Board —

IC301	TDA4580-V7	VIDEO PROCESSOR
IC302	TDA442N3	D/A CONVERTER
IC303	TDA4660T	1H DELAY
IC304	TDA4650WP	COLOR PROCESSOR
IC305	μPC24M05HF	REGULATOR
IC306	HCF4052BM	Y/C SW
IC308	CX20061	Y SW
IC310	CX2011Q-TL	COMB CONTROL
IC311	MB4096BPF	D/A CONVERTER
IC312	CXK1202Q-T4	MEMORY
IC313	CXK1202Q-T4	MEMORY
IC315	CXB1175AM-T5	A/D CONVERTER


Q301	25C2412K	CANAL +BLK
Q302	25C2412K	ON SCREEN DISPLAY SW
Q303	25C2412K	FAS PICTURE MUTE SW
Q304	25C2412K	ON SCREEN DISPLAY SW
Q305	DTA144EK	ANTI PRIORITY SCART
Q306	25C2412K	STBY SW
Q307	25C2412K	ABL
Q308	DTC124EK	MUTE
Q310	DTC124EK	SECAM SW
Q311	DTC124EK	SECAM SW
Q320	25C2412K	HUE BUFFER
Q321	25A1037K	CLK AMP3
Q322	25A1037K	CLK AMP2
Q323	25C2412K	CLK AMP1
Q324	25C2412K	CLK BUFFER
Q327	25A1037K	Y OUT
Q328	25A1037K	VIDEO IN
Q329	25A1037K	Y IN
Q330	25C2412K	VIDEO BUFFER
Q331	25A1037K	C OUT
Q332	25A1037K	C IN
Q333	DTC124EK	Y/C SW
Q334	DTC124EK	Y SW
Q335	25C2412K	SECAM SW
Q336	25C2412K	NTSC (3.58) SW
Q337	25C2412K	NTSC (4.43) SW
Q338	25A1037K	Y BUFFER
Q339	25C2412K	Y BUFFER
Q340	25C2412K	Y BUFFER
Q341	25C2412K	SECAM TRAP SW
Q342	25C2412K	NTSC TRAP SW
Q343	25C2412K	C OUT
Q344	25C2412K	SECAM SW
Q345	25C2412K	PAL/SECAM SW
Q346	25C2412K	Y IN
Q347	25C2412K	PAL SW
Q348	DTC124EK	NTSC (3.58) SW
Q350	25C2412K	CLK AMP
Q352	25A1037K	VIDEO AMP
Q353	25C2412K	BUFFER

Q354	25C2412K	BUFFER
Q355	25C2412K	VIDEO AMP
Q356	25A1037K	VIDEO BUFFER
Q357	25A1037K	CLAMP BIAS
Q358	25C2412K	VIDEO CLAMP
Q359	25A1037K	CLAMP BIAS
Q360	25C2412K	CLK BUFFER
Q361	25C2412K	CLK AMP
Q362	25C2412K	Y BUFFER
Q363	25C2412K	C BUFFER
Q364	25A1037K	C BUFFER
Q365	25A1037K	Y BUFFER
Q366	25C2412K	SHP BUFFER
Q367	25C2412K	Y BUFFER
Q368	25C2412K	SHP AMP
Q369	25C2412K	SHP AMP
Q370	25C2412K	SHP AMP
Q371	25C2412K	VM BUFFER
Q372	25C2412K	VM AMP
Q373	DTC124EK	
Q1301	DTC124EK	Y BUFFER
Q1302	25C2412K	Y BUFFER
Q1303	DTC124EK	VM MUTE


D301	1MN10	ACD AT ATBY
D304	DAN212K	PROTECT
D305	DAN212K	PROTECT
D307	MA3110M	PROTECT
D308	DAN212K	PROTECT
D309	DAN212K	PROTECT
D310	MA3110M	PROTECT
D311	MA3110M	PROTECT
D312	MA3110M	PROTECT
D314	DA204K	PROTECT
D318	DA204K	PROTECT
D319	DA204K	PROTECT
D320	DA204K	PROTECT
D321	MA3056	REG
D322	DAN202K	PROTECT
D330	DAN212K	BIAS
D331	DAP202K	Y/C SW
D333	1MN10	SYSTEM SW
D336	DAN202K	CORRECT SW
D340	DA204K	VIDEO AMP
D341	DAN212K	VIDEO AMP

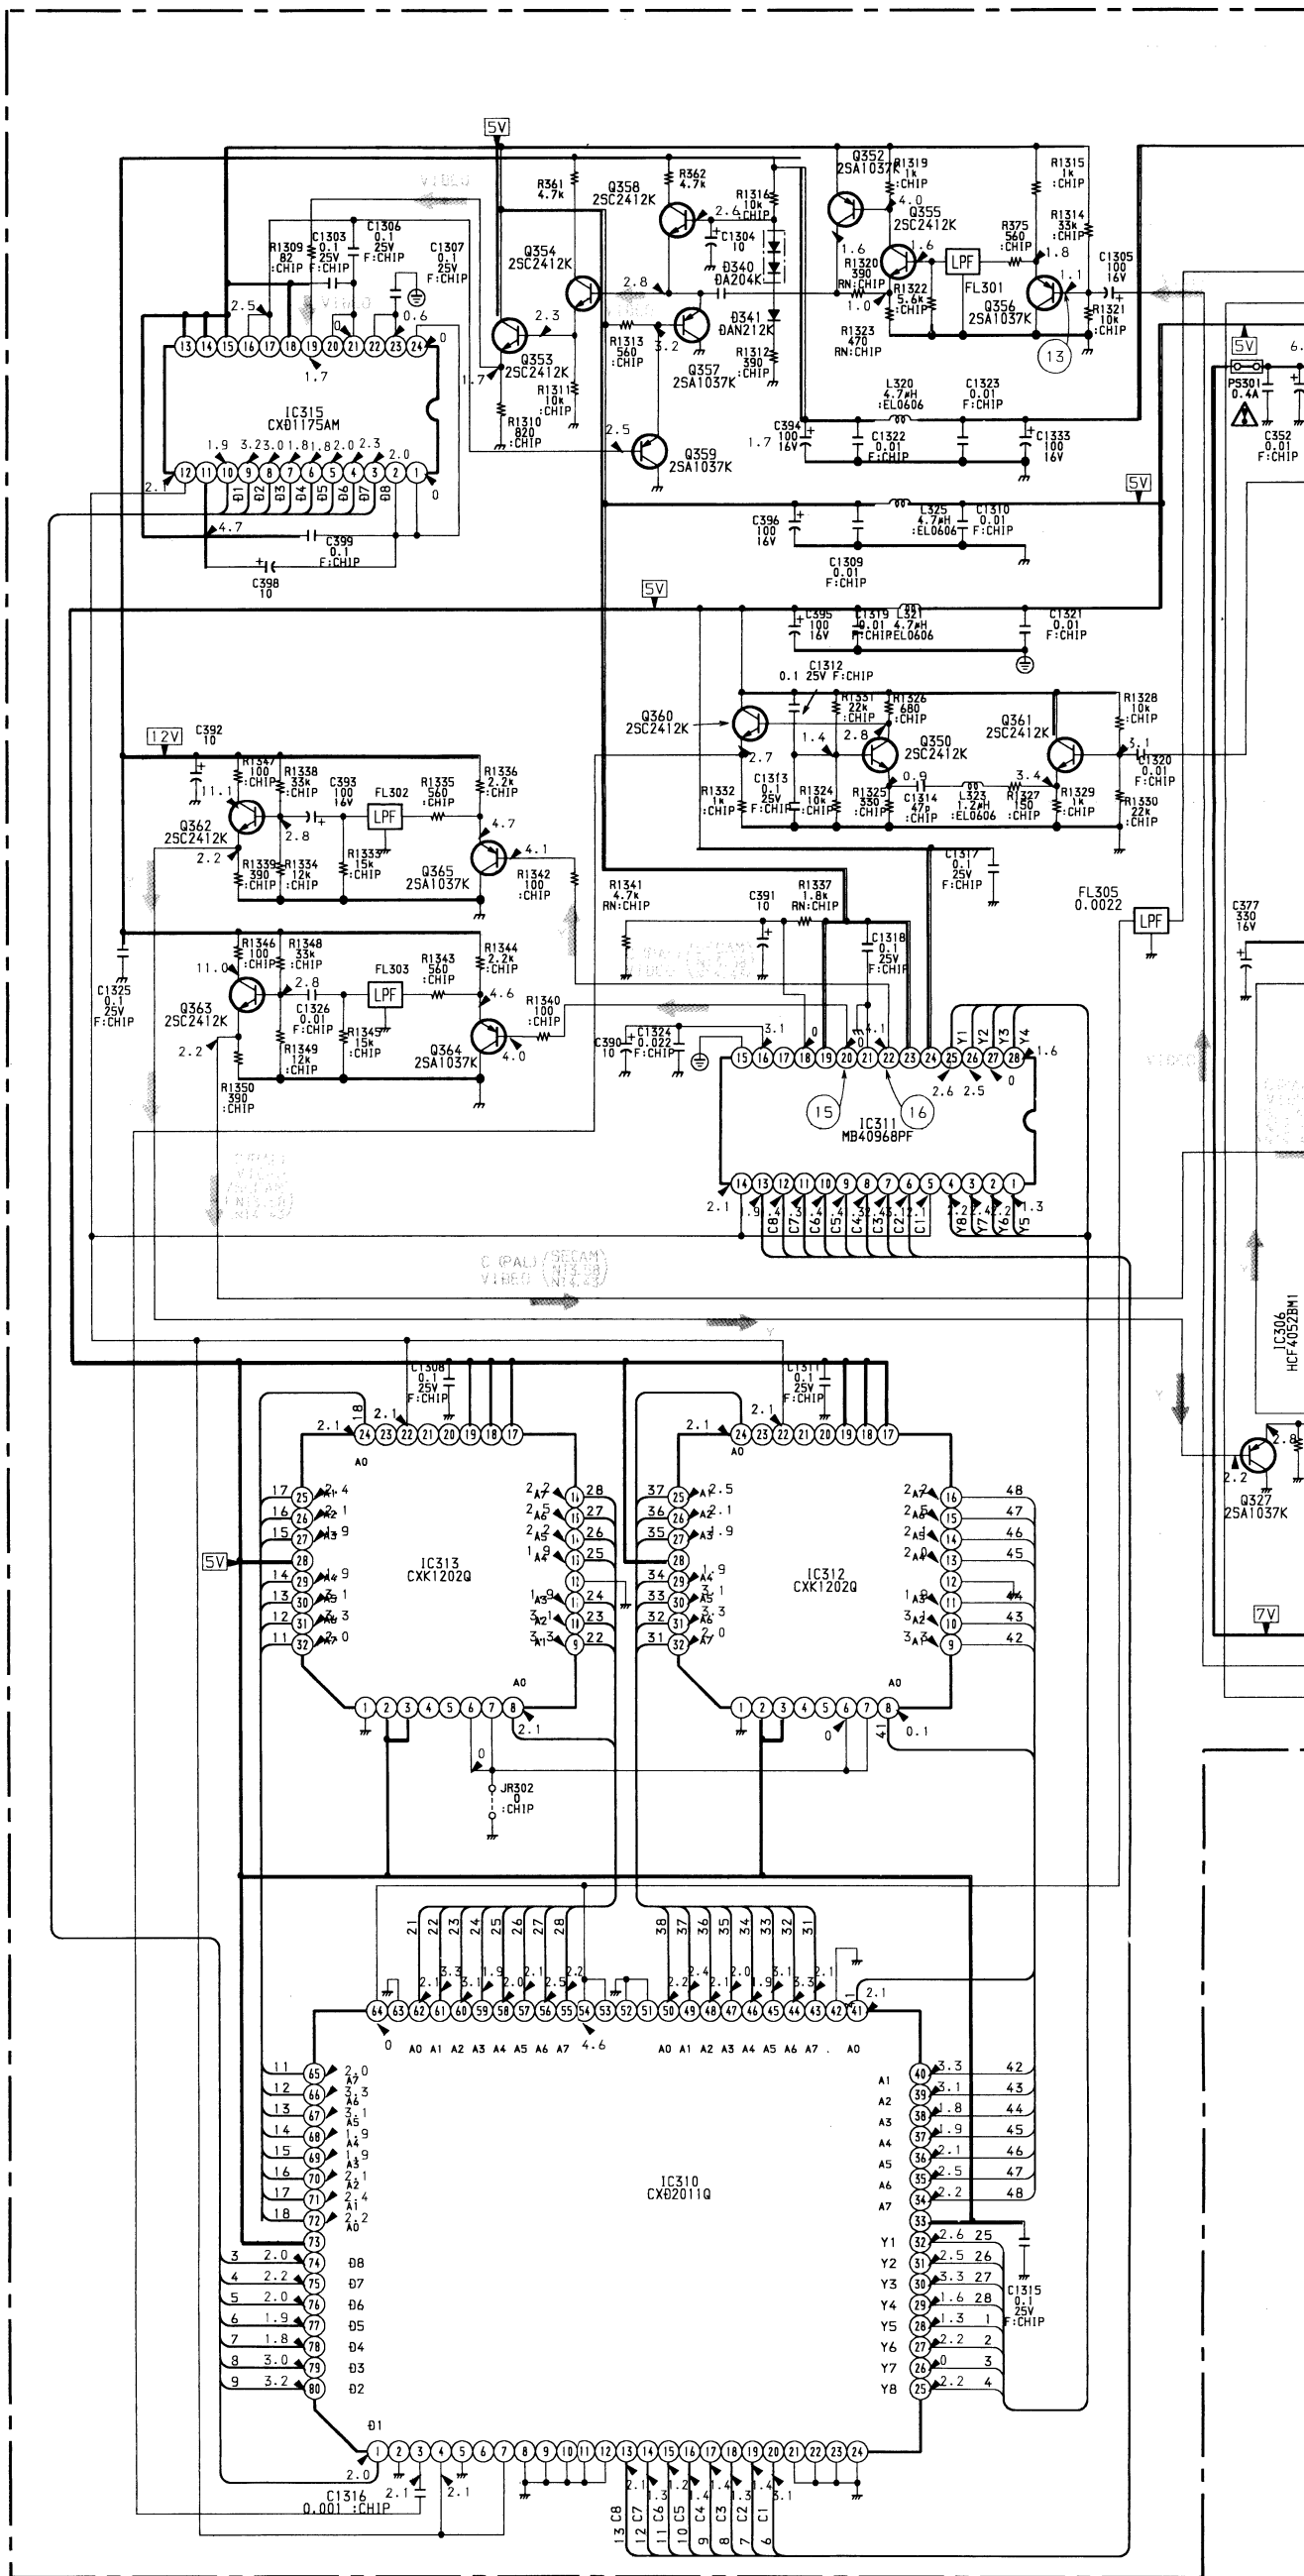

B-SS4161<UK>-B1.

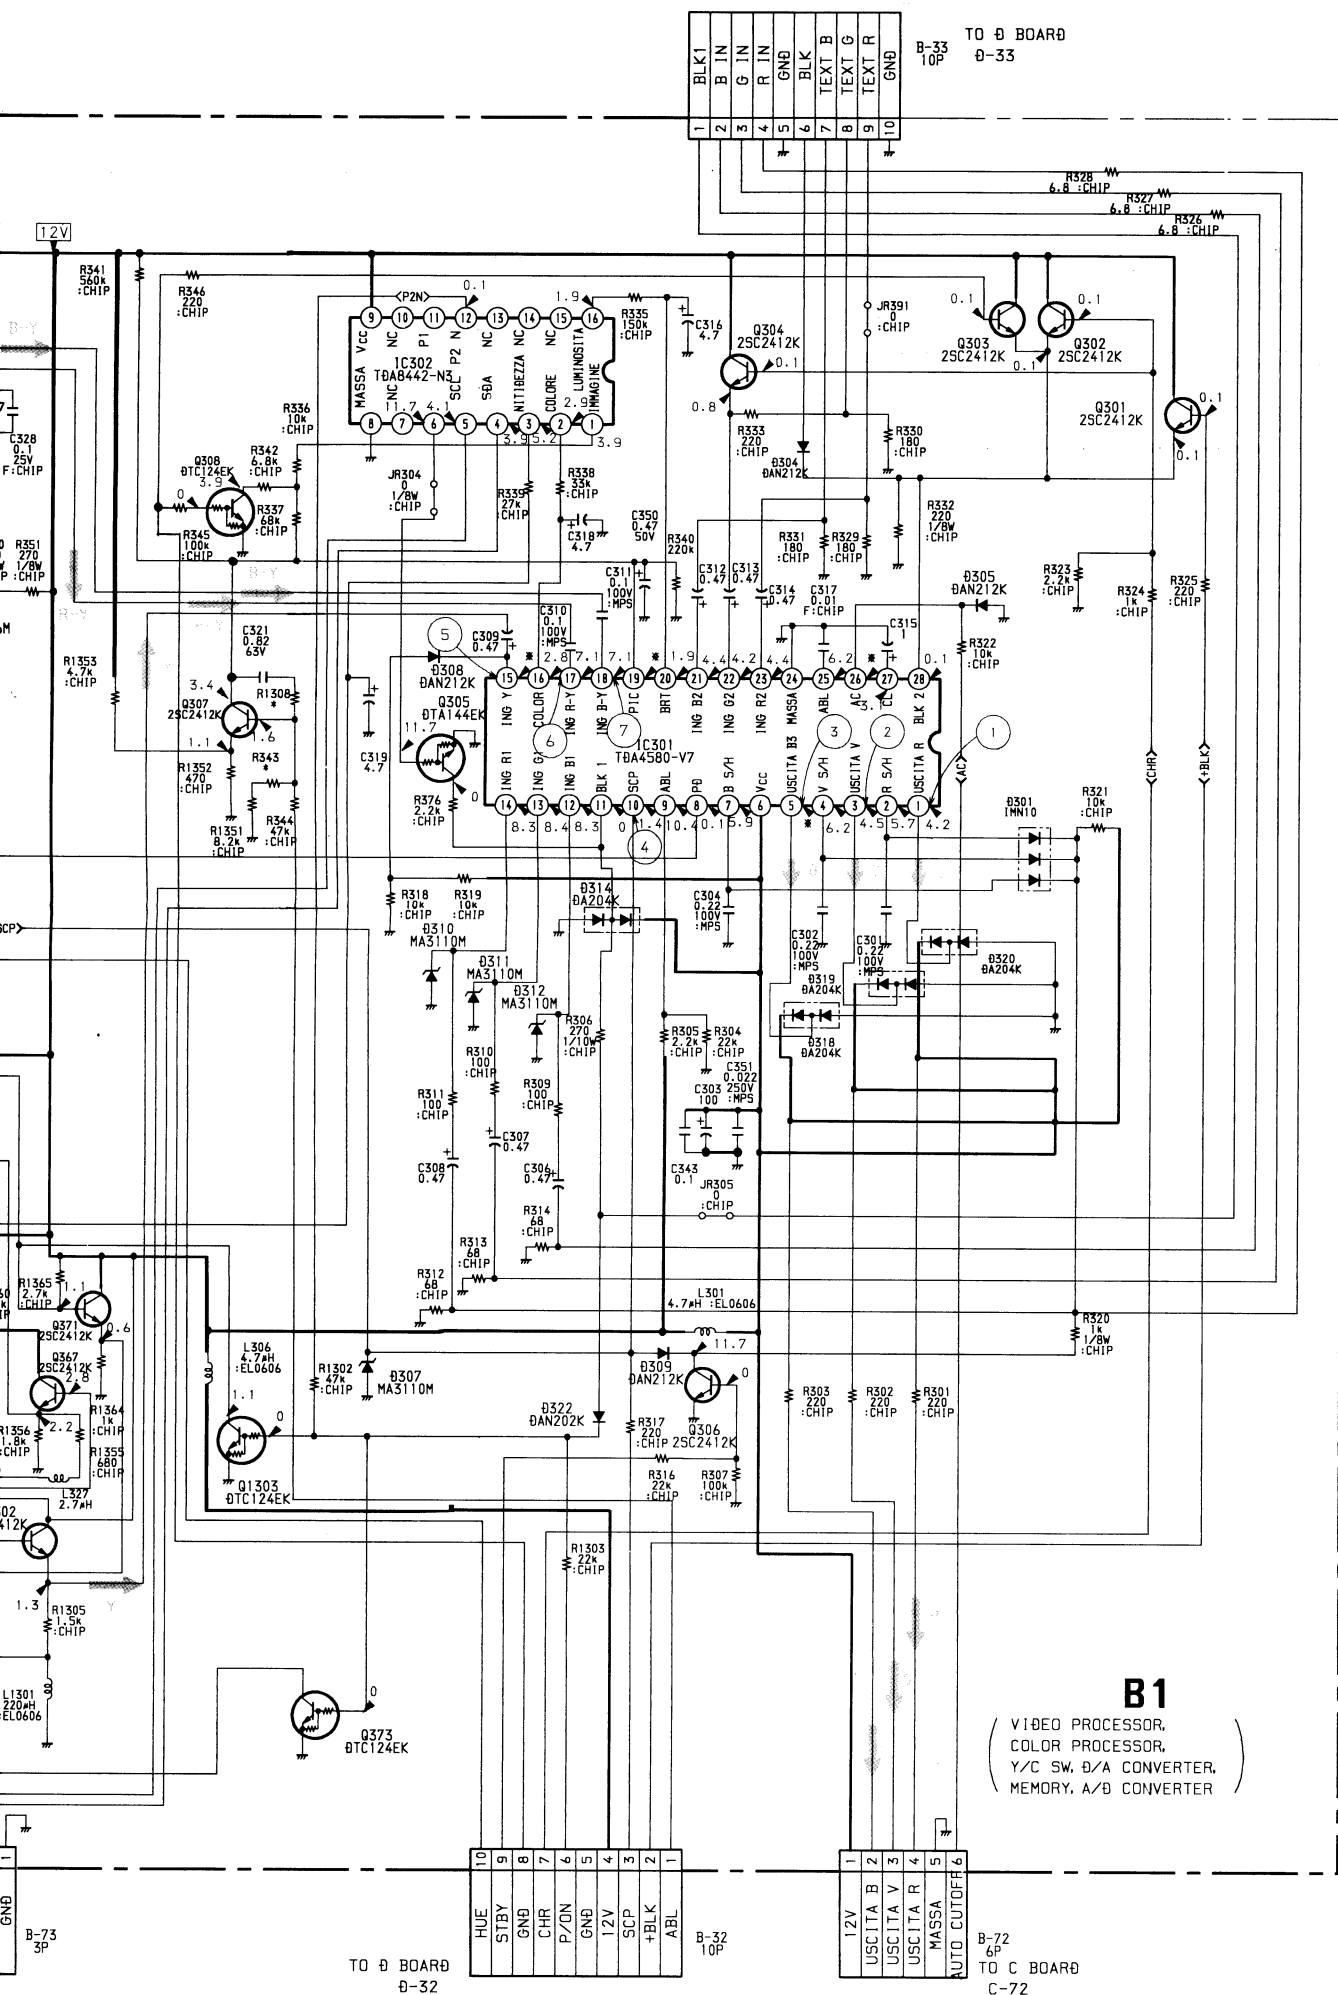

— B1 Board —

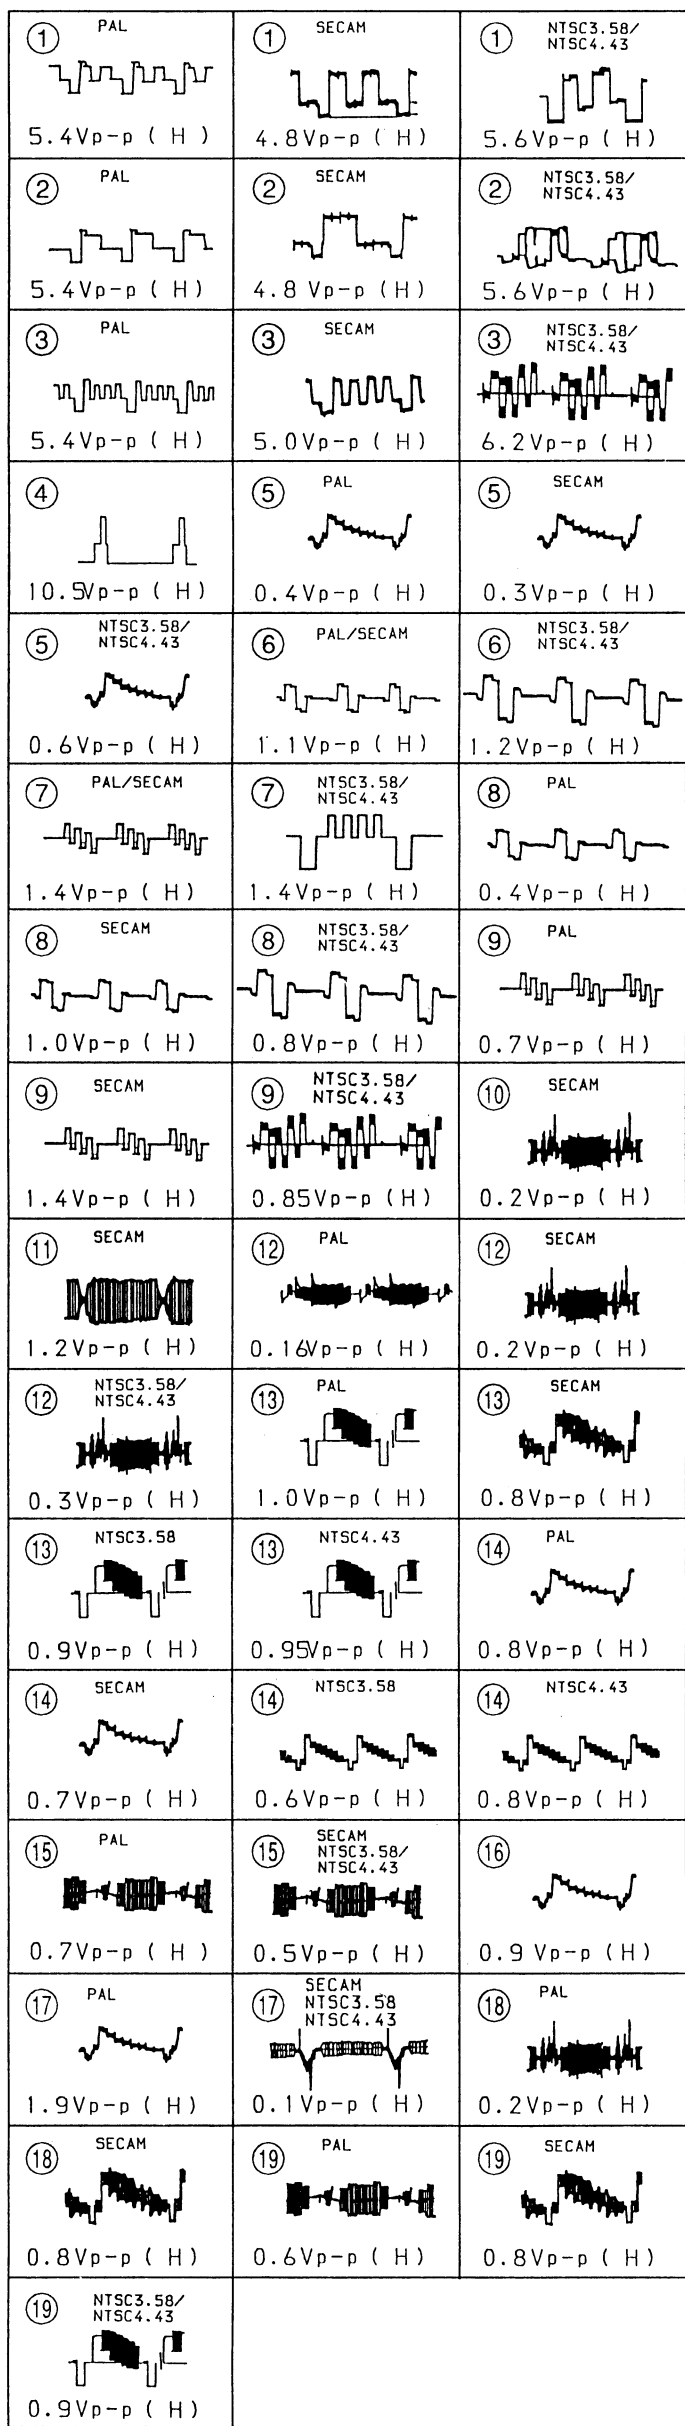

— B1 Board —

As to the voltage value shown by the make ✕ on the Schematic Diagram, see the another list.


IC·NO	PIN·NO	PAL	SECAM	NTSC 3.38	NTSC 4.43
IC301	(5)	5.1	4.8	4.8	4.8
	(15)	7.3	7.0	7.0	7.0
	(19)	3.1	3.4	3.8	3.4
	(26)	6.6	6.6	6.0	6.3
IC304	(3)	6.8	6.8	6.9	6.8
	(5)	9.9	10.1	9.9	9.9
	(7)	4.3	3.5	4.6	4.6
	(8)	3.4	3.0	3.4	3.4
	(9)	3.4	3.0	3.4	3.4
	(10)	4.3	3.4	4.6	4.6
	(21)	2.3	3.1	3.1	2.3
	(22)	5.6	5.6	5.6	7.4
	(23)	7.5	7.5	5.7	5.7
	(25)	0	1.4	5.9	5.9
	(26)	0	0	0	0
	(27)	0	5.9	0	0
	(28)	5.9	0	0	0

Q·NO		PAL	SECAM	NTSC 3.38	NTSC 4.43
Q338	B	2.6	3.9	3.9	3.9
	E	3.3	4.6	4.6	4.6
Q339	B	3.2	4.6	4.6	4.6
	E	3.6	3.9	3.9	3.9
Q341	B	0	0.6	0.4	0.1
	C	11.8	0	11.6	11.6
Q342	B	0	0	0.4	0
	C	11.7	0	11.7	11.7
Q343	B	3.2	5.3	5.3	5.3
	E	2.6	4.6	4.7	4.7
Q344	B	0	5.4	1.0	0.1
	E	4.0	4.8	1.5	4.5
Q345	B	4.6	0.1	1.9	5.0
	E	4.0	4.4	1.4	4.4
Q347	B	0.6	0	0	0
	C	0.1	11.9	11.9	11.9
Q348	B	0.1	0.1	1.0	0.1
	C	0.4	0.2	0.2	0.4

— B1 BOARD * MARK —

	KV-A2121D	KV-A2521D	KV-A2921D
B-73	OPEN	OPEN	3P
R343	220 1/10W	270 1/10W	1.2K 1/10W
R1308	0 1/10W	0 1/10W	4.7K 1/10W

— V Board —

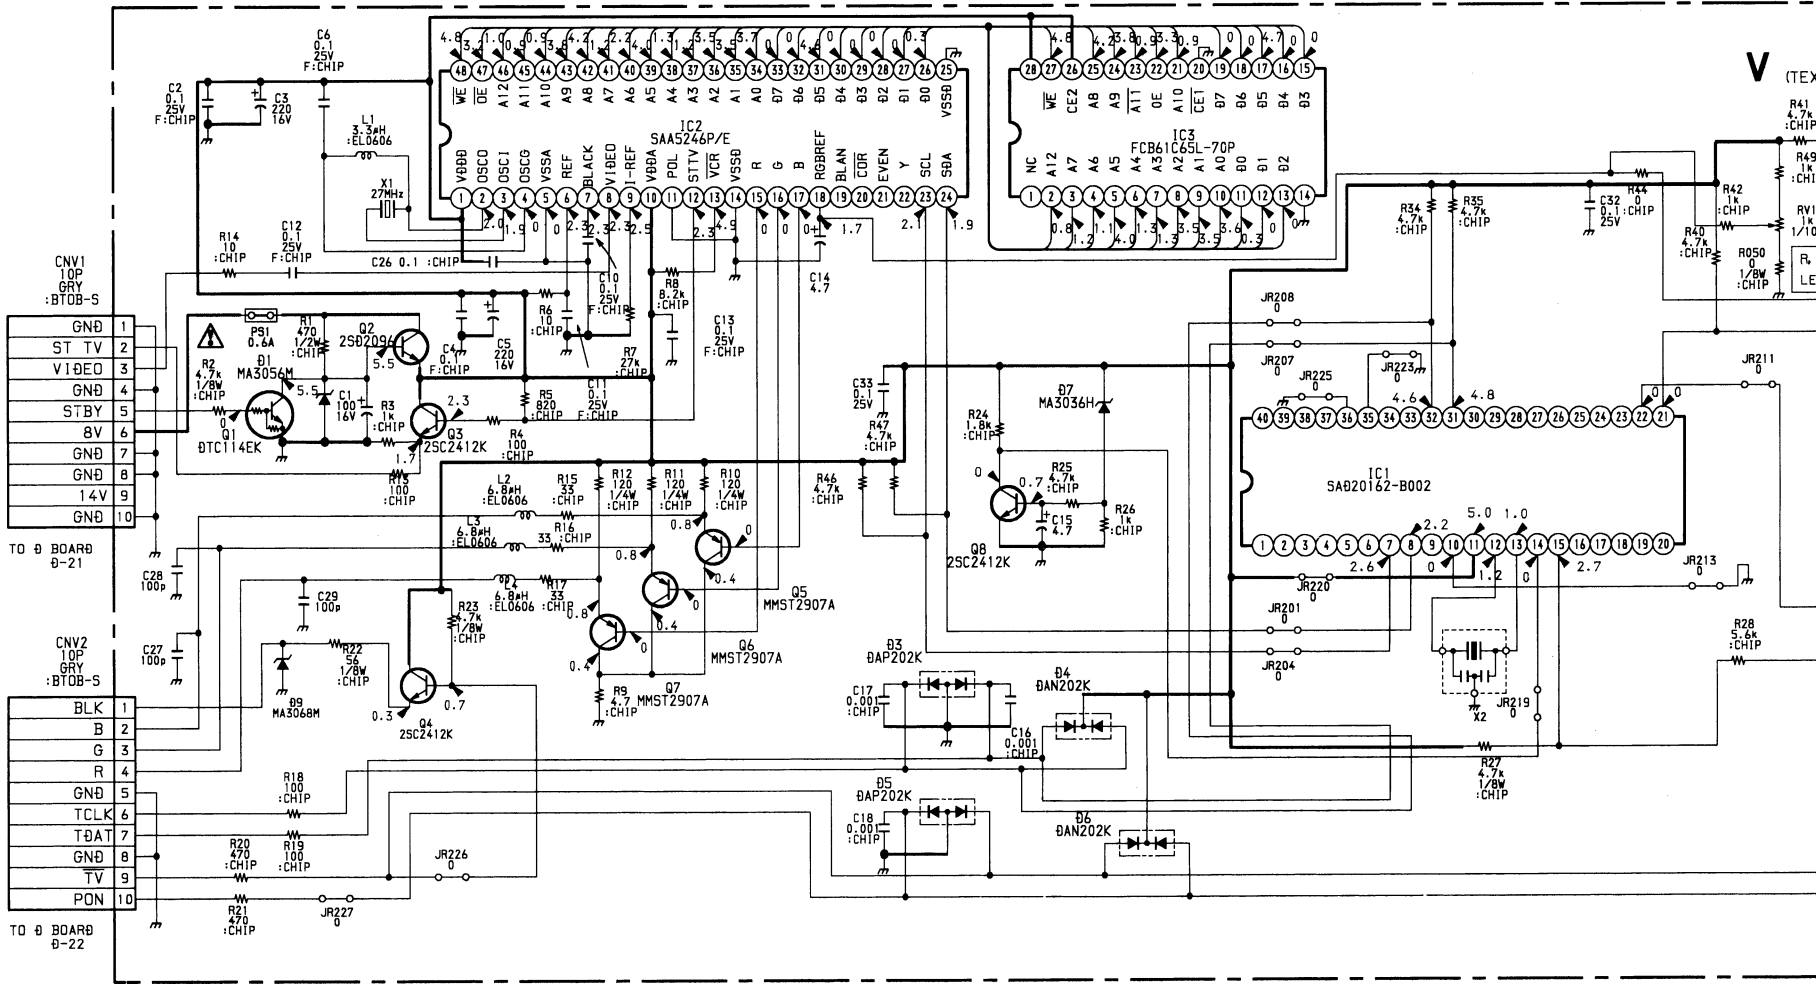


— V Board —

B-SS4172

IC1	MAB8461P-W208	MICRO-CONT
IC2	SAAS246E	IVT
IC3	FCB61C65L-70P	STATIC-RAM
Q1	DTCT14EK	STAND BY
Q2	2S02096	SV REG
Q3	2SC2412K	SYNC BUFFER
Q4	2SC2412K	BLK OUT
Q5	MMST2907A	B OUT
Q6	MMST2907A	G OUT
Q7	MMST2907A	R OUT
Q8	2SC2412K	P ON SW
01	MA3056M	5V REG
03	0AP202K	PROTECT
04	0AN202K	PROTECT
05	0AP202K	PROTECT
06	0AN202K	PROTECT
07	MA3036H	PROTECT
09	MA3068M	PROTECT


— C Board —

Q702	JC501	R DRIVE
Q703	BF871	R OUT
Q704	2SA10910	ACD MEASURING
Q705	JC501	G DRIVE
Q706	BF871	G OUT
Q707	2SA10910	ACD MEASURING
Q708	JC501	B DRIVE
Q709	BF871	B OUT
Q710	2SA10910	ACD MEASURING
0701	MTZJ9.1C	PROTECT
0702	ISS133	PROTECT
0703	ISS133	PROTECT
0704	ISS133	PROTECT
0705	ISS133	PROTECT
0706	ISS133	PROTECT
0707	ISS133	PROTECT
0708	ISS133	PROTECT
0709	ISS133	PROTECT
0710	ISS133	PROTECT
0711	RGP10G	HEATING VOLTAGE REC
0713	ISS133	PROTECT

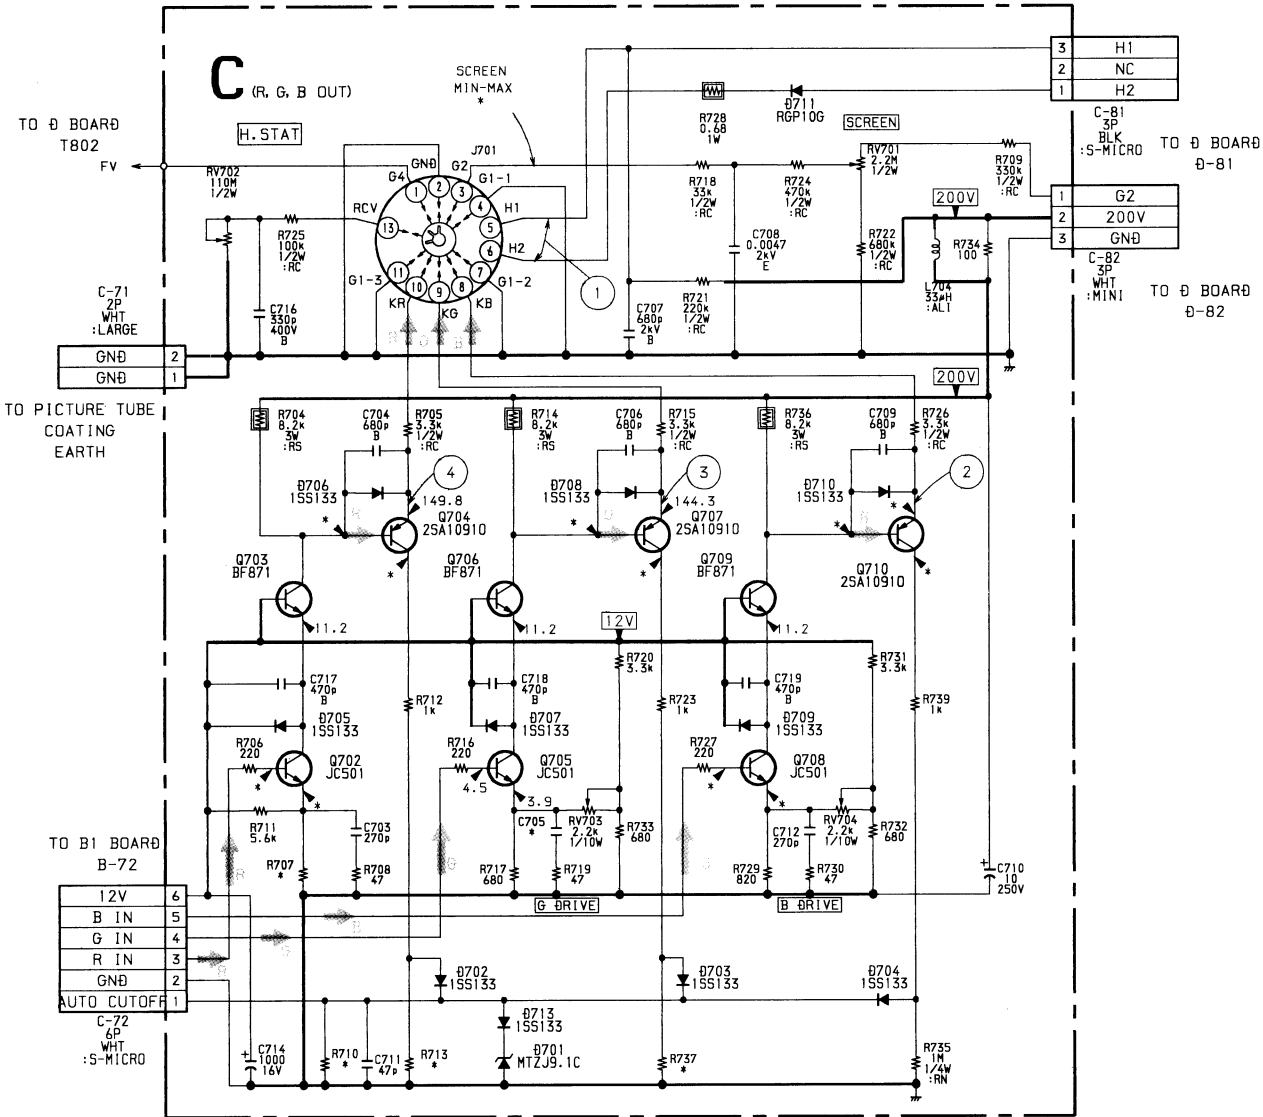

B-SS4161<UK>-C...P1

— C Board —

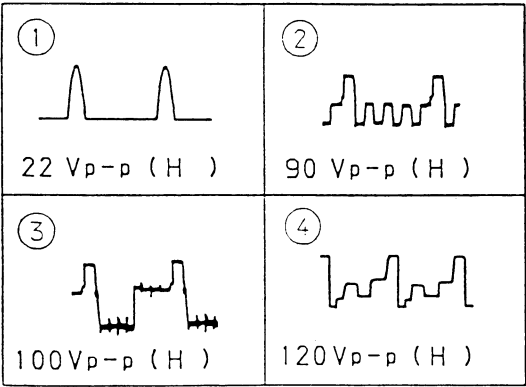

— C Board —

As to the voltage value shown by the make * on the Schematic Diagram, see the another list.


		KV-A21210	KV-A25210	KV-A29210
Q702	B	3.8		4.2
	E	3.2		3.6
Q703	C	153.8		145.8
	B	153.8		145.8
	C	4.7		5.3
Q704	E	149.8		138.9
Q706	C	149.0		145.5
	B	149.0		145.5
Q707	C	4.9		6.0
	E	144.3		141.6
Q708	B	5.1		4.7
	E	4.5		4.1
Q709	C	151.0		131.5
	B	151.0		131.5
	C	6.7		7.2
	E	145.8		126.9
SCREEN	MIN	170.9		201
	MAX	907		926

— C BOARD * MARK —

	KV-A21210	KV-A25210
C705	180P	220P
R707	430	390
R710	100K 1/4W 1%	68K 1/4W 1%
R713	160K 1/4W 1%	120K 1/4W 1%
R737	390K 1/4W 1%	820K 1/4W 1%

— IFG Board —


— C Board —




- 64 —

5-4. SEMICONDUCTORS


BA4558
NE5532P
RC4558P
S0A2546
TBA129
T0A1543
TEA2014A
TEA2031A

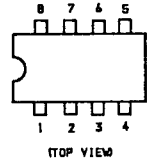


CXA1114P
CXK5864BP-10L
MAB8461P-W208
SAA5246P/E
SAA7280
TC5565APL-15L
T0A4580-V7
T0A6200
TEA2028B

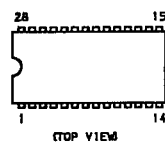


CXD1175AM

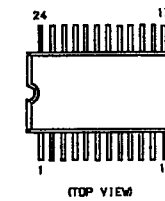


CXD2011Q

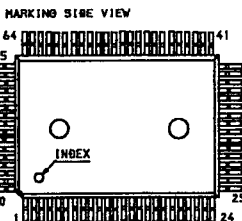


CXK1202Q

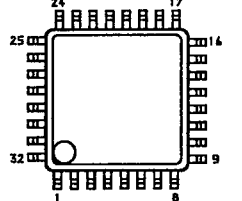


CX20061

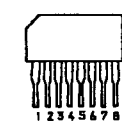


FCB61C65L-70P
S0A20560-A012

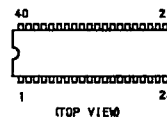


HCF4052BM

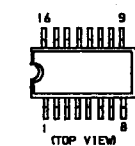


LM7812CT
MC7812CT
T0A8341/N6
TEA7605
#PC24M05HF

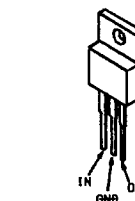


MB40968PF

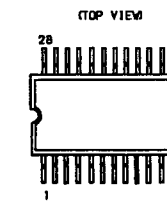


MC14051BCP
MC14053BCP
PC8574
T0A2545A-V4
T0A4660T
T0A8442N3
TEA2260
#PD4053BC

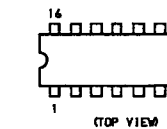


SAA5246P/E/M4A

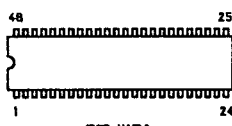


SBX1610-11

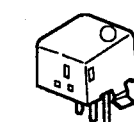


SN74LS02N

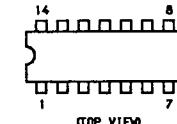


T0A2050

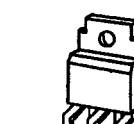


T0A2579/V9

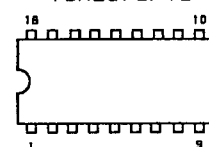


T0A4650WP

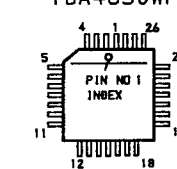


T0A6600-2

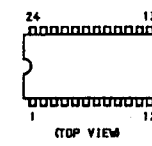


T0A8170

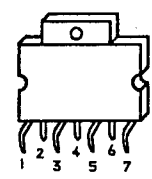


T0A8732

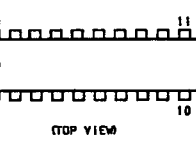

BF871



0TA144EK
0TC114EK
0TC124EK
0TC144EK
MMST2907A
2SA1037K
2SA1162
2SA812
2SB1295
2SC1623
2SC2412
2SC2712




0TC144ES




JC501
2SA1091




2SA1220A
2SB1357
2SC2688

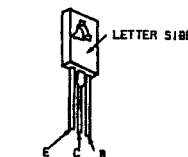


2SB734
2SB773
2SB774



2SC2785

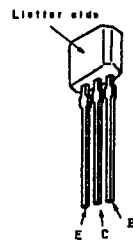


2SB1548

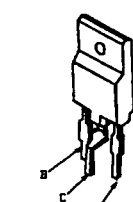


2SB1941




2SB2096

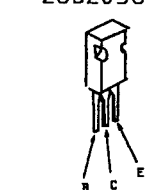


BR405B
BB809
ERC06-15S
ERC25-06S
RGP10G
RU-3AM

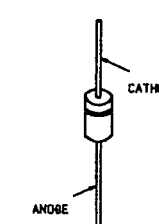


CTU-12S

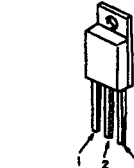


0AN202K
0AN212K
MA152WK
1S2837

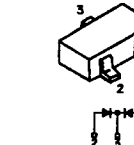


0AP202K

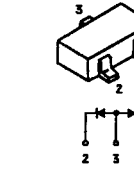


0A204K
1S226

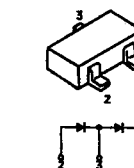


04SB60L-F

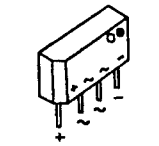


EGP20G
GP080
RGP02-17
RGP15J

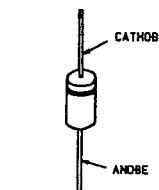


ER029-08J

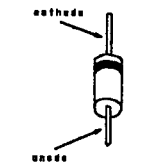


IMN10




L0-201VR

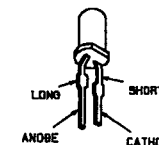


MA3056M
MA3110
MA3036H
MA3068M
R011M-B2
R03.6M-B2
R05.6M-B2
R06.8M-B2

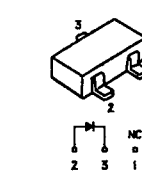

MTZJ-13B
MTZJ-15A
MTZJ-33A
MTZJ-360
MTZJ-3.9B
MTZJ-4.7B
MTZJ-5.6B
MTZJ-6.2C
MTZJ-7.5C
MTZJ-9.1C
MTZN-10C
R05.6ESB2
R06.2ESB2
R06.8ESB2
R07.5ESB2
R09.1ESB3
UZ4.7BSC
1SS119
1SS133

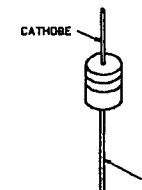


U05G

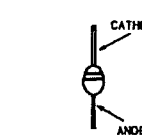


5-4. SEMICONDUCTORS


BA4558
NE5532P
RC4558P
S0A2546
TBA129
T0A1543
TEA2014A
TEA2031A

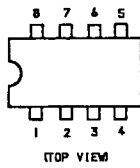

CX20061




FCB61C65L-70P
S0A20560-A012

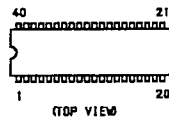


SAA5246P/E/M4A




SBX1610-11




T0A6600-2

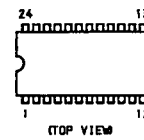


BF871




CXA1114P
CXK5864BP-10L
MAB8461P-W208
SAA5246P/E
SAA7280
TC5565APL-15L
T0A4580-V7
T0A6200
TEA2028B

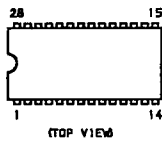


HCF4052BM




SN74LS02N

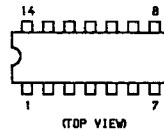


T0A8170

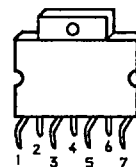


0TA144EK
0TC114EK
0TC124EK
0TC144EK
MMST2907A
2SA1037K
2SA1162
2SA812
2SB1295
2SC1623
2SC2412
2SC2712




LM7812CT
MC7812CT
T0A8341/N6
TEA7605
μPC24M05HF



T0A2050




T0A8732

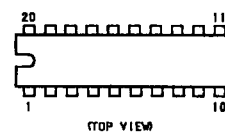


0TC144ES




CX01175AM

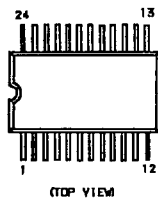

MB40968PF

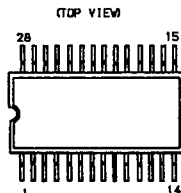


T0A2579/V9

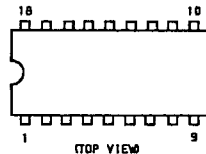


JC501
2SA1091




CX02011Q

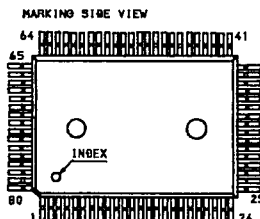


MC14051BCP
MC14053BCP
PC8574
T0A2545A-V4
T0A4660T
T0A8442N3
TEA2260
μP04053BC

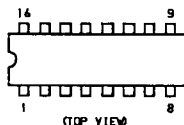


T0A4650WP

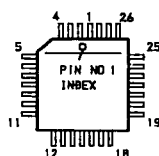

2SA1220A
2SB1357
2SC2688

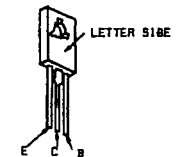


CXK1202Q

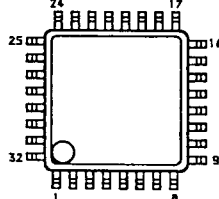


2SB734
2SB773
2SB774



2SC2785



2SB1548




2SB1941



2SB2096




BR405B
BB809
ERC06-15S
ERC25-06S
RGP10G
RU-3AM

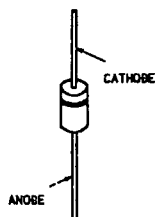


CTU-12S




ĐAN202K
ĐAN212K
MA152WK
1S2837




ĐAP202K




ĐA204K
1S226




Đ4SB60L-F



EGP20G
GP08Đ
RGP02-17
RGP15J




ERĐ29-08J




IMN10




LĐ-201VR

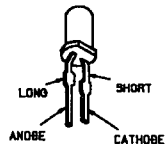


MA3056M
MA3110
MA3036H
MA3068M
RĐ11M-B2
RĐ3.6M-B2
RĐ5.6M-B2
RĐ6.8M-B2



MTZJ-13B
MTZJ-15A
MTZJ-33A
MTZJ-36Đ
MTZJ-3.9B
MTZJ-4.7B
MTZJ-5.6B
MTZJ-6.2C
MTZJ-7.5C
MTZJ-9.1C
MTZN-10C
RĐ5.6ESB2
RĐ6.2ESB2
RĐ6.8ESB2
RĐ7.5ESB2
RĐ9.1ESB3
UZ4.7BSC
1SS119
1SS133

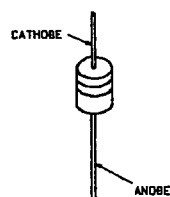


U05G



6-1. CHASSIS (KV-A2123E)


● : BVTP3x12 7-685-648-79

■ : BVTP4x16 7-685-663-79

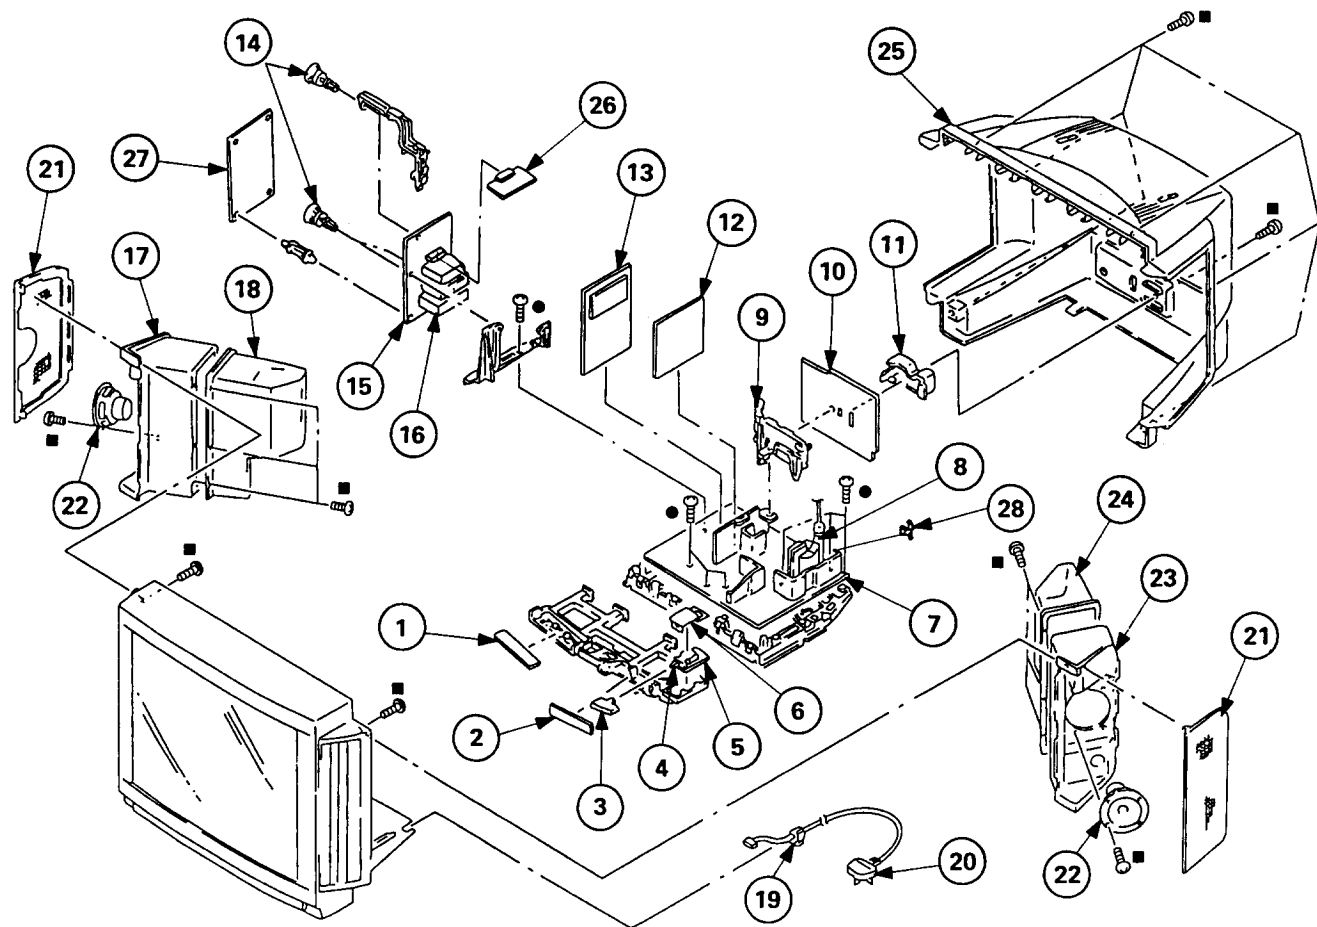

6-2. PICTURE TUBE (KV-A2123E)

■ : BVTP4x16 7-685-663-79

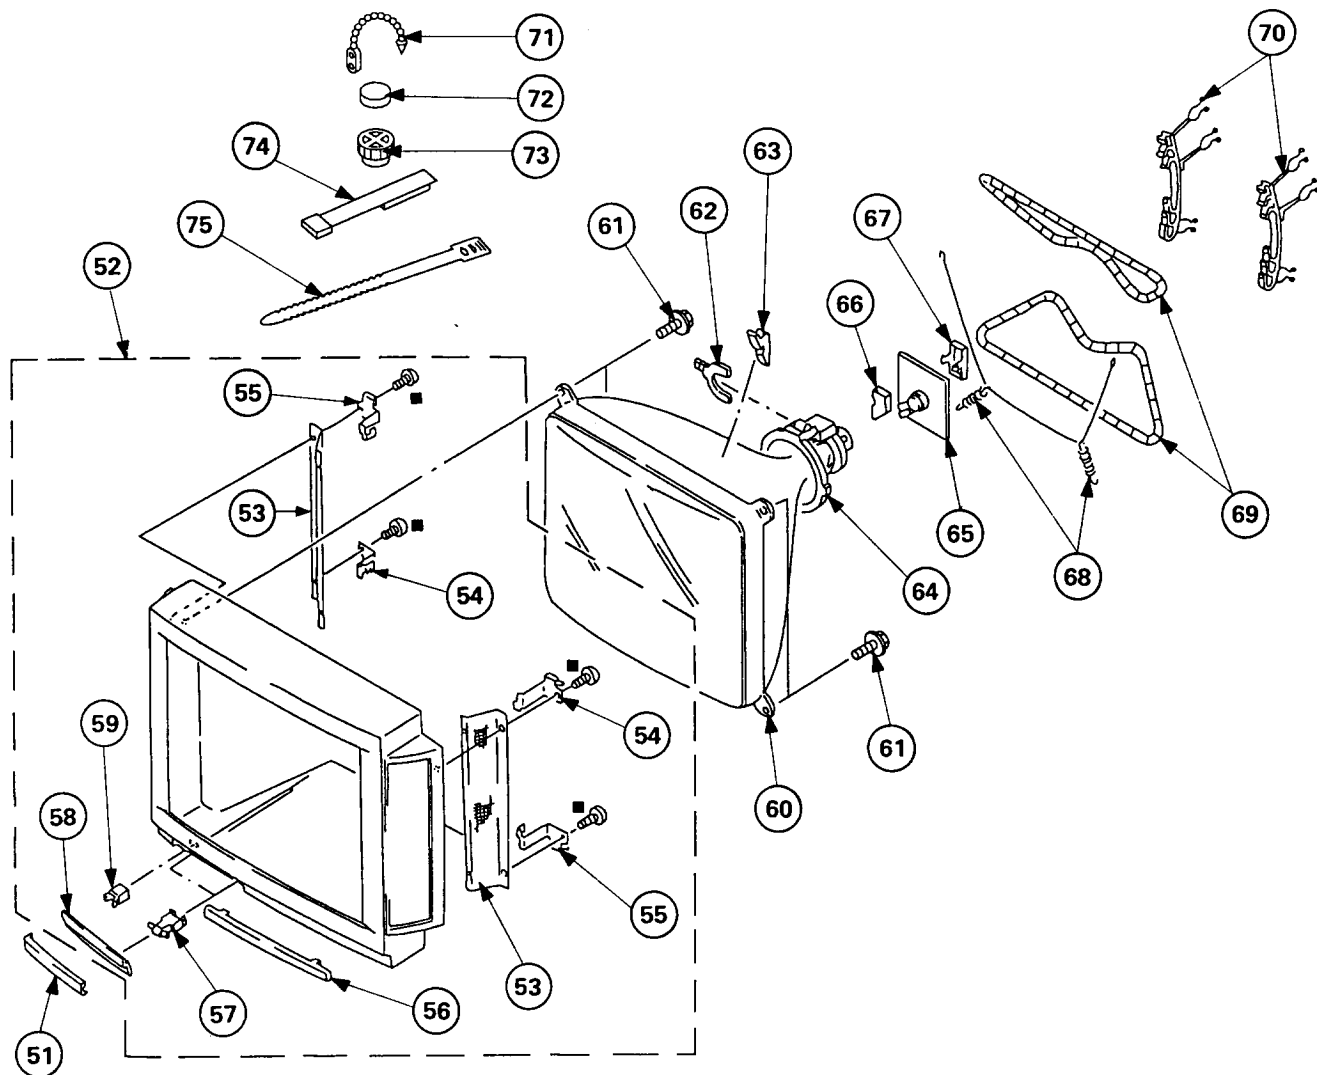


6-3. CHASSIS (KV-A2523E/A2923E)

● : BVTP3x12 7-685-648-79

■ : BVTP4x16 7-685-663-79

△ : BVTP4x12 7-685-661-79

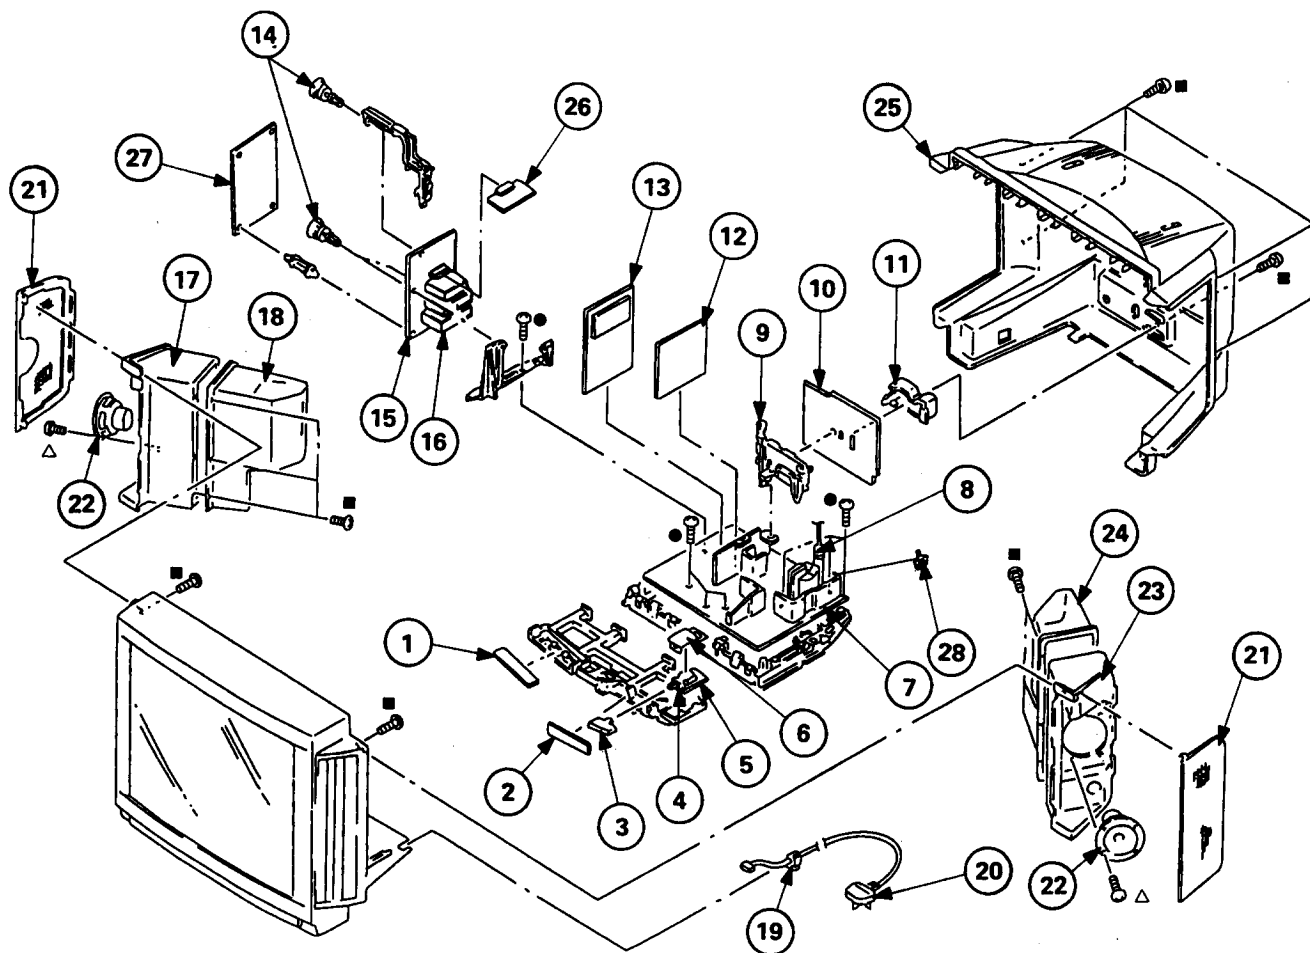


6-4. PICTURE TUBE (KV-A2523E/A2923E)

■ : BVTP4x16 7-685-663-79

△ : BVTP4x12 7-685-661-79

○ : BVTP3x8 7-685-646-79

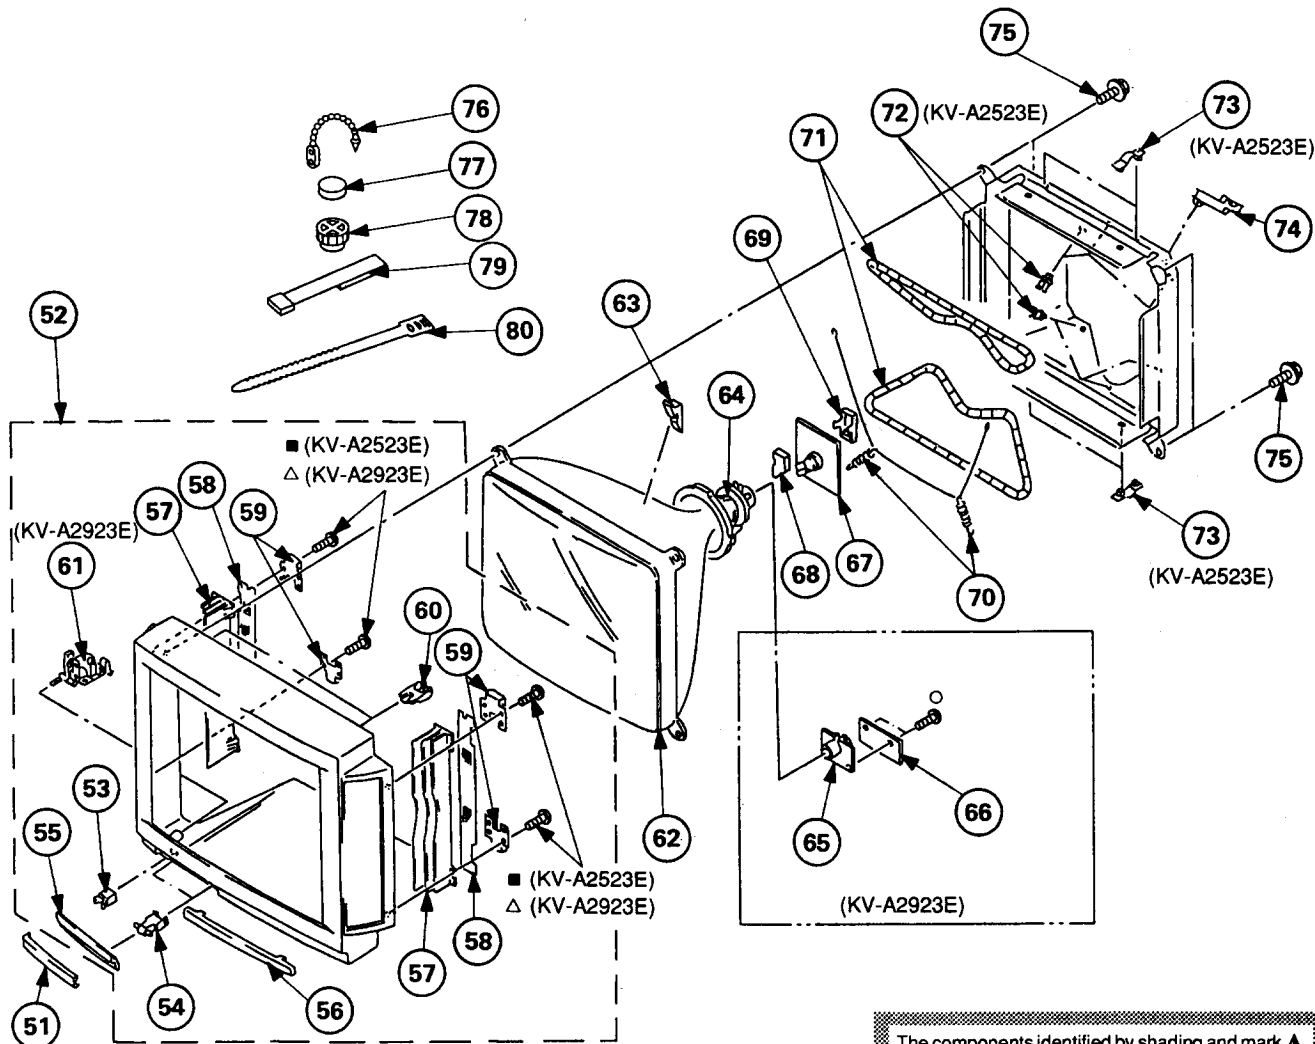

The components identified by shading and mark ▲ are critical for safety.
Replace only with part number specified.